instructions

Kit 1083

TOYOTA Hilux, 2-dr Pickup, 98-04
TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

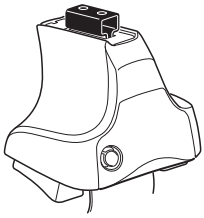

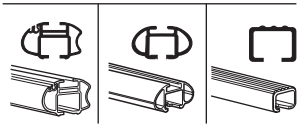

480R
754

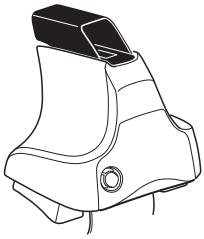



480

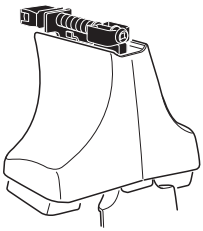

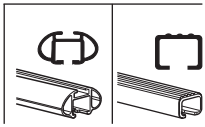

750

ISO 11154-E

THULE SWEDEN

c.20090622.503-1083


TOYOTA Hilux, 2-dr Pickup, 98-04
xx kg
xx lbs
+
3,5 kg / xx lbs
=
Max.
30kg/66 lbs


TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04
xx kg
xx lbs
+
7 kg / 15,4 lbs
=
Max.
60kg/132 lbs

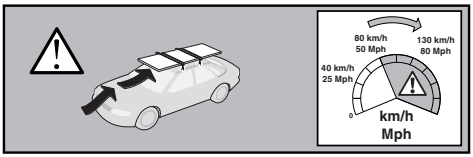
80 km/h
50 Mph
130 km/h
80 Mph
40 km/h
25 Mph
0
km/h
Mph

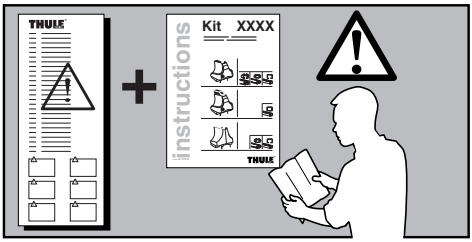
THULE
instructions
Kit XXXX
THULE

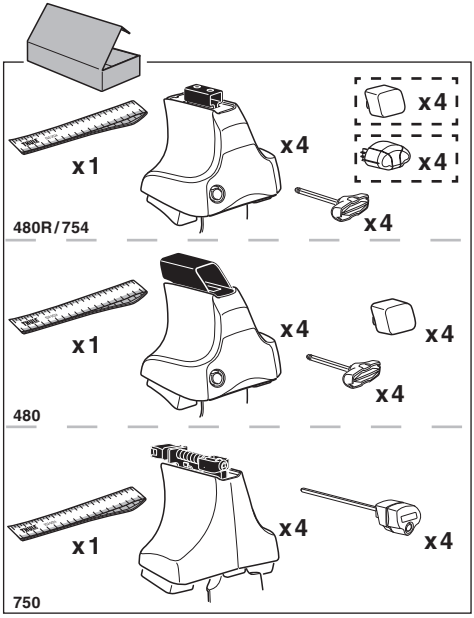
x1
x4
x4
x4
480R/754
x1
x4
x4
x4
480
x1
x4
x4
750

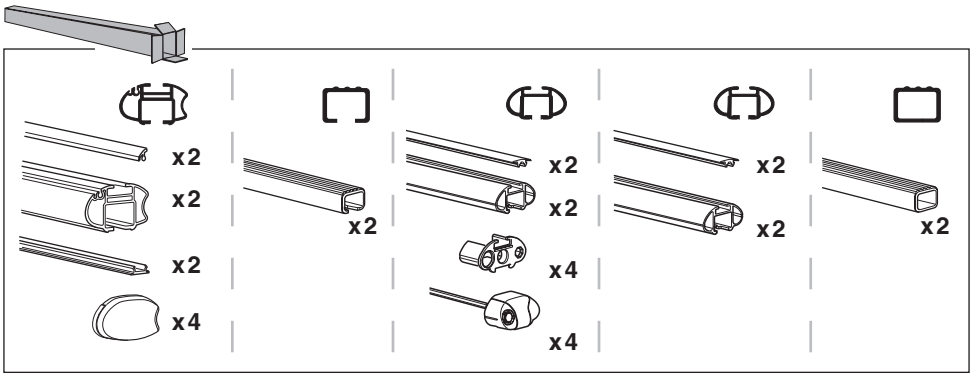
x2
x2
x2
x4
x2
x2
x4
x4
x2
x2
x2

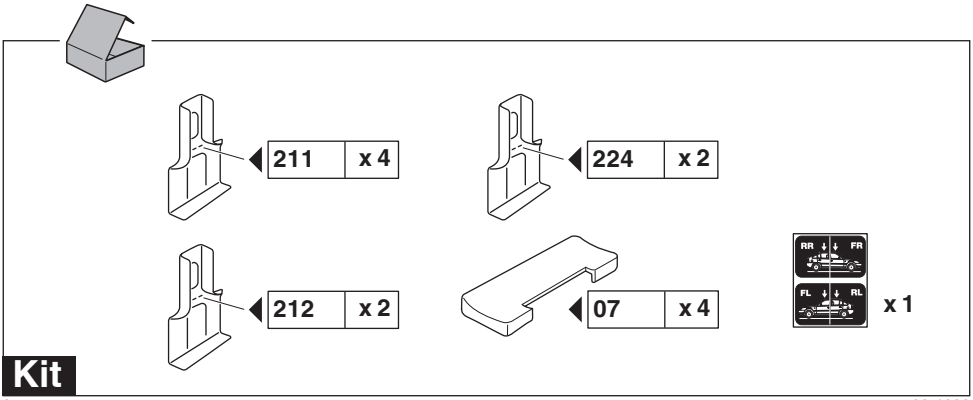
211
x 4
224
x 2
212
x 2
07
x 4
RR
FR
FL
RL
x 1

Kit

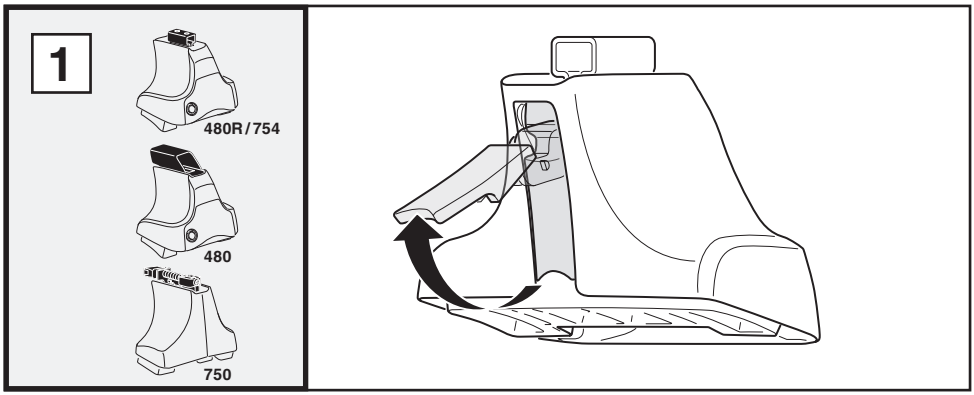
1
480R/754
480
750

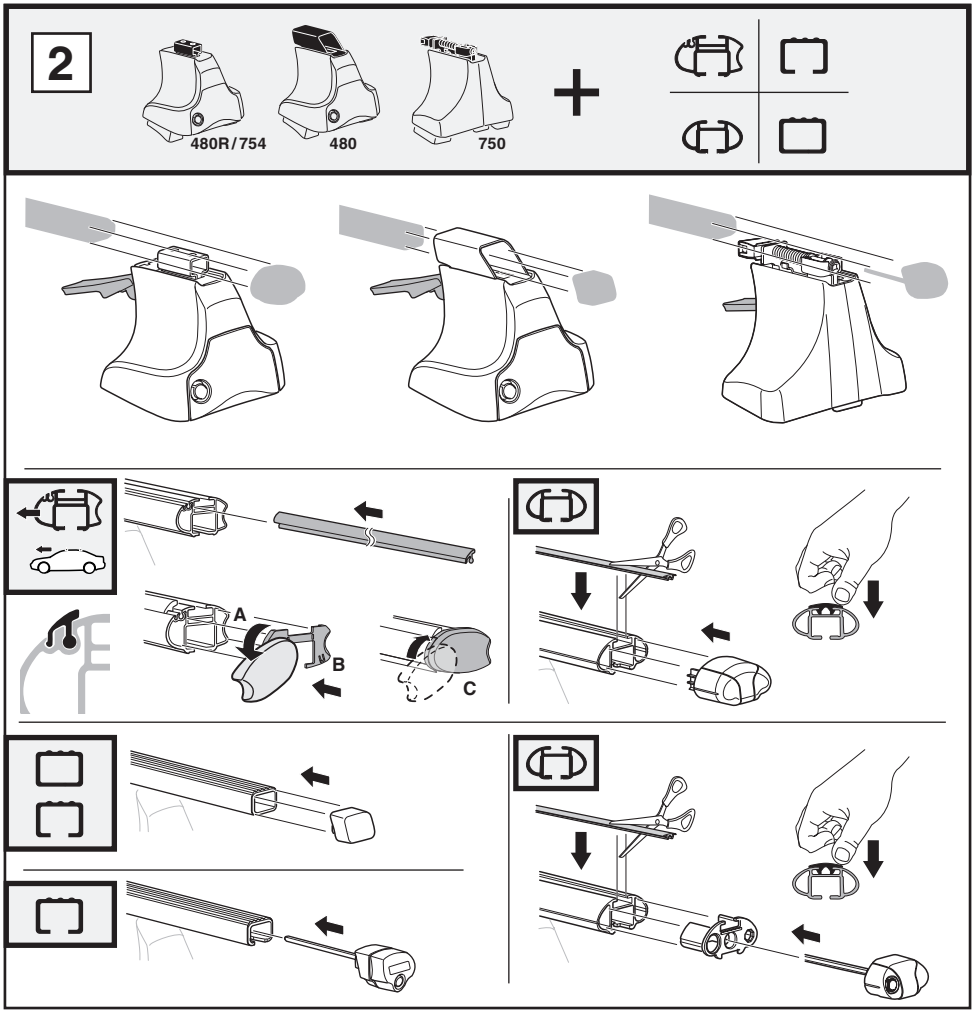
2
480R/754
480
750
A
B
C

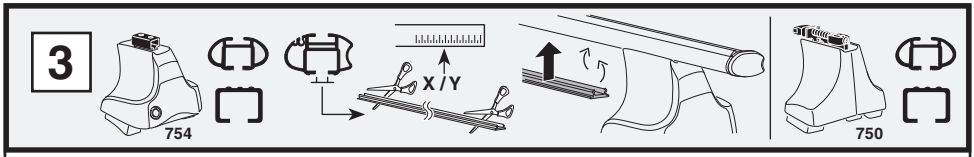

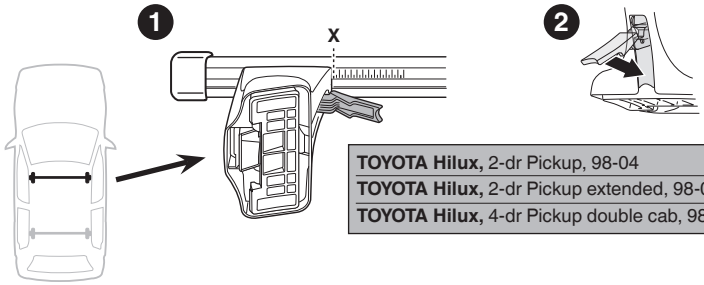

	X
TOYOTA Hilux, 2-dr Pickup, 98-04	**33,5**
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**33,5**
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**33,5**

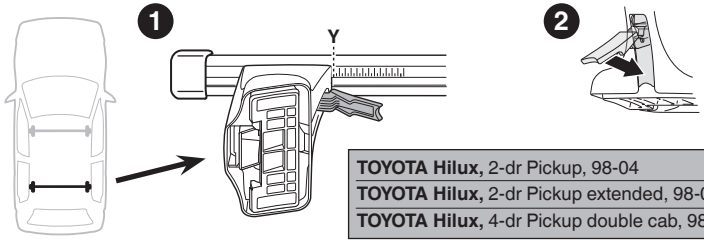

	Y
TOYOTA Hilux, 2-dr Pickup, 98-04	**–**
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**33,5**
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**33,5**

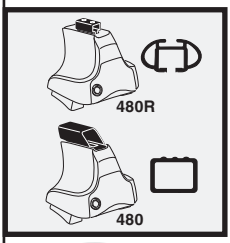

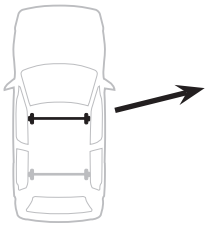

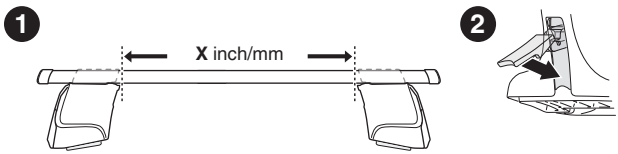

	X inch	X mm
TOYOTA Hilux, 2-dr Pickup, 98-04	**38** $^{7}/_{8}$ ”	**986** mm
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**38** $^{7}/_{8}$ ”	**986** mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**38** $^{7}/_{8}$ ”	**986** mm

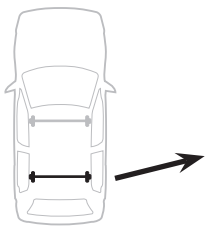

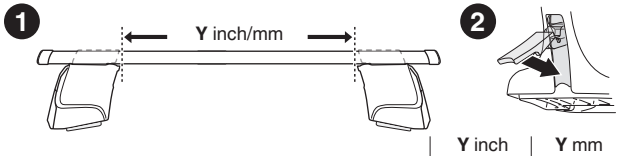

	Y inch	Y mm
TOYOTA Hilux, 2-dr Pickup, 98-04	**–**	**–**
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**38** $^{7}/_{8}$ ”	**986** mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**38** $^{7}/_{8}$ ”	**986** mm

4

TOYOTA Hilux, 2-dr Pickup, 98-04

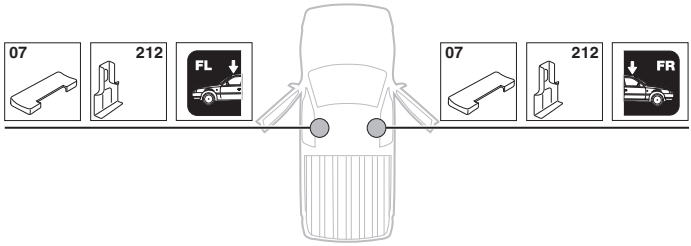

TOYOTA Hilux, 2-dr Pickup extended, 98-04

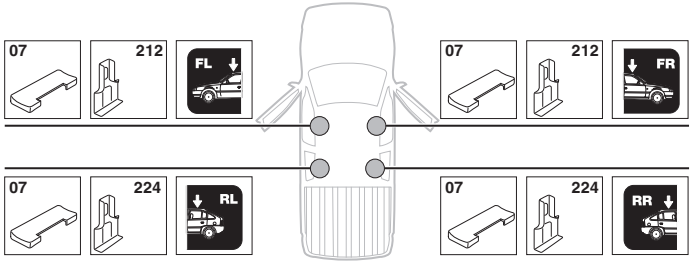

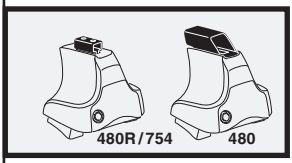

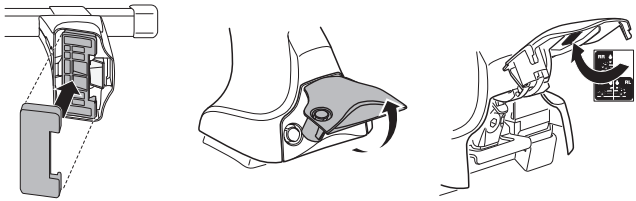

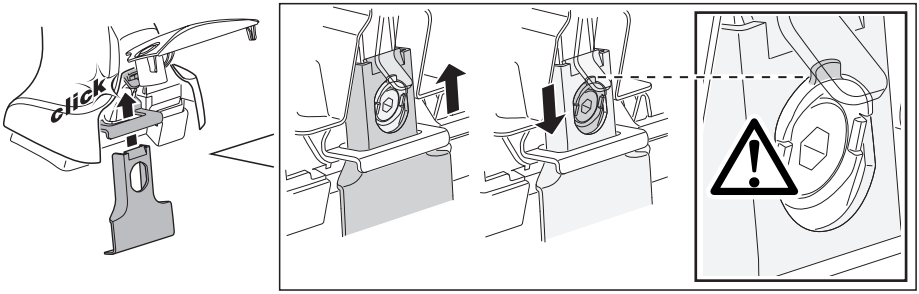

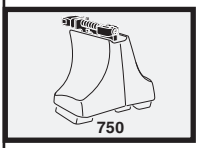

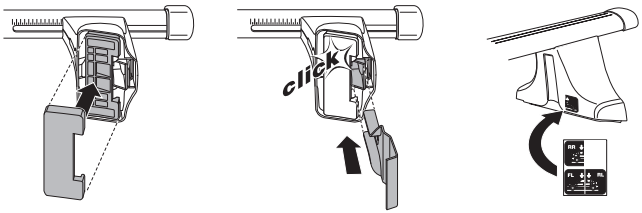

4

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

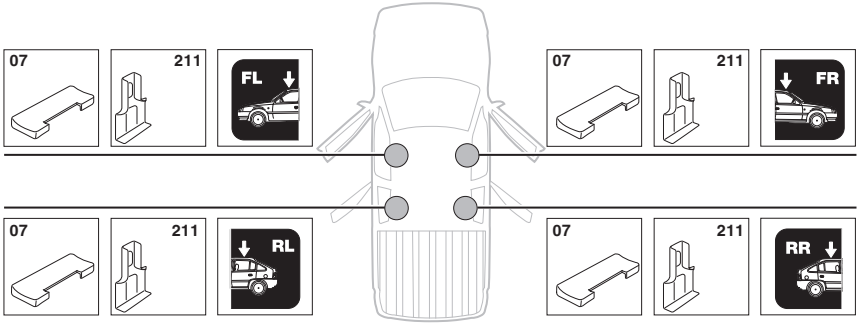

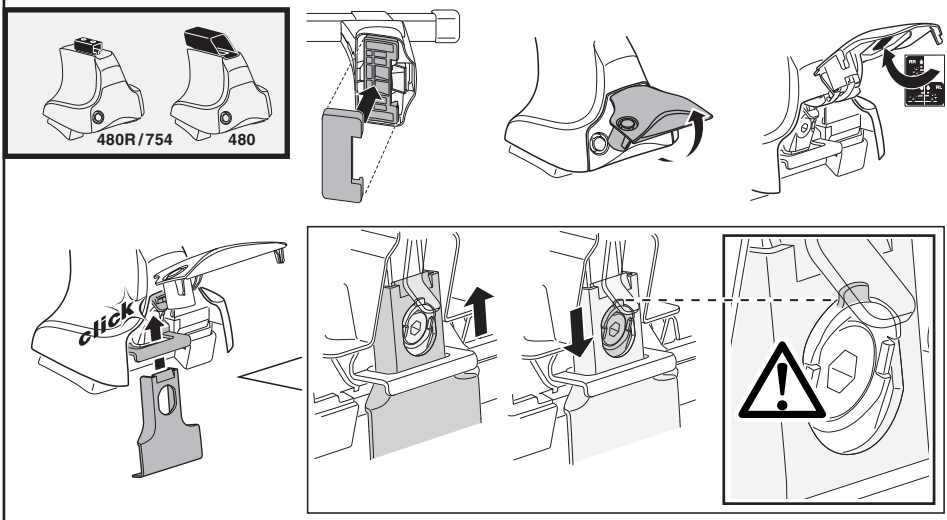

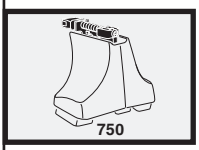

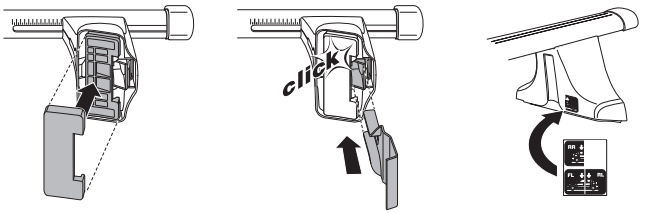

5

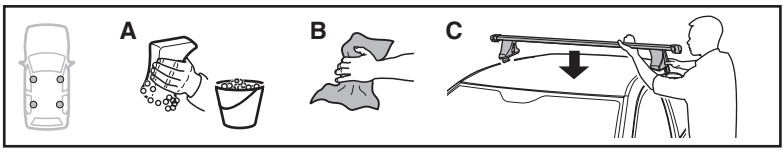

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 2-dr Pickup, 98-04	**230** mm	–	**9**”	–
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**230** mm	**600** mm	**9**”	**23 5/8**”

TOYOTA Hilux, 2-dr Pickup, 98-04

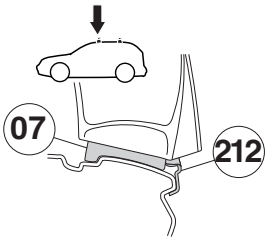

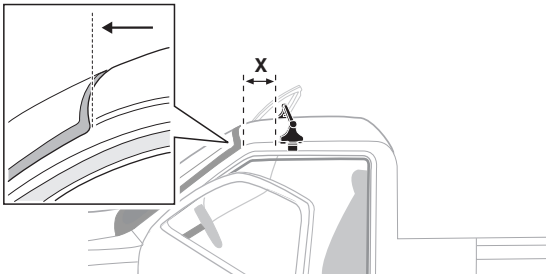

TOYOTA Hilux, 2-dr Pickup extended, 98-04

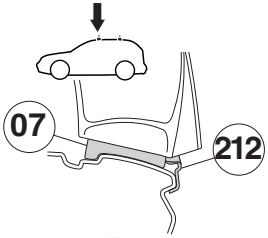

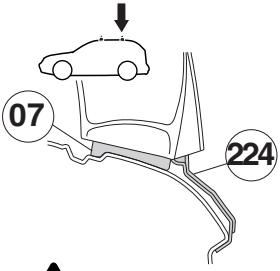

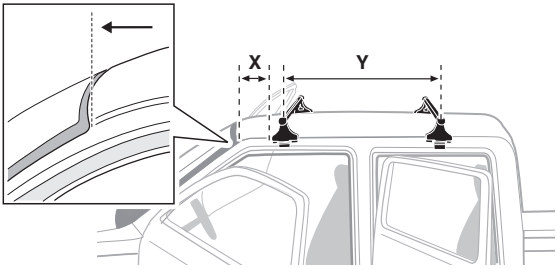

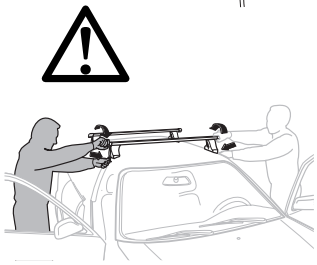

GB/US	Tighten alternately	**CZ**	Pokrętła bagażnika dokręcaj dokręcaj naprzemiennie.
D	Die Schrauben abwechselnd anziehen	**SK**	Dotiahujte striedavo
F	Serrer alternativement chaque côté	**SLO**	Privijajte izmenično.
NL	Afwisselend aan de linker- en de rechterkant aandraaien	**HR**	Naizmjenično zategnite
I	Alternare il serraggio delle viti	**HU**	Egymástól függetlenül szorítandó
E	Serrare alternativamente	**GR**	Σφίγγετε εναλάξ
PT	Aperte alternadamente	**TR**	Dönüşümlü sıkın
S	Dra åt växelvis	**中文**	交替拧紧
FIN	Kierrä vuorotellen	**한국어**	번갈아 가며 조이십시오.
EST	Pinguldage vaheldumisi	**日本語**	交互に締め付けてください。
LAT	Pievelciet pamīšus	**ไทย**	ขันในแบบสลับ
LIT	Užsukinėkite pakaitomis		
PL	Śruby dokręcaj naprzemiennie		
RU	Затягивайте попеременно		

5

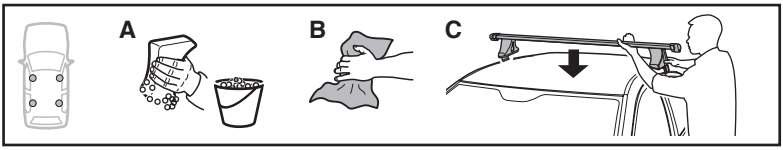

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**300** mm	**700** mm	**11 3/4”**	**27 1/2”**

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

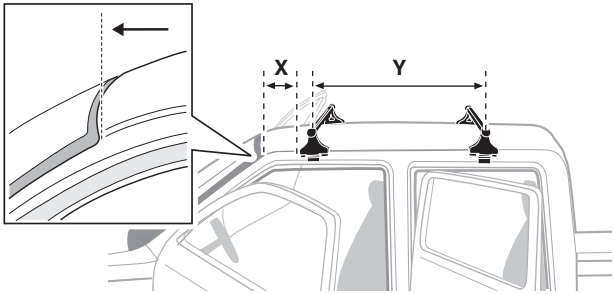

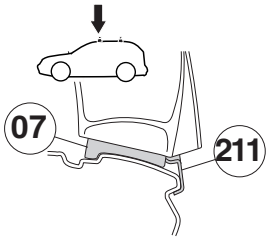

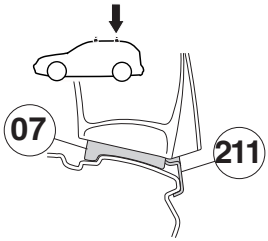

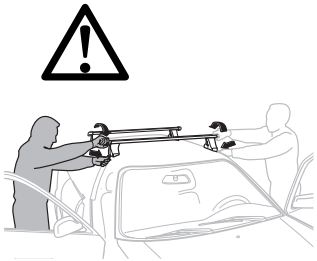

GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Serrare alternativamente
PT	Aperte alternadamente
S	Dra åt växelvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pievelciet pamīšus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно
CZ	Pokrętła bagażnika dokręcaj dokręcaj naprzemiennie.
SK	Doťahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjenično zategnite
HU	Egymástól függetlenül szorítandó
GR	Σφίγγετε εναλάξ
TR	Dönüşümlü sıkın
中文	交替拧紧
한국어	번갈아 가며 조이십시오.
日本語	交互に締め付けてください。
ไทย	ขันในแบบสลับ

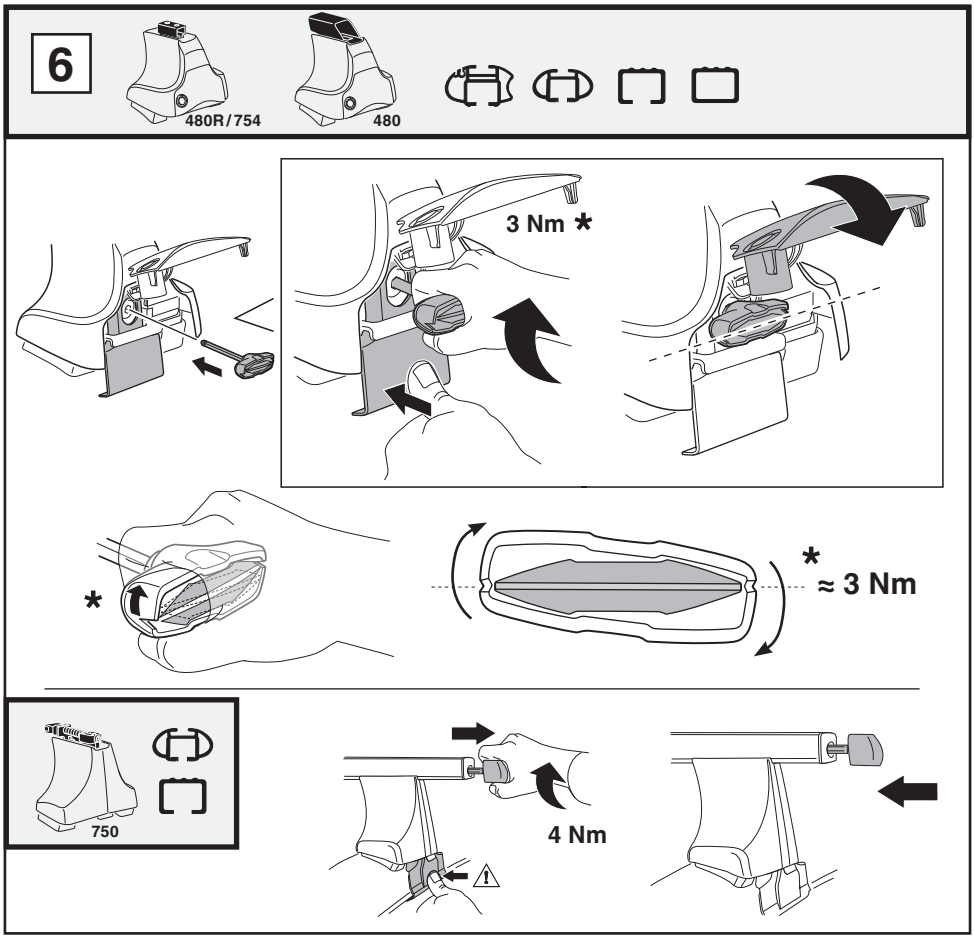
6
480R/754
480
3 Nm *
*
* ≈ 3 Nm
750
4 Nm

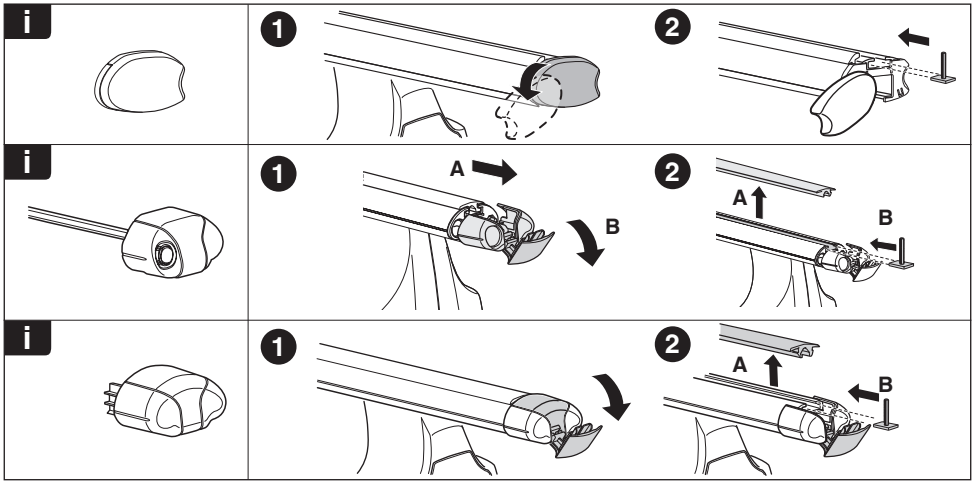
i
1
2
A
B

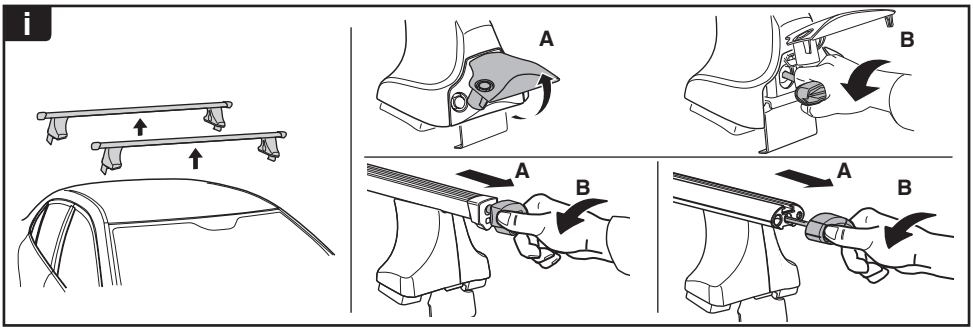

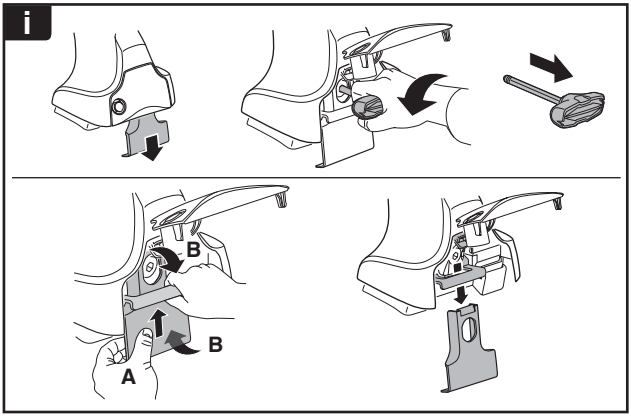

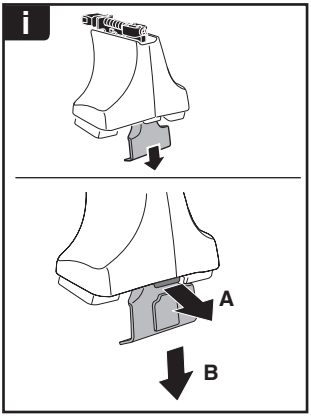

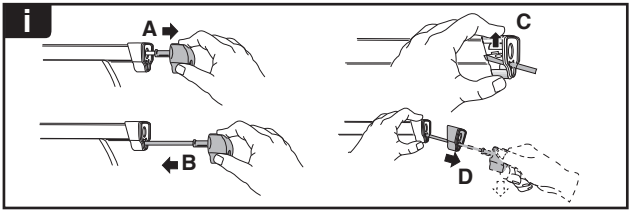

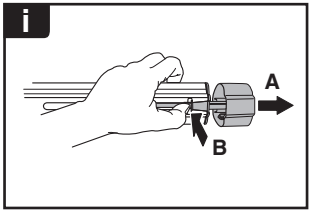

THULE SWEDEN

ONE KEY SYSTEM

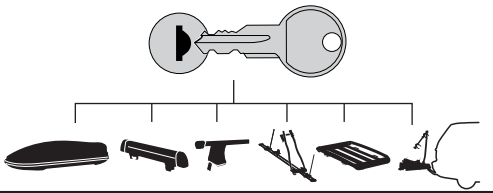

	544	(x4)
	596	(x6)
	588	(x8)
NA	**510**	(x10)
EUR ASIA	**452**	(x12)

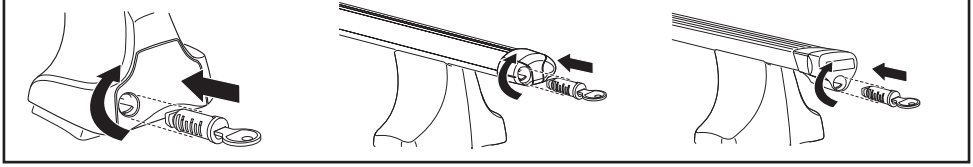

ww Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA
info@thule.com
customer.service@thule.com
www.thule.com

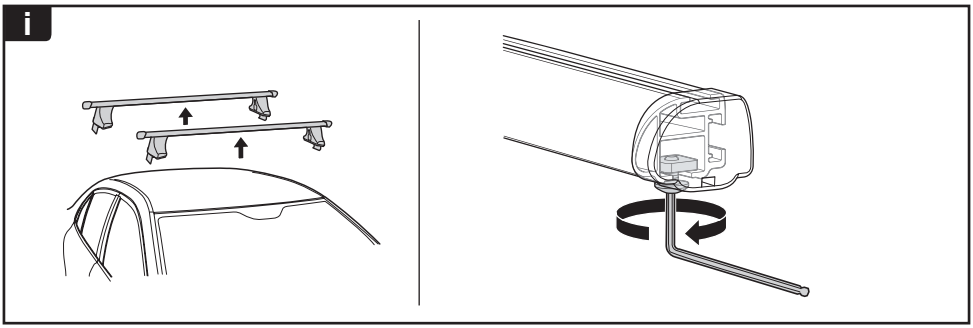

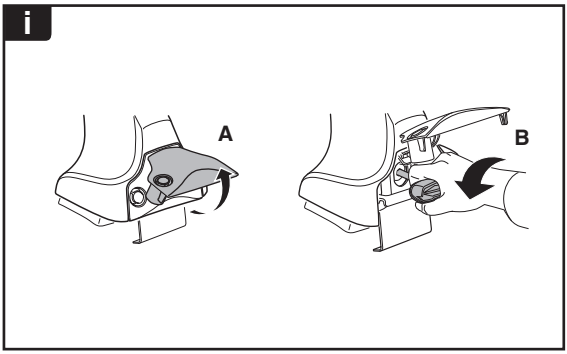

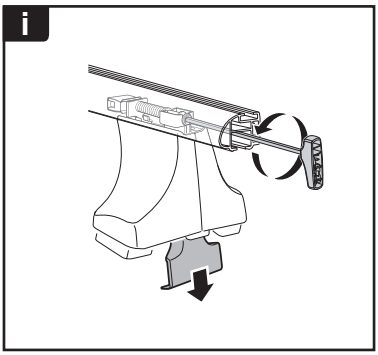

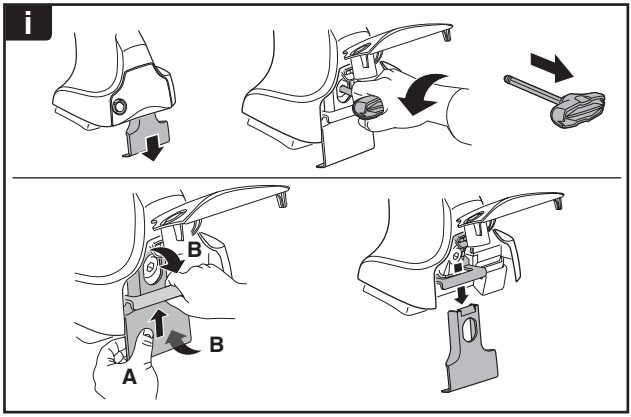

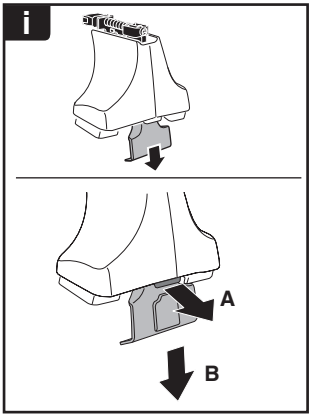

ww Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thuleprofessional.com

503-1083

7

480R / 754

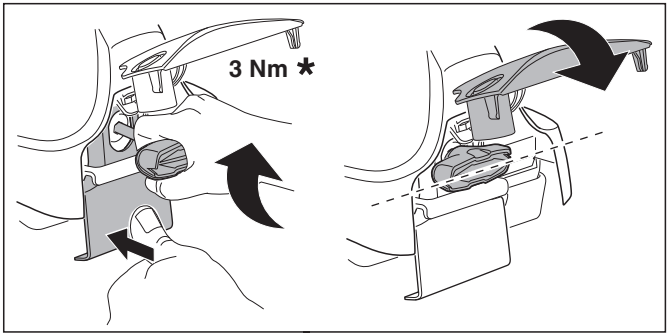

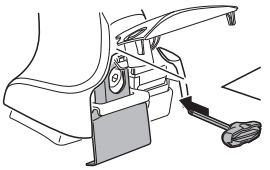

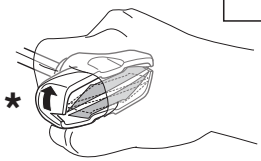

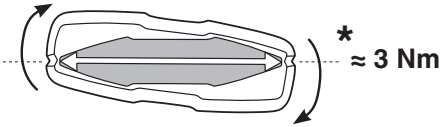

750

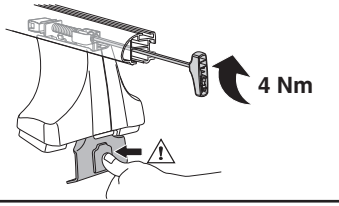

8

480R / 754 750



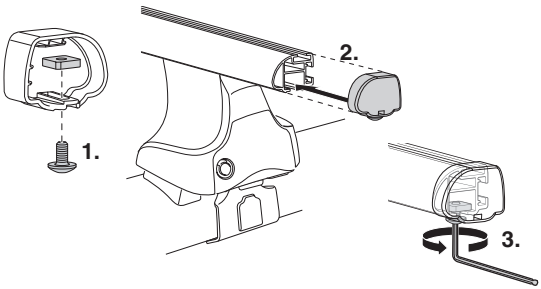

9

480R / 754 750



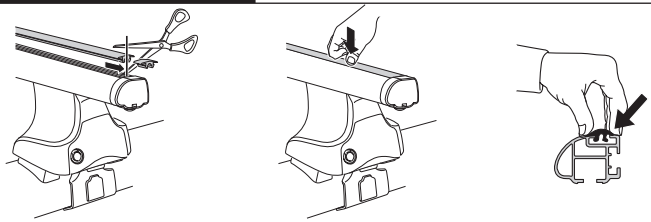

6

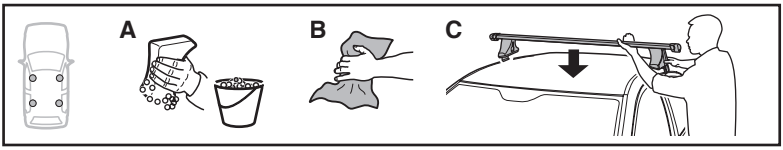

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**300** mm	**700** mm	**11** 3/4 ”	**27** 1/2 ”

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

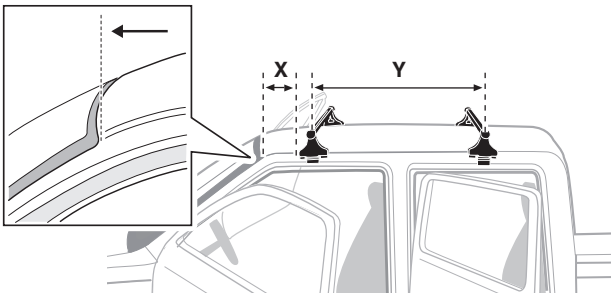

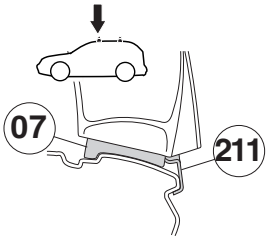

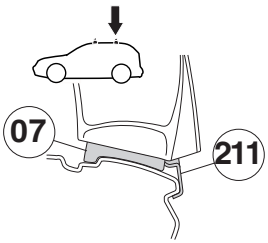

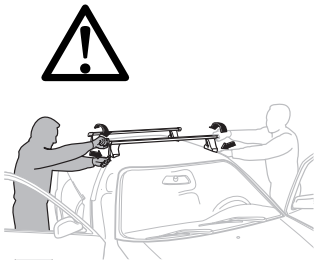

GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Serrare alternativamente
PT	Aperte alternadamente
S	Dra åt växelvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pievelciet pamīšus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно
CZ	Pokrętła bagażnika dokręcaj dokręcaj naprzemiennie.
SK	Dotahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjenično zategnite
HU	Egymástól függetlenül szorítandó
GR	Σφίγγετε εναλάξ
TR	Dönüşümlü sıkın
中文	交替拧紧
한국어	번갈아 가며 조이십시오.
日本語	交互に締め付けてください。
ไทย	ขันในแบบสลับ

6

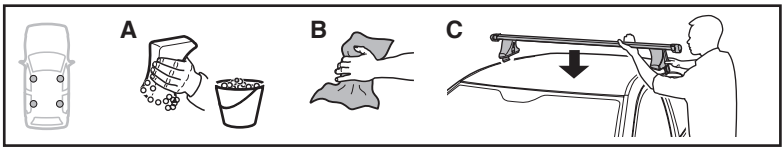

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 2-dr Pickup, 98-04	**230** mm	–	**9**”	–
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**230** mm	**600** mm	**9**”	**23 5/8**”

TOYOTA Hilux, 2-dr Pickup, 98-04

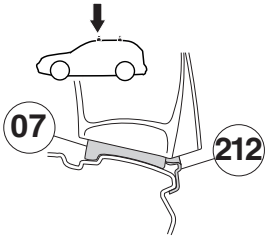

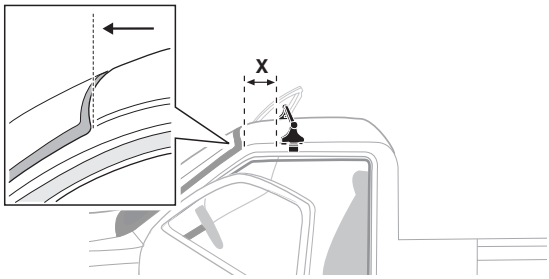

TOYOTA Hilux, 2-dr Pickup extended, 98-04

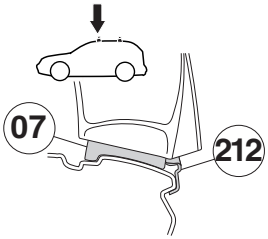

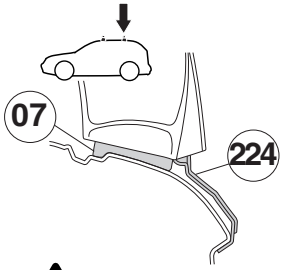

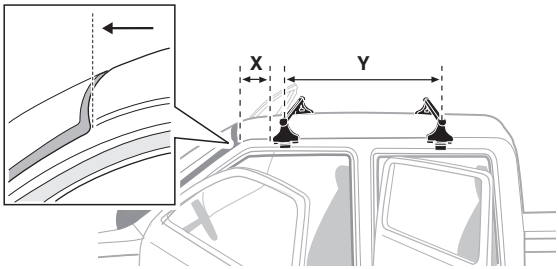

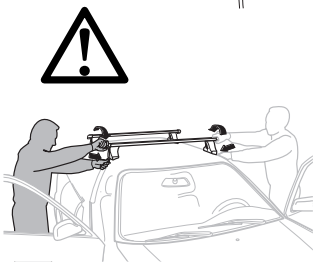

GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Serrare alternativamente
PT	Aperte alternadamente
S	Dra åt växelvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pievelciet pamīšus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно
CZ	Pokrętla bagażnika dokręcaj dokręcaj naprzemiennie.
SK	Doťahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjenično zategnite
HU	Egymástól függetlenül szorítandó
GR	Σφίγγετε εναλάξ
TR	Dönüşümlü sıkın
中文	交替拧紧
한국어	번갈아 가며 조이십시오.
日本語	交互に締め付けてください。
ไทย	ขันในแบบสลับ

5

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

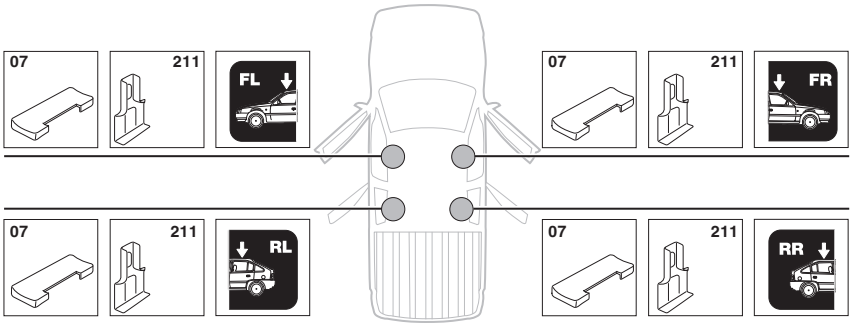

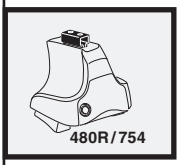

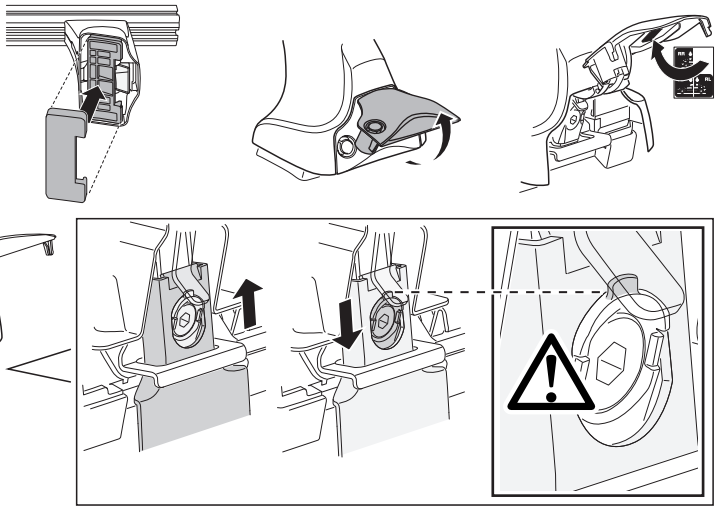

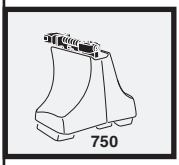

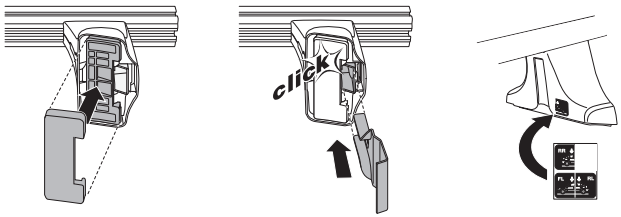

5

TOYOTA Hilux, 2-dr Pickup, 98-04

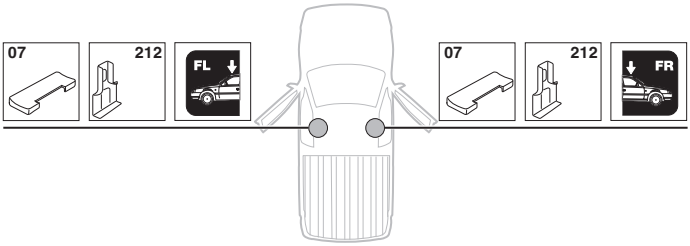

TOYOTA Hilux, 2-dr Pickup extended, 98-04

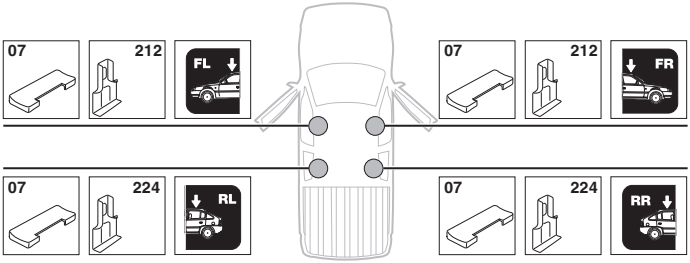

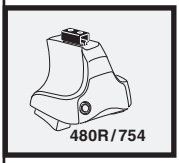

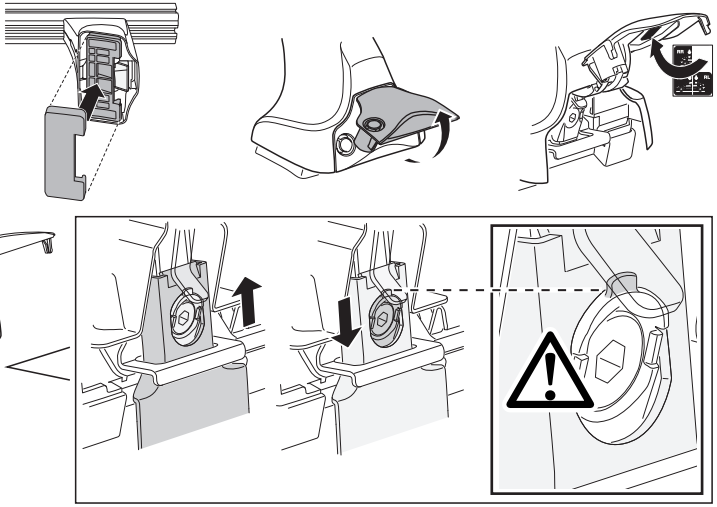

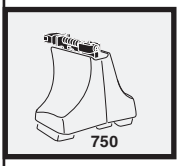

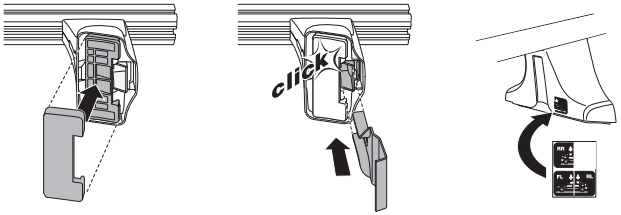

3

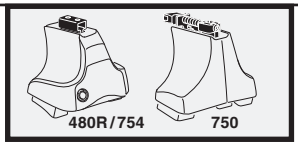



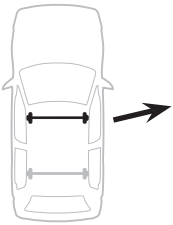

1

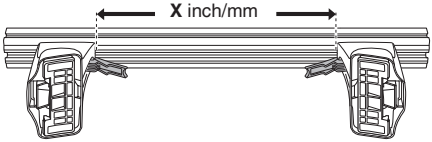

2

	X inch	X mm
TOYOTA Hilux, 2-dr Pickup, 98-04	**38** $^{7}/_{8}$"	**986** mm
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**38** $^{7}/_{8}$"	**986** mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**38** $^{7}/_{8}$"	**986** mm

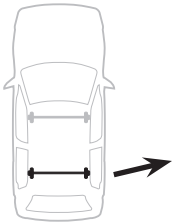

1

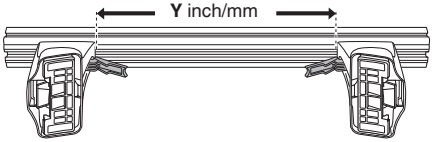

2

	Y inch	Y mm
TOYOTA Hilux, 2-dr Pickup, 98-04	–	–
TOYOTA Hilux, 2-dr Pickup extended, 98-04	**38** $^{7}/_{8}$"	**986** mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	**38** $^{7}/_{8}$"	**986** mm

4



x2 16mm

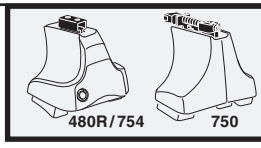

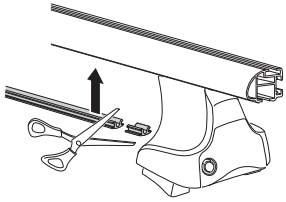

1

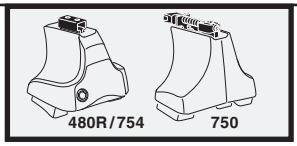

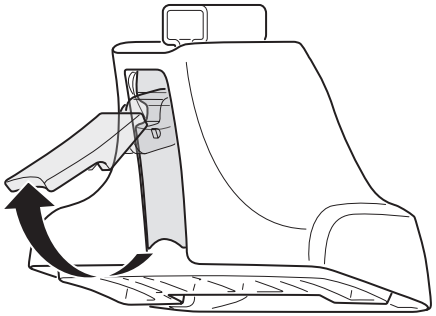

2

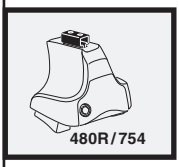

+

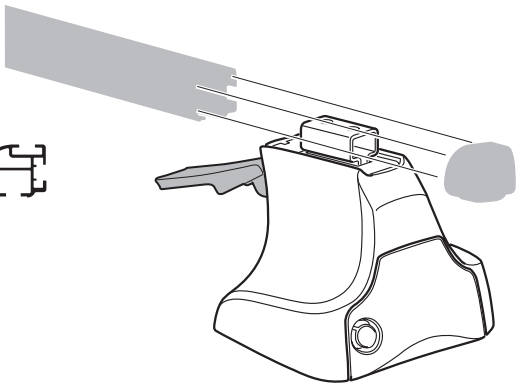

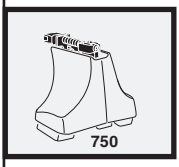

+

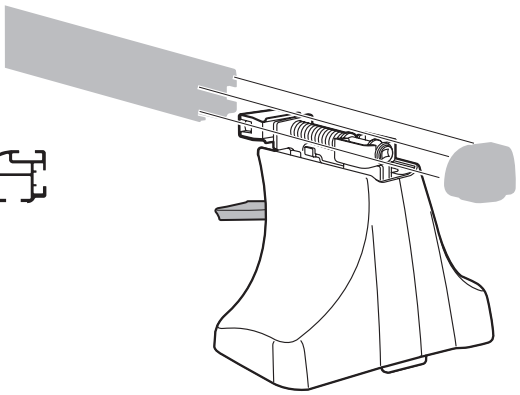

TOYOTA Hilux, 2-dr Pickup, 98-04

xx kg
xx lbs + 3,5 kg / xx lbs = **Max. 30**kg/**66** lbs

TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

xx kg
xx lbs + 7 kg / 15,4 lbs = **Max. 60**kg/**132** lbs

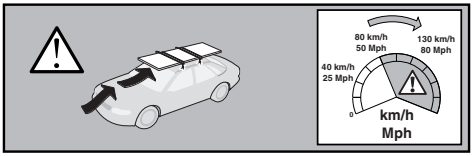

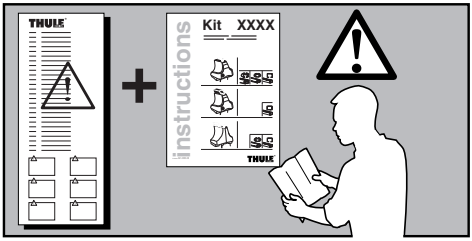

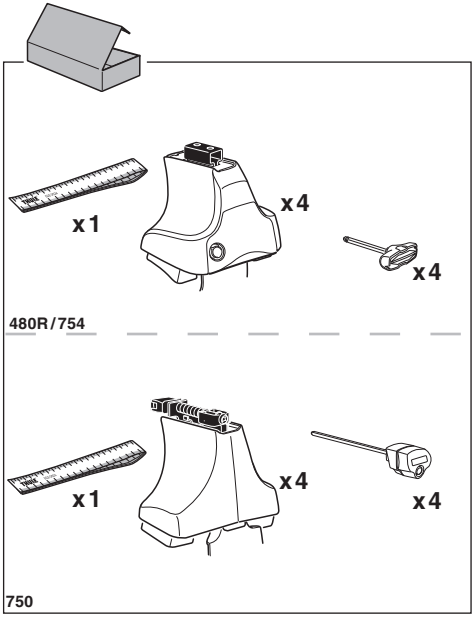

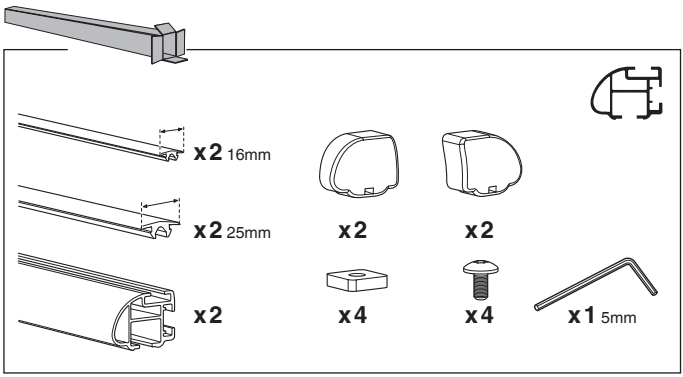

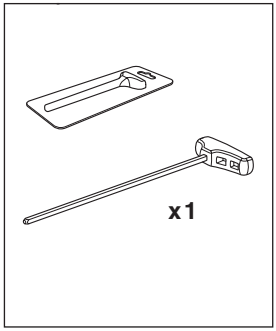

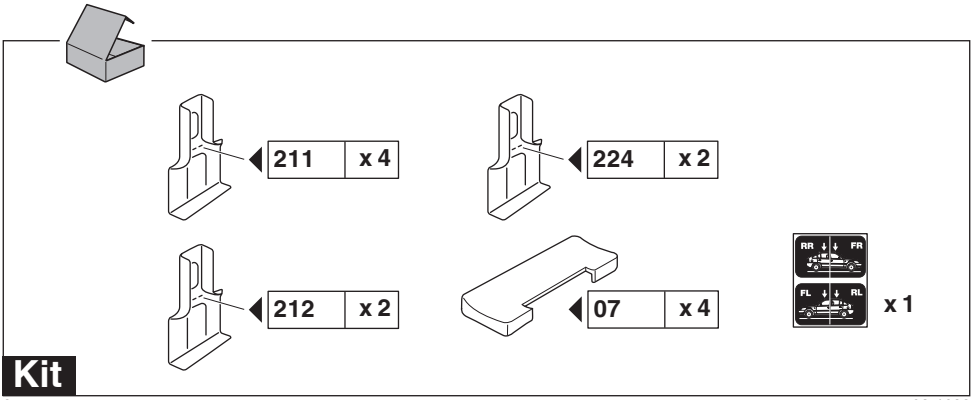

Kit

instructions

Kit 1083

TOYOTA Hilux, 2-dr Pickup, 98-04
TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

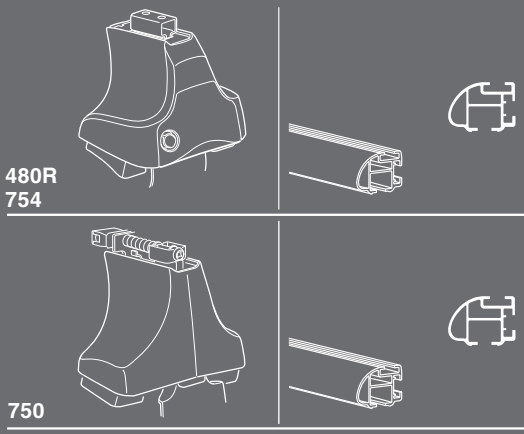

ISO 11154-E

THULE® SWEDEN
PROFESSIONAL

c.20090511.503-1083