


MOUNTAIN TOP COVER INSTALLATION GUIDE

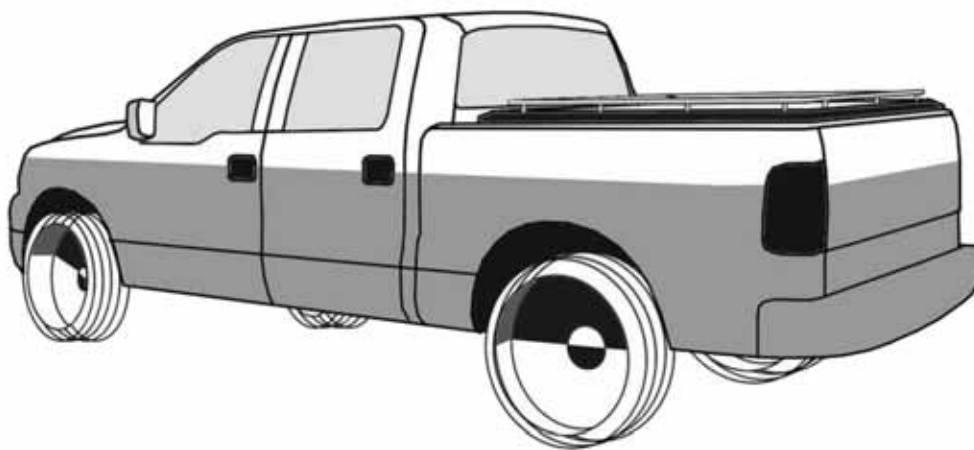


NISSAN (D)

**MOUNTAIN
INDUSTRIES TOP**

MTI-number 882 135	Issue 09	Date 27/04/2010	NISSAN MT NI 8000/1 D	Page 1/8
Pedersholmparken 10	3600 Frederikssund	Denmark	ph: +45 4810 2950 Fax +45 4810 2960	www.mountaintop.dk

Step 1. Hardware components & descriptions

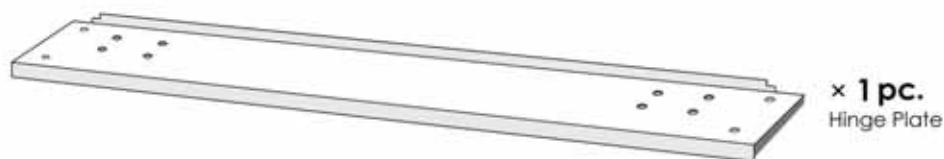

× 1 pc.
Hinge Plate



× 2 pcs.
Key
Attached to Cover



× 4 pcs.
Hinge Part



× 4 pcs.
Rubber packing



× 2 pcs.
Flat axle



× 8 pcs.
Bolt M8×12



× 8 pcs.
Washer M8



× 6 pcs.
Button head screw M6



× 6 pcs.
Rubber washer




× 10 pcs.
Washer M6



× 10 pcs.
Lock nut M6



× 1 pcs.
Fixture for
hinge part

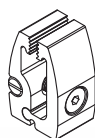

× 10 pcs.
Clamp



× 2 pcs. (L/R)
Side rail track (Front)



× 2 pcs.
Gas prop connector



× 2 pcs. (L/R)
Side rail track (Back)



× 2 pcs.
Gas prop pin



× 2 pcs.
Striker lock plate




× 2 pcs. Gas prop



× 6 rolls
Textile packing, 10 mm

Step 2. Tools required for installation

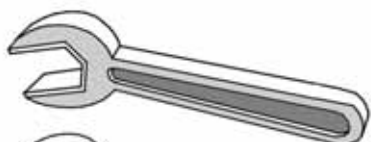

Wrench, 9/16"




Wrench, 13 mm



Wrench, 10 mm



Socket cap wrench, SW6

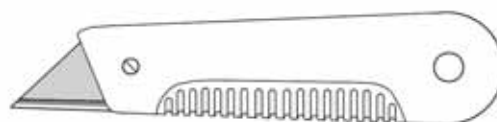

Utility knife



Screw driver

MTI-number
882 135

Issue
09

Date
27/04/2010

NISSAN
MT NI 8000/1 D

Page
2/8

Pedersholmparken 10

3600 Frederikssund

Denmark

ph: +45 4810 2950


Fax +45 4810 2960

www.mountaintop.dk


© Copyright, Mountain Top Industries ApS

Step 3. Rail cap assembly

3.1

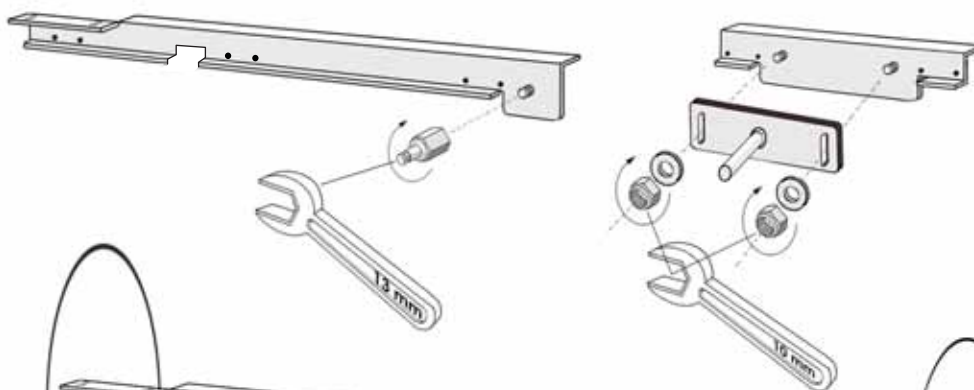


3.2

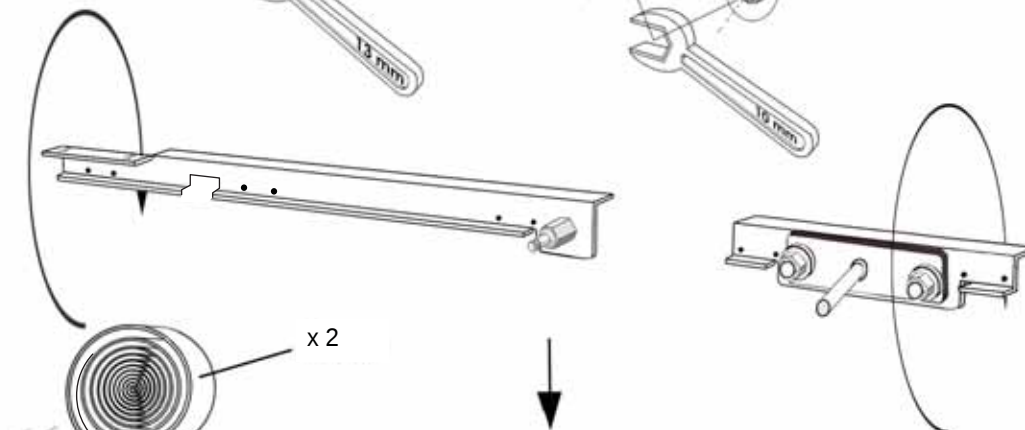

3.3



3.4

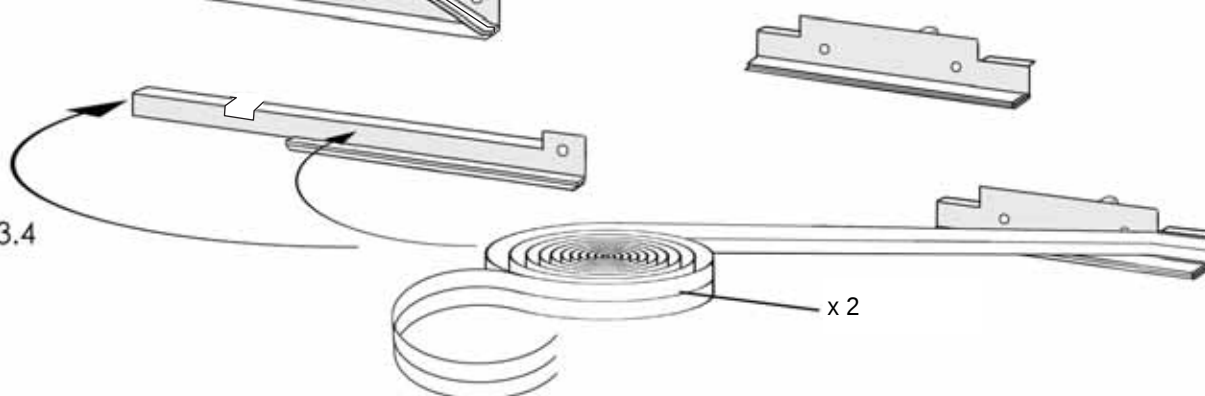


Step 4. Hinge plate assembly


4.1



4.2

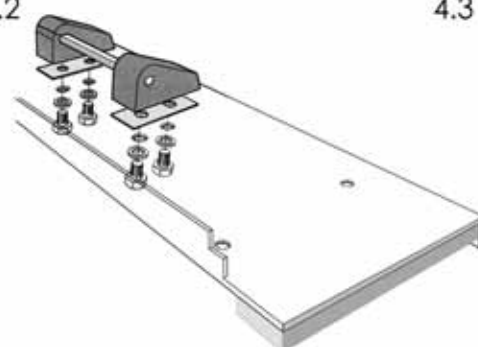


4.3

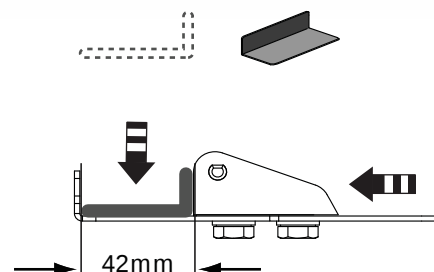


Step 5. Rail cap mounting

5.1

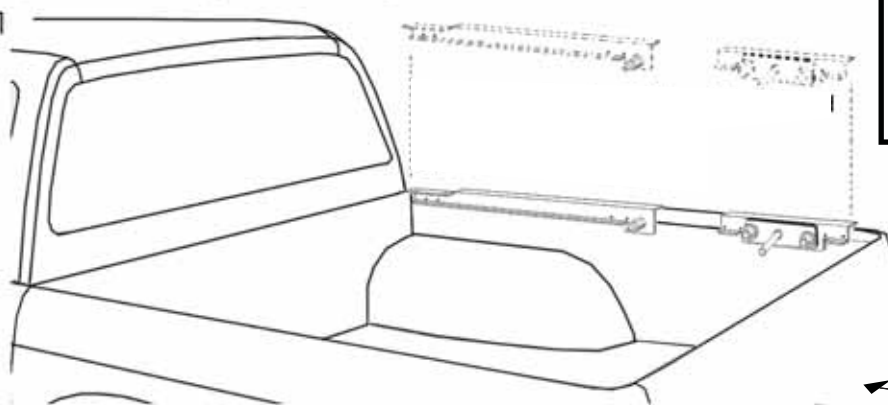


**NOTE!! PLEASE USE
INSTALLATIONGUIDE
(extra) for additional
information, step 1-3**

5.2

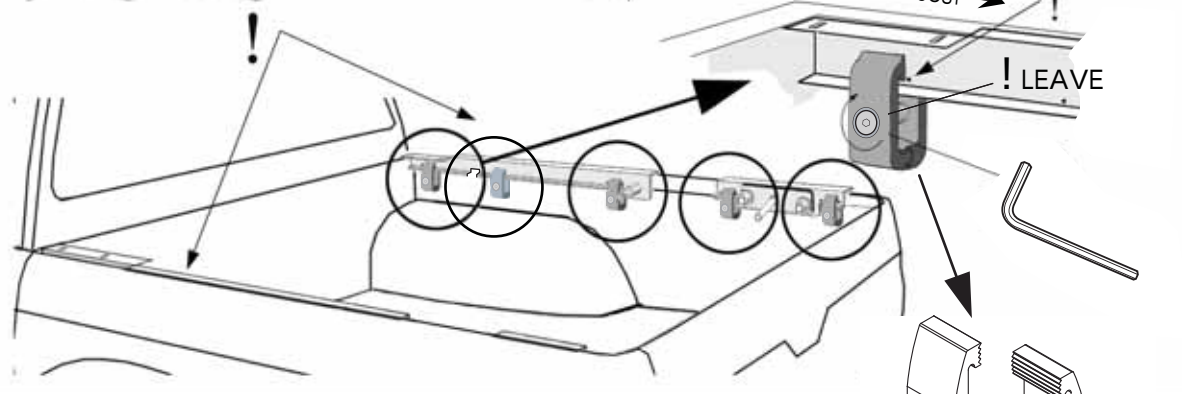


Step 6. Hinge plate mounting

6.1

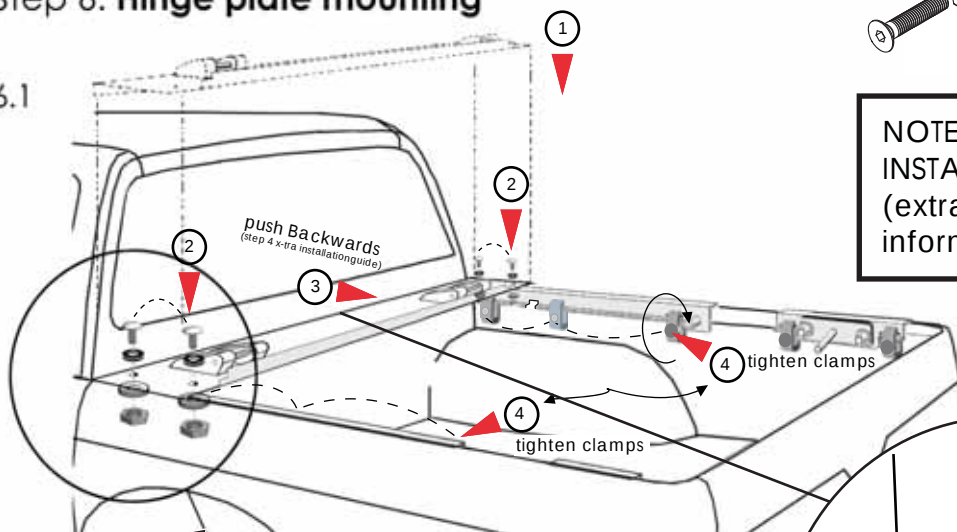


**NOTE!! PLEASE USE
INSTALLATIONGUIDE
(extra) for additional
information, step 4-6**

6.2

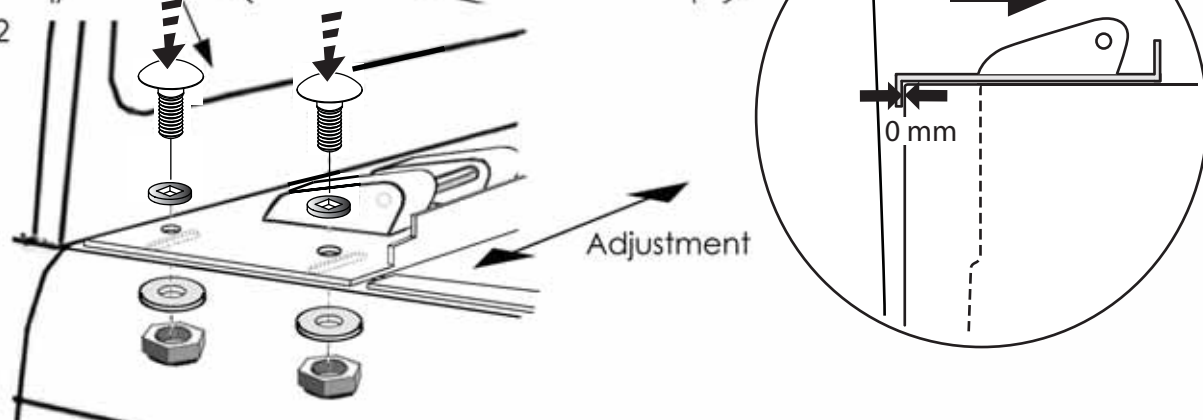

Step 7. Mountain Top Cover mounting


7.1

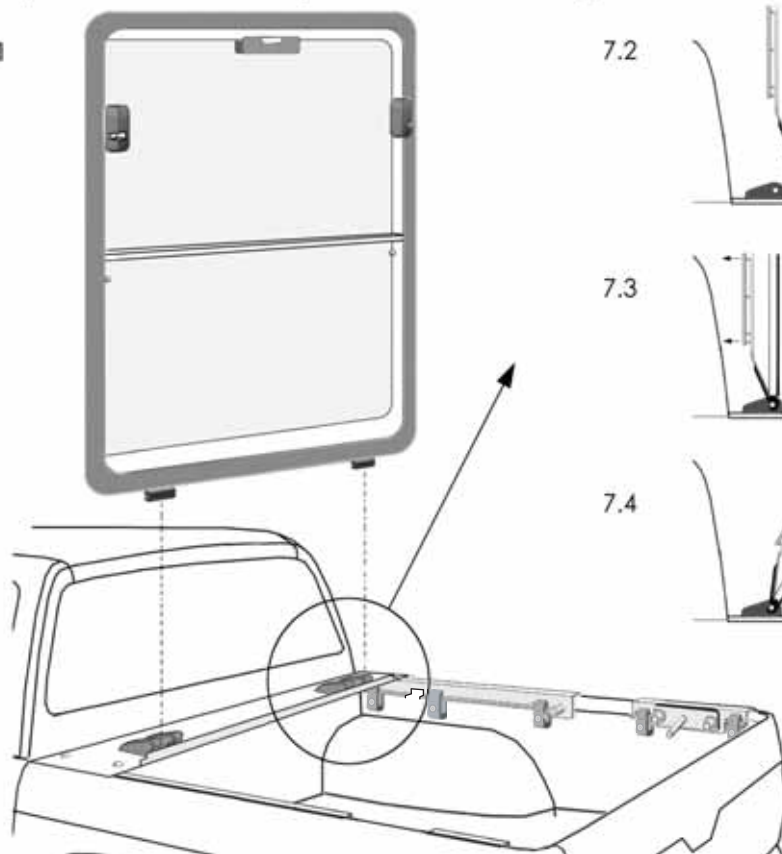


7.2



7.3

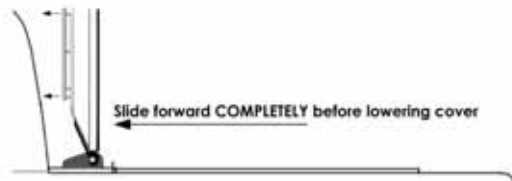


7.4

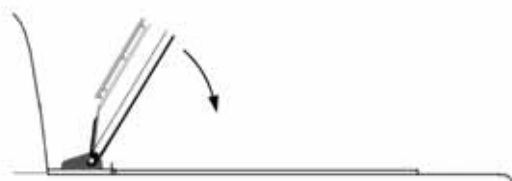


Step 8. Gas prop mounting

8.1

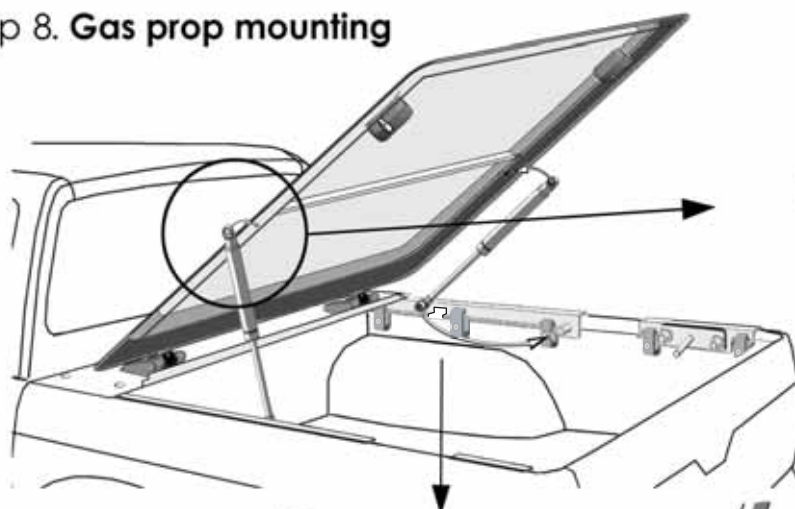


8.2

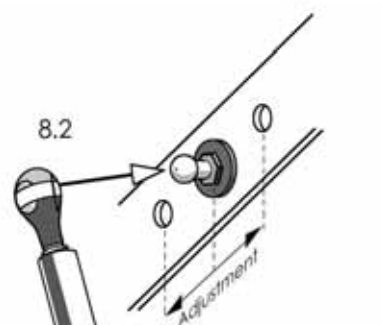


Before disconnecting the gas prop, remove the lock clip with a screw driver.


8.3

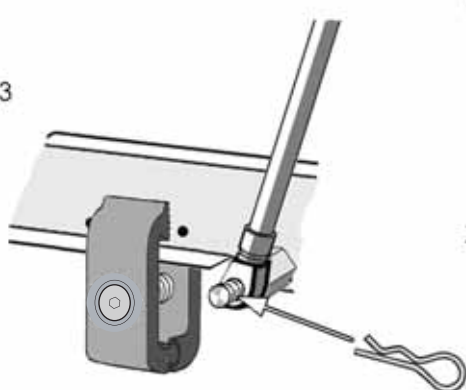


8.4

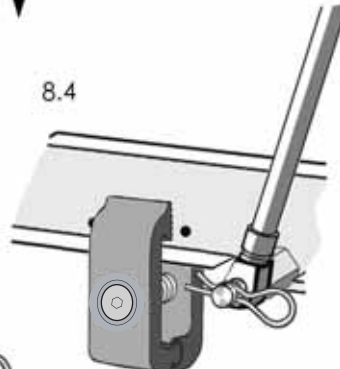


Step 9. Sealing adjustment

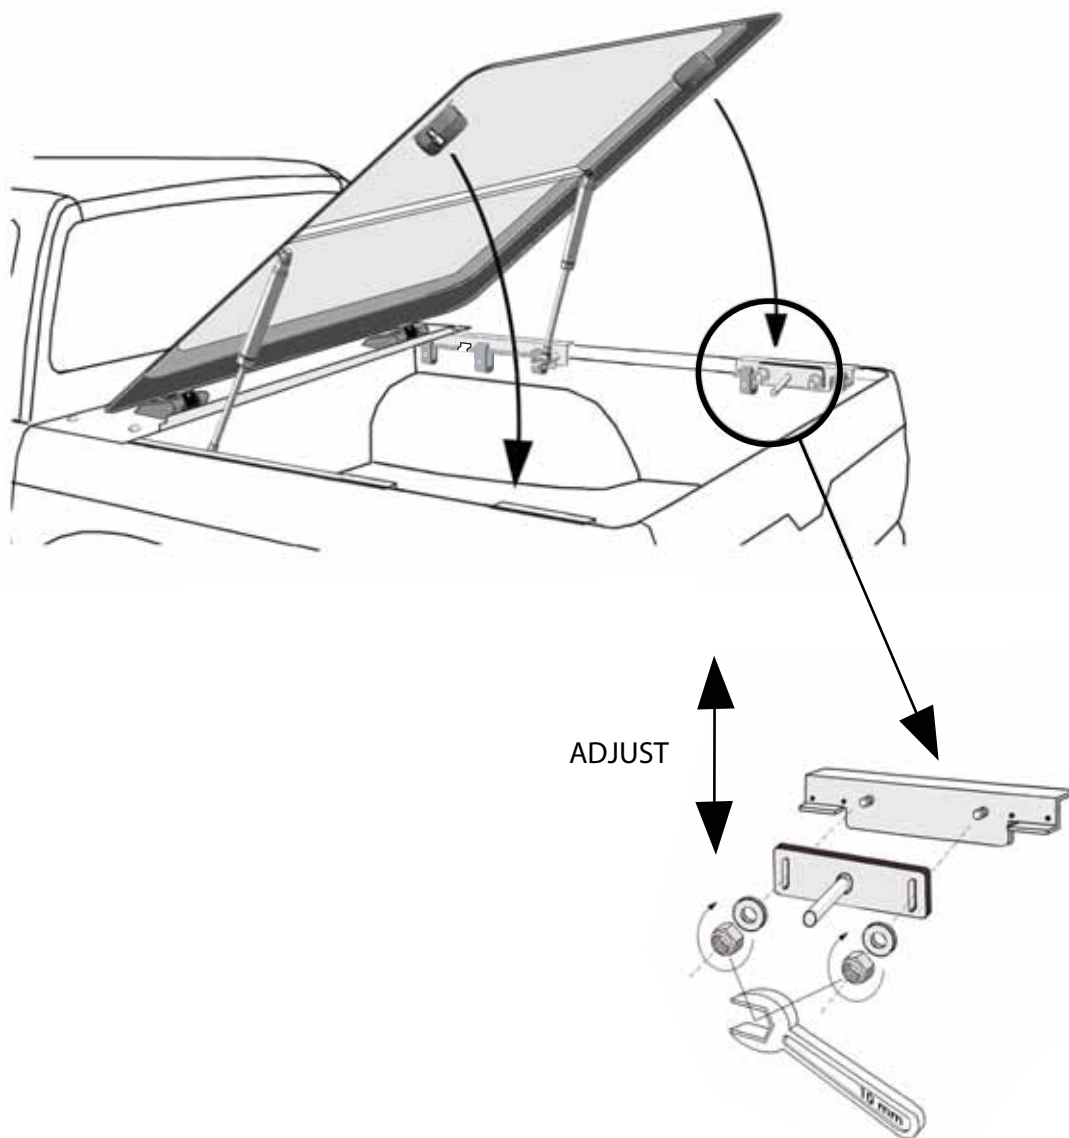


Installation guide (extra)(D)

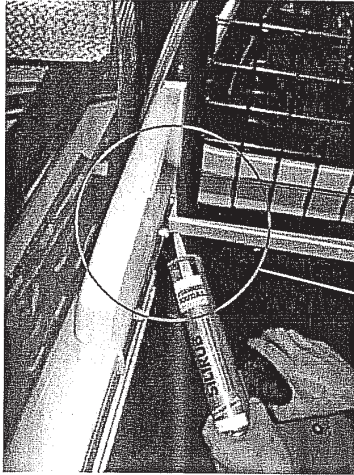

STEP 1

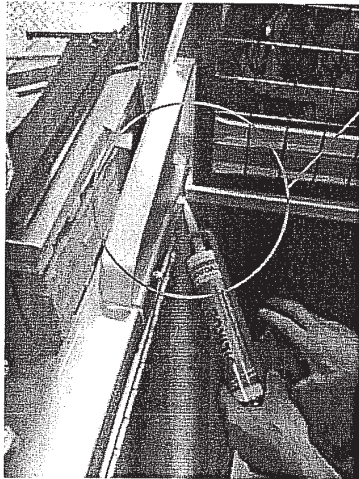

STEP 2

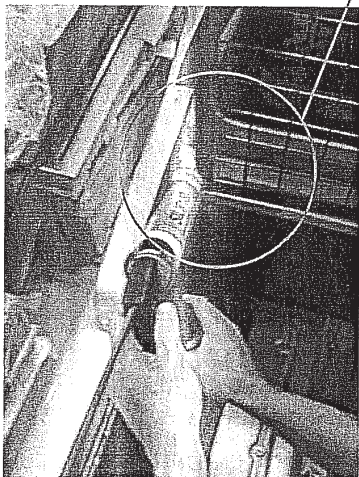

STEP 3


Before installation add silicone in the corner between bulkhead and side of bed

Installation guide (extra) (D)




Press forward

STEP 4

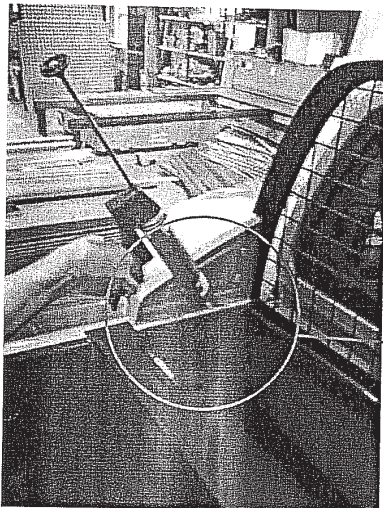

STEP 5

Add silicone between side of bed and hinge plate

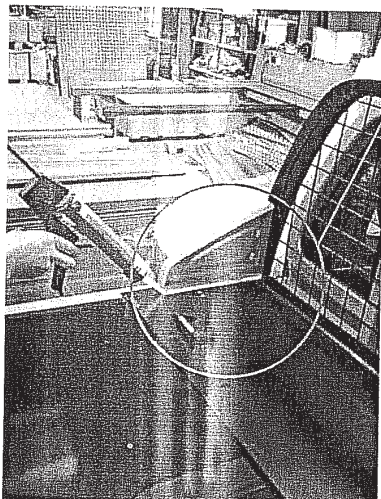

STEP 6

MTI-number
882 135

Issue
09

Date
27/04/2010

NISSAN
MT NI 8000/1 D

Page
8/8

Pedersholmparken 10

3600 Frederikssund

Denmark

ph: +45 4810 2950

Fax +45 4810 2960

www.mountaintop.dk