


# INSTALLATION SHEET

## SOLID FOLD


**extang**  
AMERICA'S BEST  
SELLING TONNEAUS

The SOLIDFOLD top comes fully assembled. Note any damaged or missing components before installing.

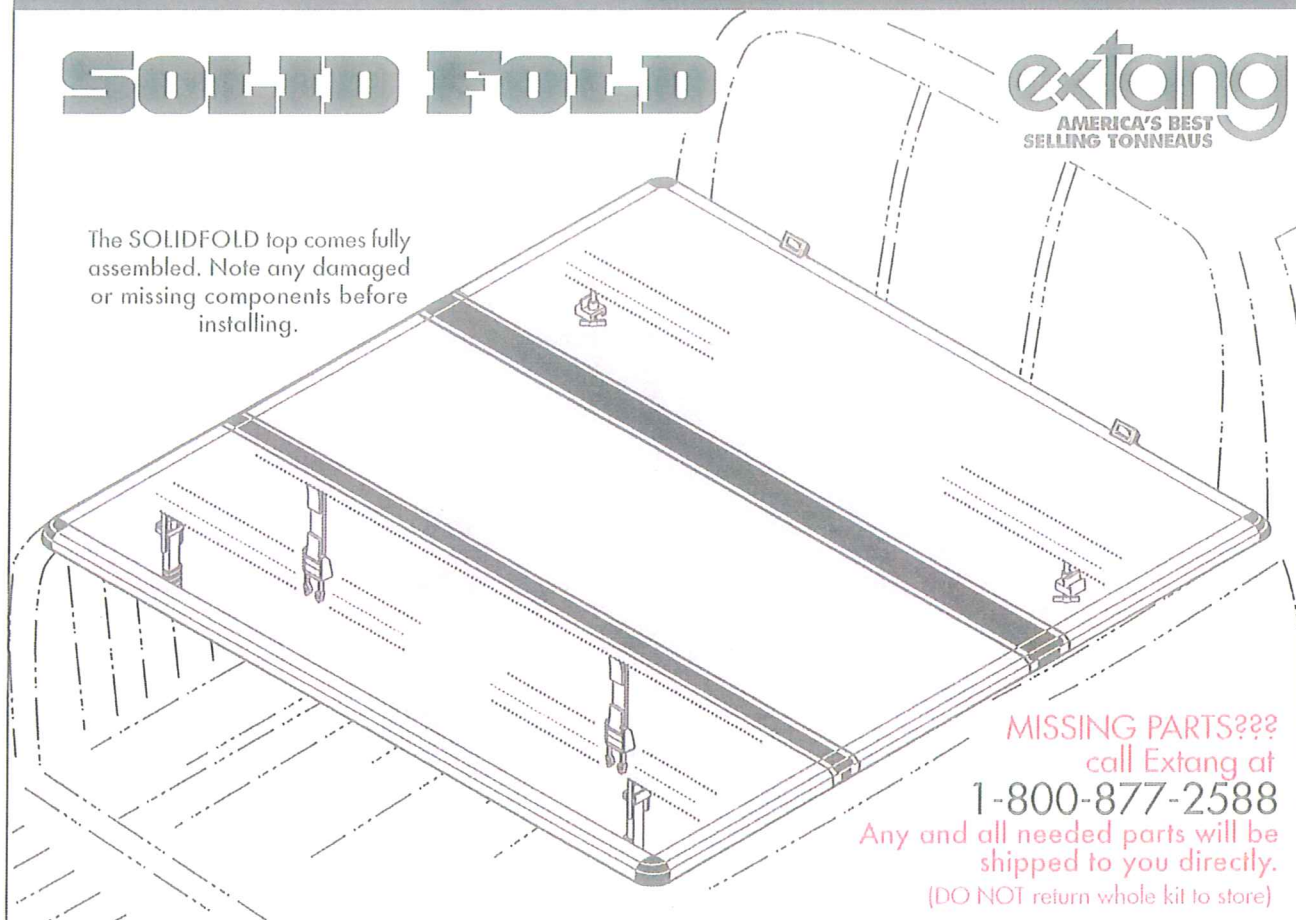

MISSING PARTS???  
call Extang at  
**1-800-877-2588**  
Any and all needed parts will be  
shipped to you directly.  
(DO NOT return whole kit to store)


**1**

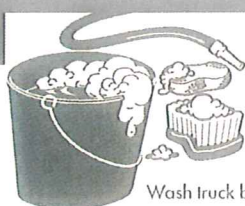

Wash truck bed.


**2**

Place assembled cover over  
cab end of truck box.

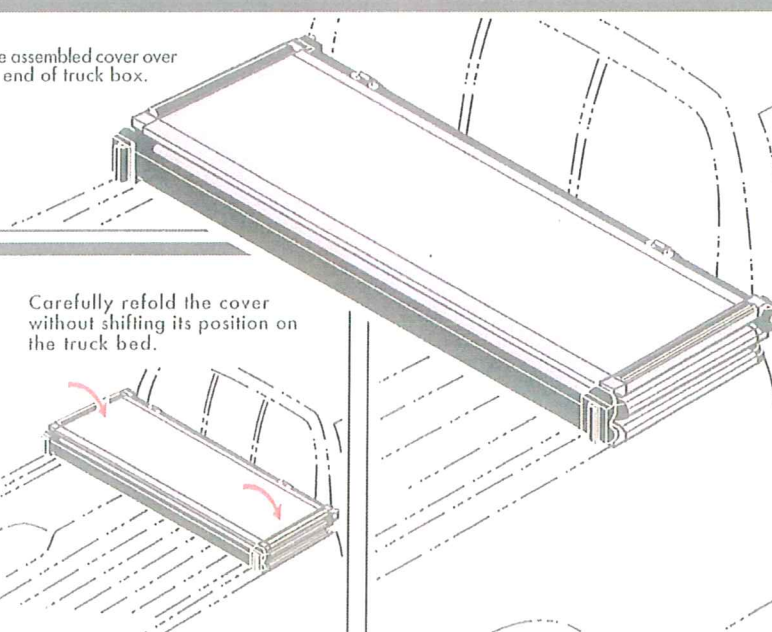


**3**

Unfold the cover fully and adjust  
position over the truck bed for  
proper cab/tail alignment.

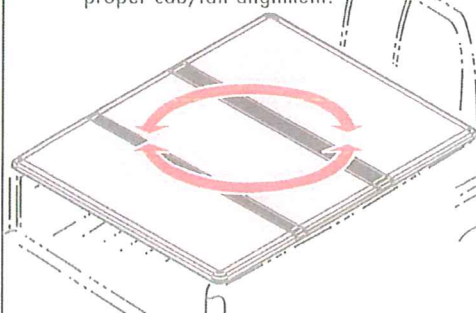

Carefully refold the cover  
without shifting its position on  
the truck bed.

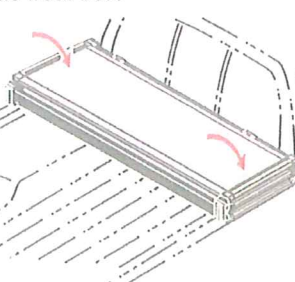

Extang Corporation  
1901 E. Ellsworth Rd.  
Ann Arbor, MI 48108  
734 677-0444, Fax: 734 677-8409





Register your warranty at:  
**[www.extang.com](http://www.extang.com)**

Item No. 0182-0609 RH Printed in U.S.A.

4



If your truck has a wall cap or bedliner that covers the metal bed wall flange, you will need to remove enough so that all the clamps make solid contact.

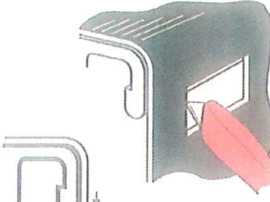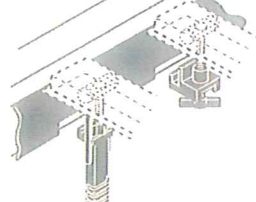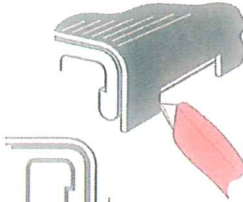


Trim only enough of the bed cap edge or liner wall so clamp contacts bottom of metal flange.

100mm

5


Ensure clamp is positioned under bed wall flange. Hand tighten until clamp contacts, then tighten an additional two turns.

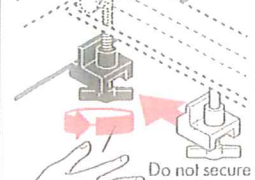

Do not secure to only lip of bedliner or wall cap. Do Not Use Wrench or Overtighten!

6


With tailgate open and front clamps secure, completely close the cover.

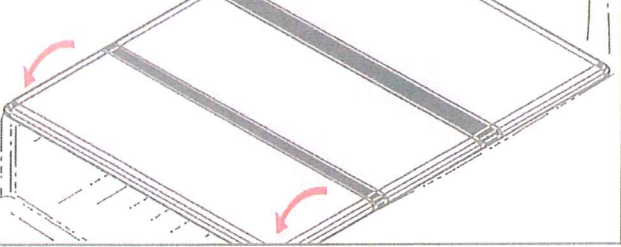

7



Slide rear clamp out to the bed wall.

Pull rear clamp down and hook under bottom edge of bed wall flange.

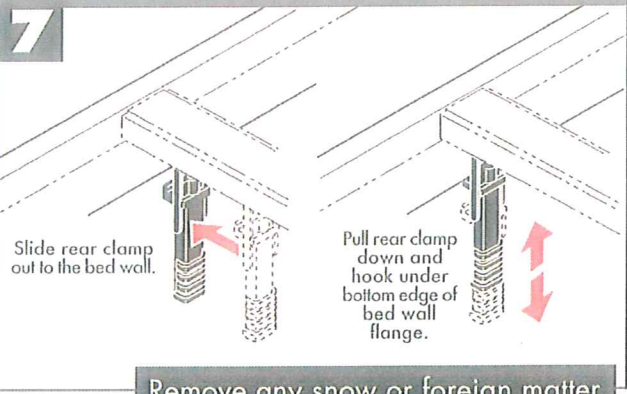


8

It is very convenient to drive with the SOLIDFOLD cover open. Release the rear clamps and fold the cover forward.

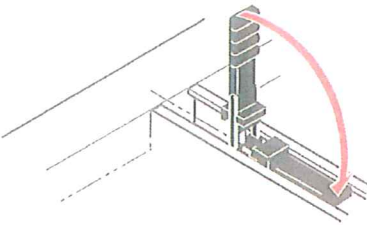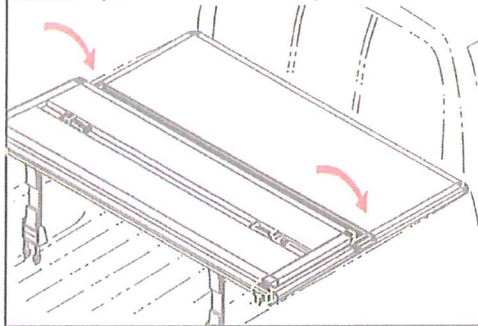


IMPORTANT: Before folding the second section of the cover, rear clamps must be stowed securely into rail.

Fold the cover forward and fasten the straps in the middle section to the front rail.


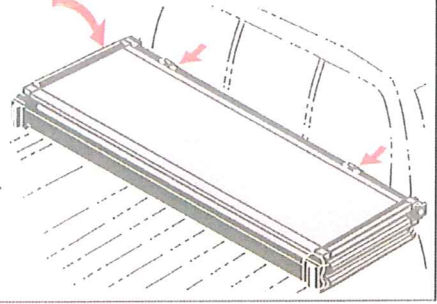


### IMPORTANT NOTICE

While driving, cover must be completely flat and secure with all four clamps in the closed position or completely folded up (all panels) and secured at the cab. DO NOT DRIVE with cover in partially opened position.

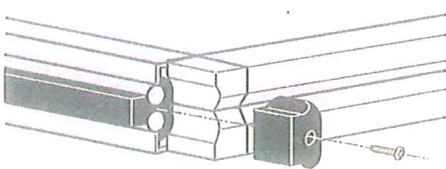

To remove foreign matter from panel hinges, remove one end cap and slide panels apart. Reassemble after cleaning.

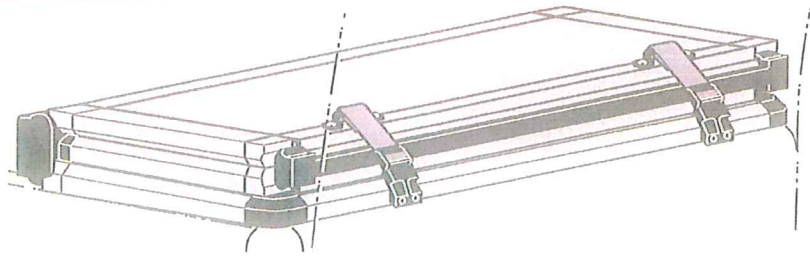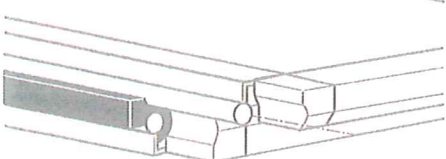

extang

Extang Corporation, 1901 E. Ellsworth Rd., Ann Arbor, MI 48108, 734 677-0444, Fax: 734 677-8409, Visit us at: [www.extang.com](http://www.extang.com)