
Foten placeras i linje med gångjärnets bakkant The foot is placed in line with the hinge

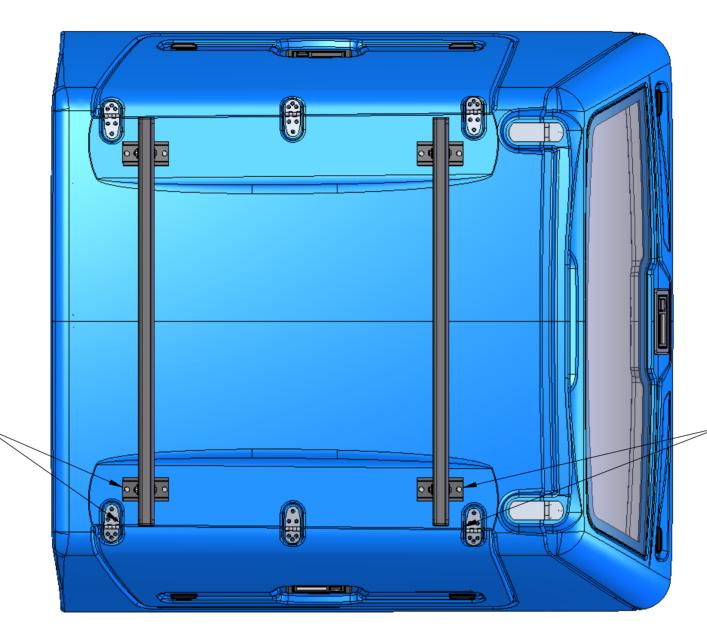

Foten placeras i linje med gångjärnets framkant The foot is placed in line with the hinge

## Lastbärare TorRack 80-1221

