


MOUNTAIN TOP COVER INSTALLATION GUIDE

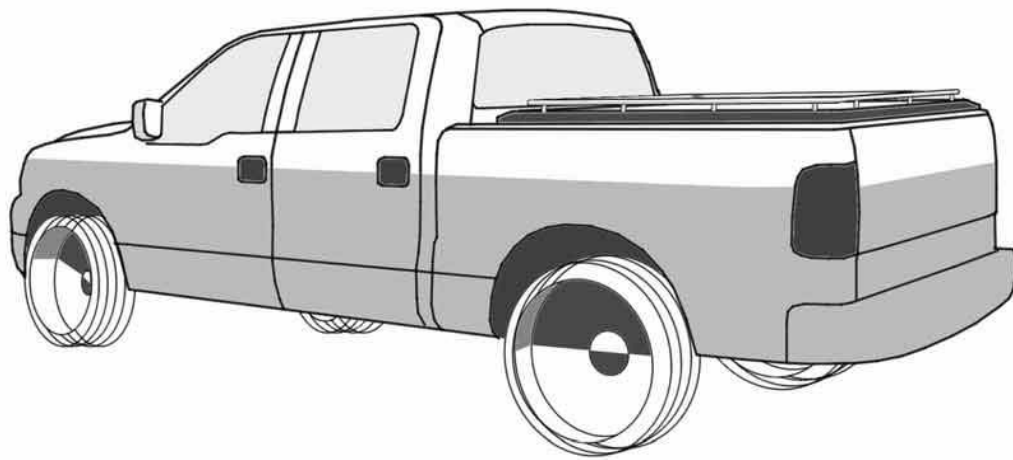


CHEVROLET COLORADO
STANDARD
DODGE RAM STANDARD

MOUNTAIN
INDUSTRIES TOP

MTI-number 882 030	Issue 04	Date 02/01/2008	CHEVROLET / DODGE MT CH 4000/1 A/C - MT DO 4201 A	Page 1/6
Pedersholmparken 10	3600 Frederikssund	Denmark	ph: +45 4810 2950 Fax +45 4810 2960	www.mountaintop.dk

Step 1. Hardware components & descriptions

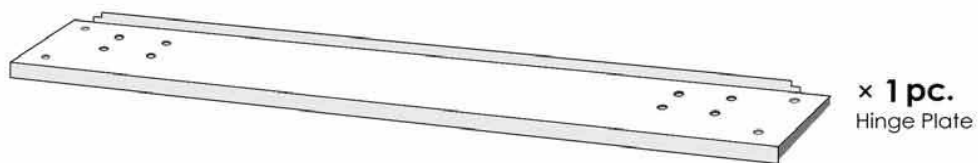

× 2 pcs.
Key
Attached to Cover



× 4 pcs.
Hinge Part



× 4 pcs.
Button head screw M6



× 4 pcs.
Rubber packing



× 4 pcs.
Rubber washer



× 2 pcs.
Flat axel



× 8 pcs.
Washer M6




× 8 pcs.
Bolt M8x12




× 8 pcs.
Lock nut M6



× 8 pcs.
Washer M8

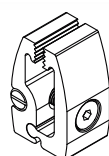

× 8 pcs.
Clamp

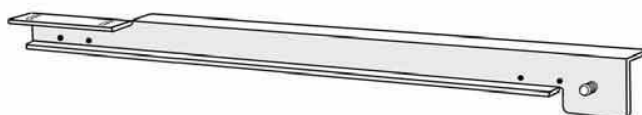

× 2 pcs. (L/R)
Side rail track (Front)



× 2 pcs.
Gas prop connector



× 2 pcs. (L/R)
Side rail track (Back)



× 2 pcs.
Gas prop pin



× 2 pcs.
Striker lock plate




× 2 pcs. Gas prop




× 2 rolls
6 pcs. textile packing, 10 mm
* Excludes vehicles with
factory bed caps.


Step 2. Tools required for installation

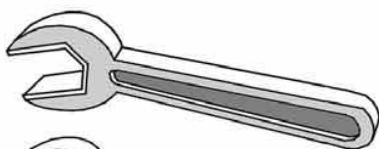

Wrench, 9/16"

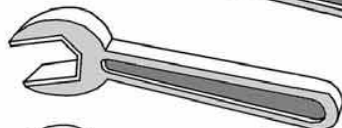


Wrench, 13 mm

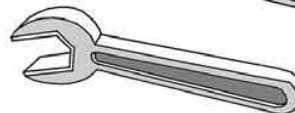

Wrench, 10 mm



Socket cap wrench, SW6

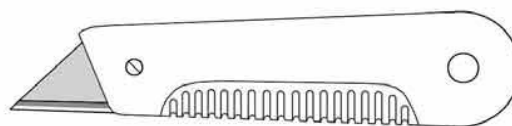


Utility knife




Screw driver

Step 3. Rail cap assembly

3.1

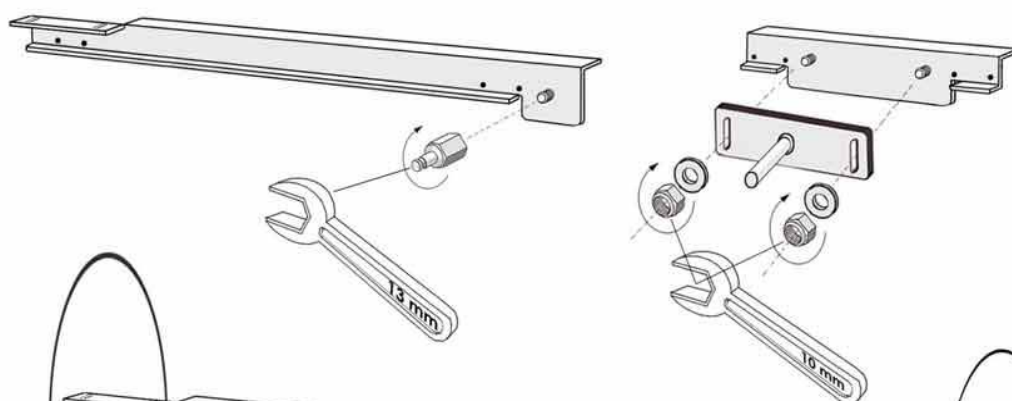


3.2

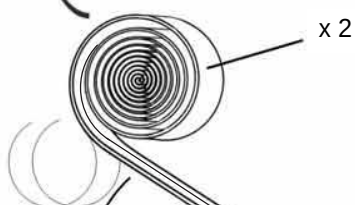

3.3




3.4

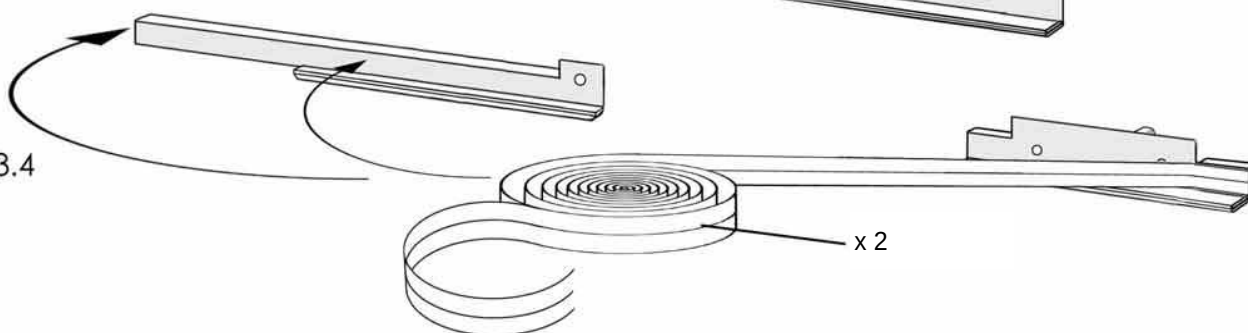


Step 4. Hinge plate assembly


4.1

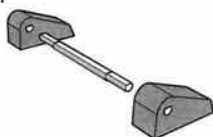

4.2

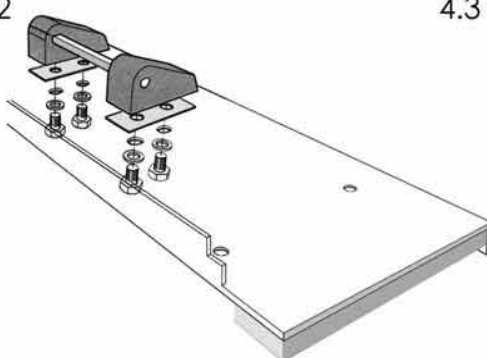


4.3

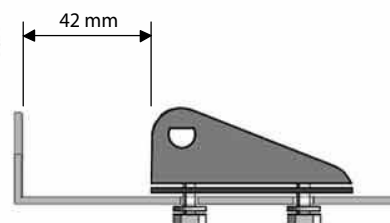


Step 5. Rail cap mounting

5.1

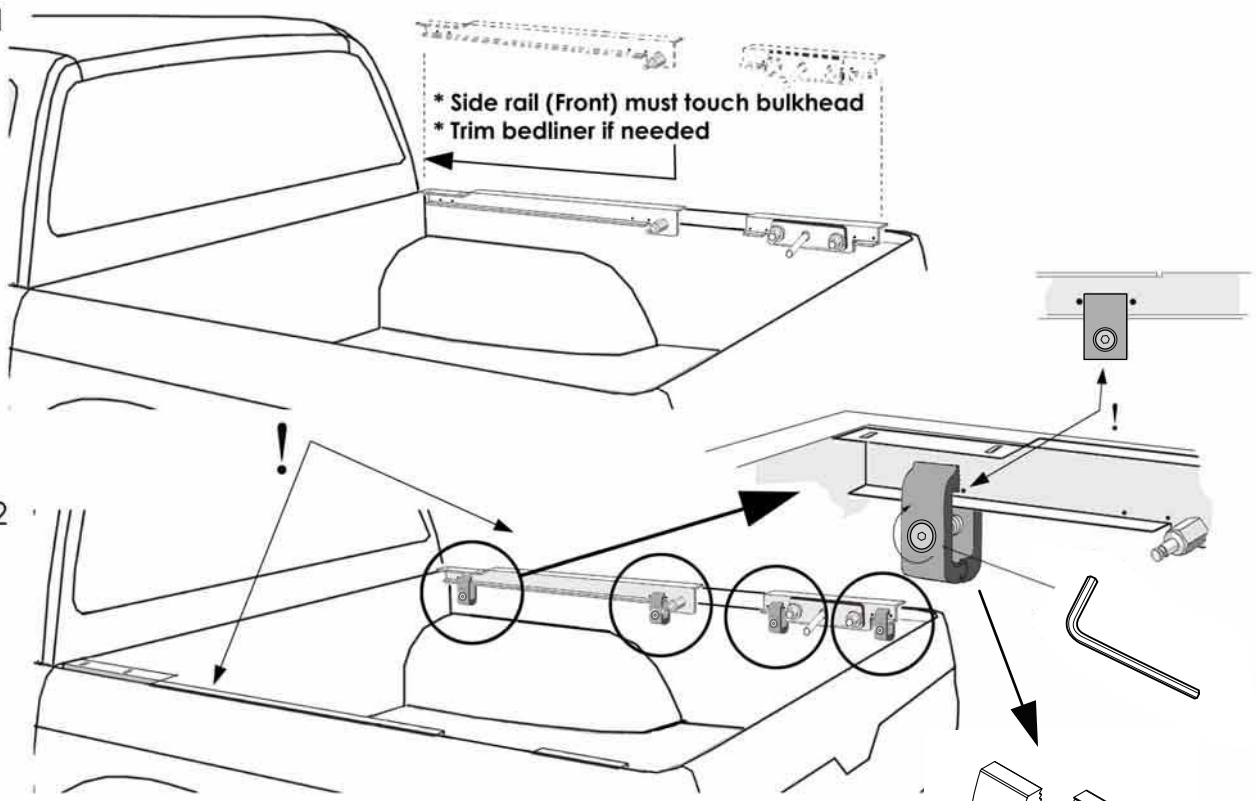


Step 6. Hinge plate mounting


6.1

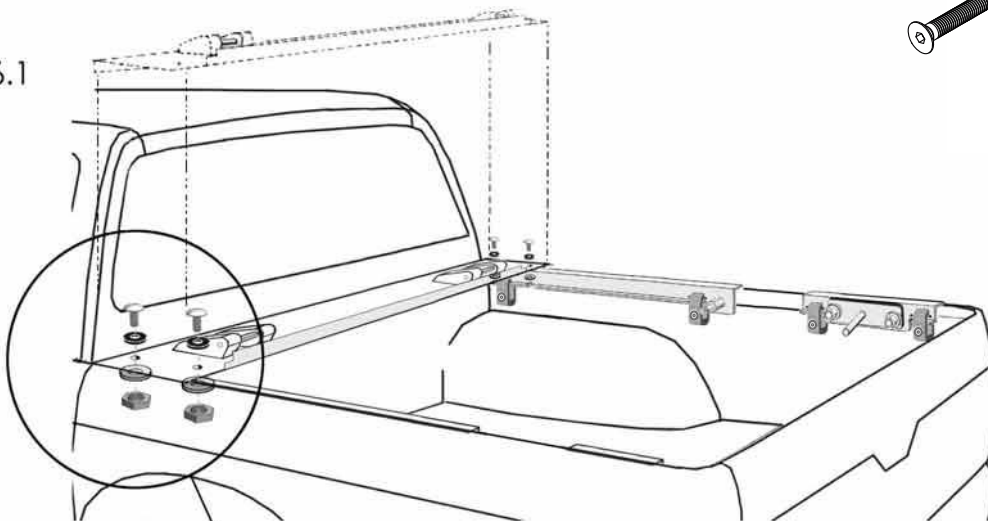


6.2

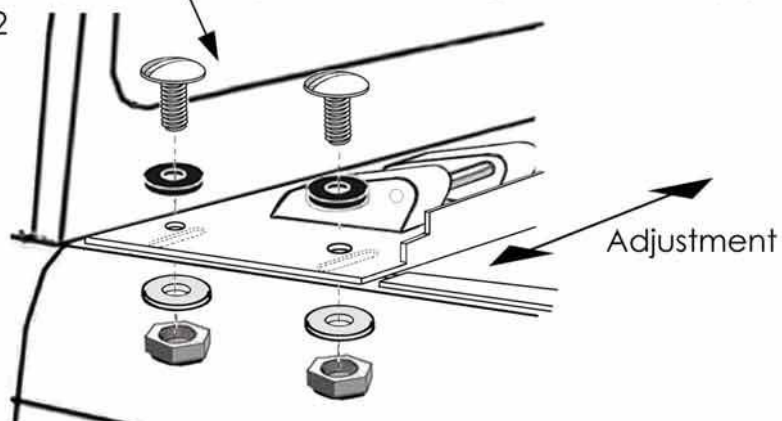

Step 7. Mountain Top Cover mounting

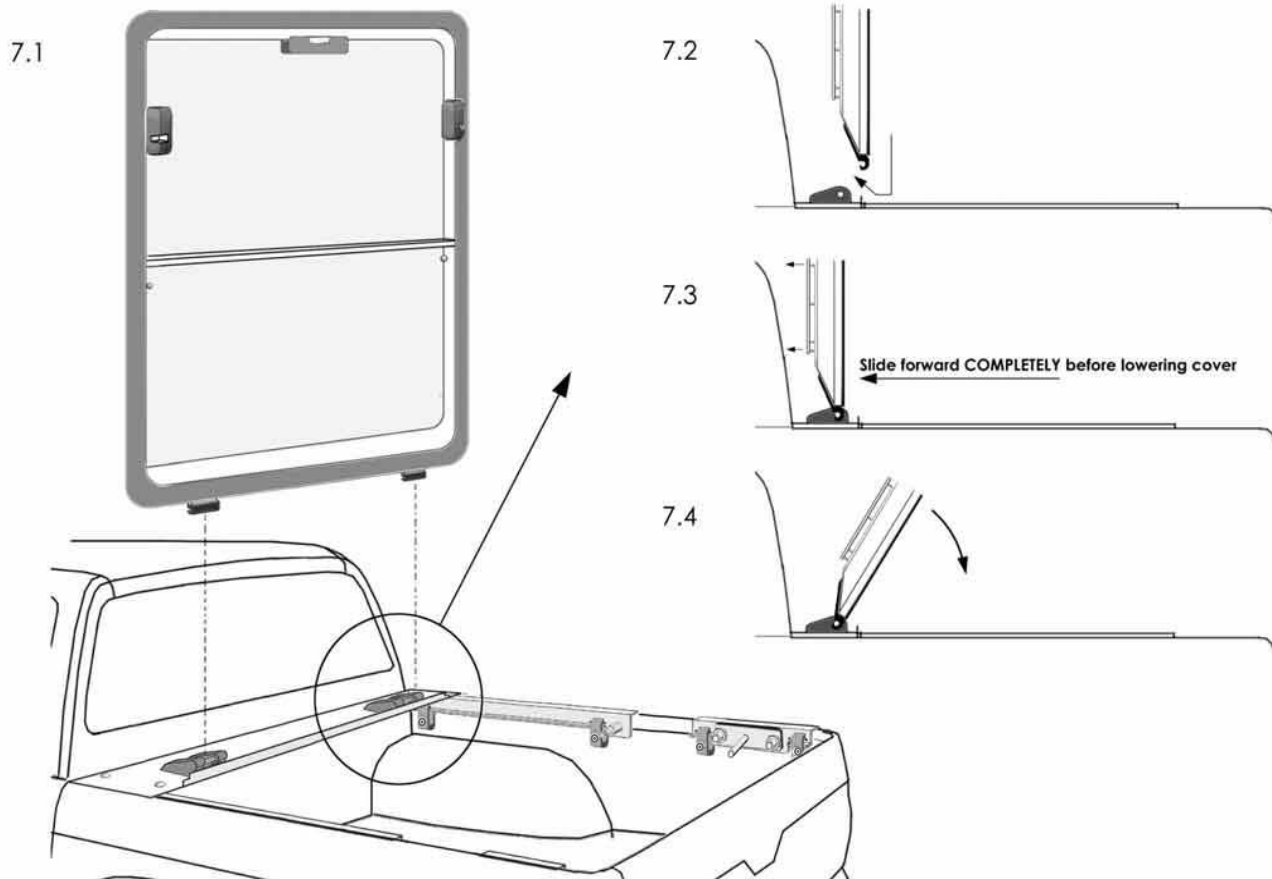

Step 8. Gas prop mounting

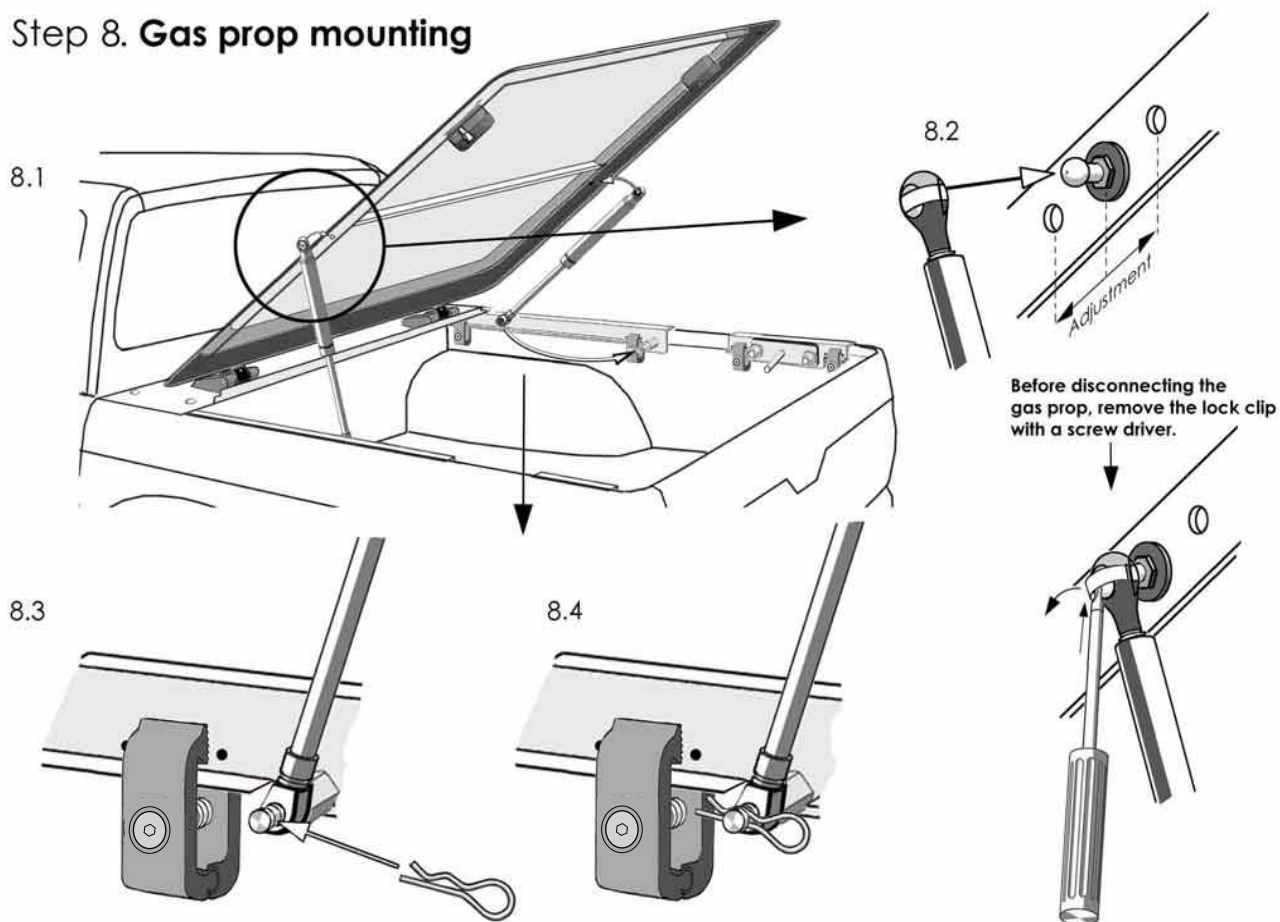

Step 9. Sealing adjustment

