


FORD RANGER

Tonneau Cover Installation Instructions

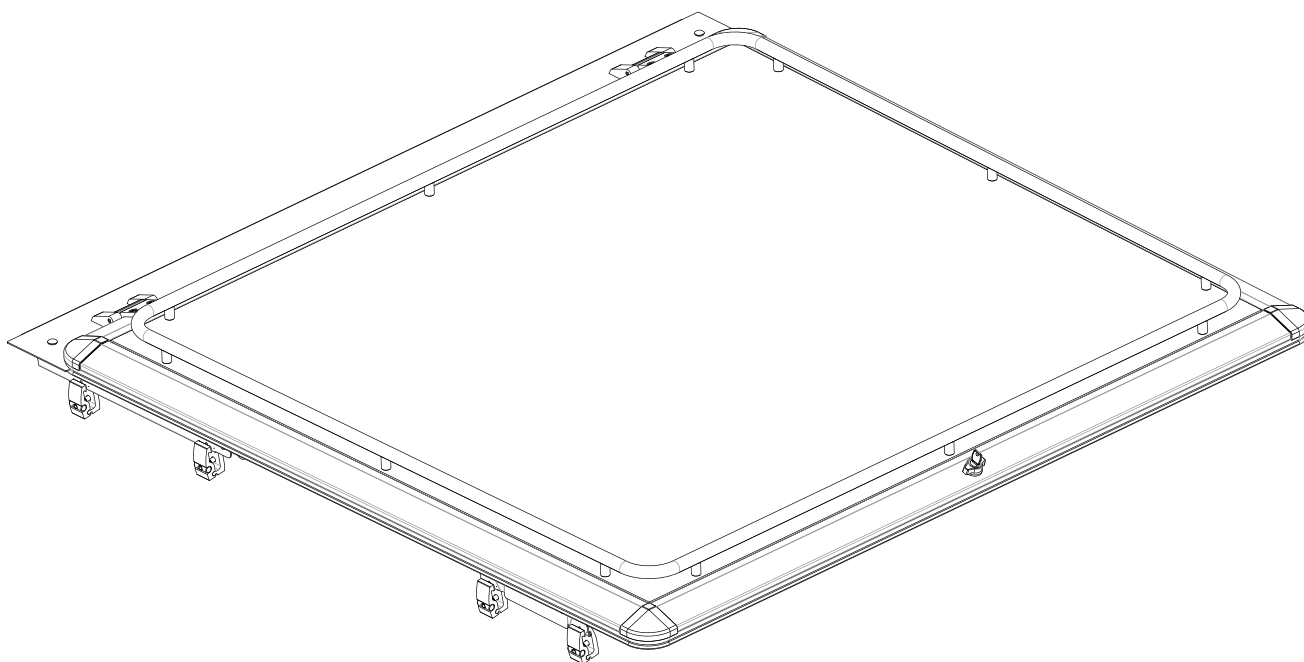

Model Year: 2011 →

Part Number: MT FO 90A Double cab
MT FO 91A Rap cab
MT FO 92A Single cab




Weight: 38 / 50 kg



Installation Time: 1 hr







MTI-number 882 065	Issue 02	Date 16-04-2012	MT FO 90/1/2 A	Page 1/13
Pedersholmparken 10	3600 Frederikssund	Denmark	ph: +45 4810 2950 Fax +45 4810 2960	www.mountaintop.dk

Tonneau Cover Installation Instructions

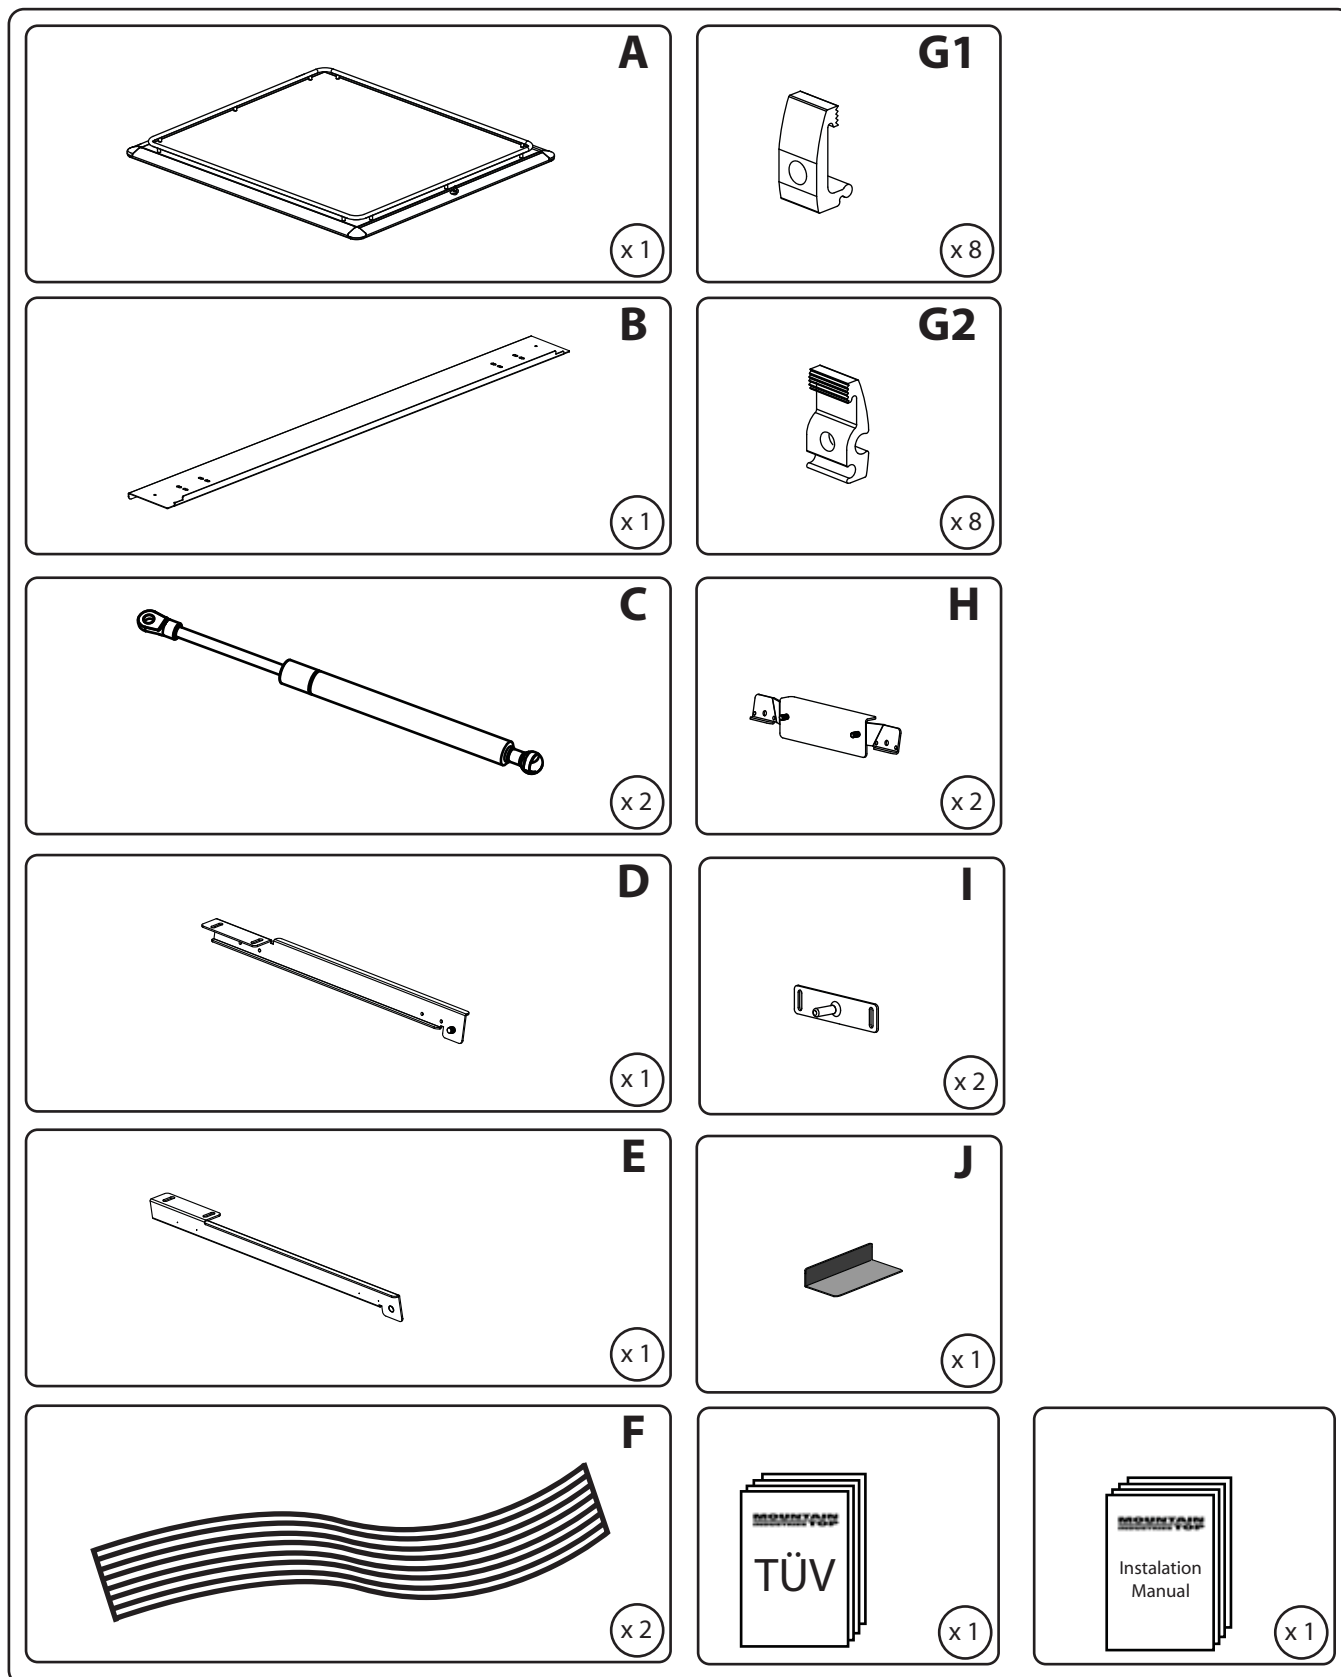

Tonneau Cover Installation Instructions




	U  x 8	V  x 4	X  x 2	Y  x 8	Z  x 4	
	K  x 4	L  x 8	M  x 4	N  x 8	O  x 2	P  x 2
	G3  x 8	G4  x 8				
	R1  x 2	R2  x 4	R3  x 4	R4  x 2	R5  x 4	
	W  x 1					





4 mm 
5 mm 





Rust protection
Rostschutzmittel
Anti-rouille
Anti roest



13 mm 
10 mm 

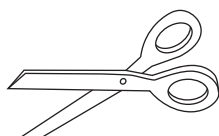


13 mm

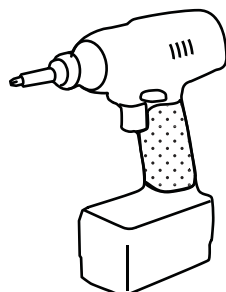


Ø5 mm


1.1

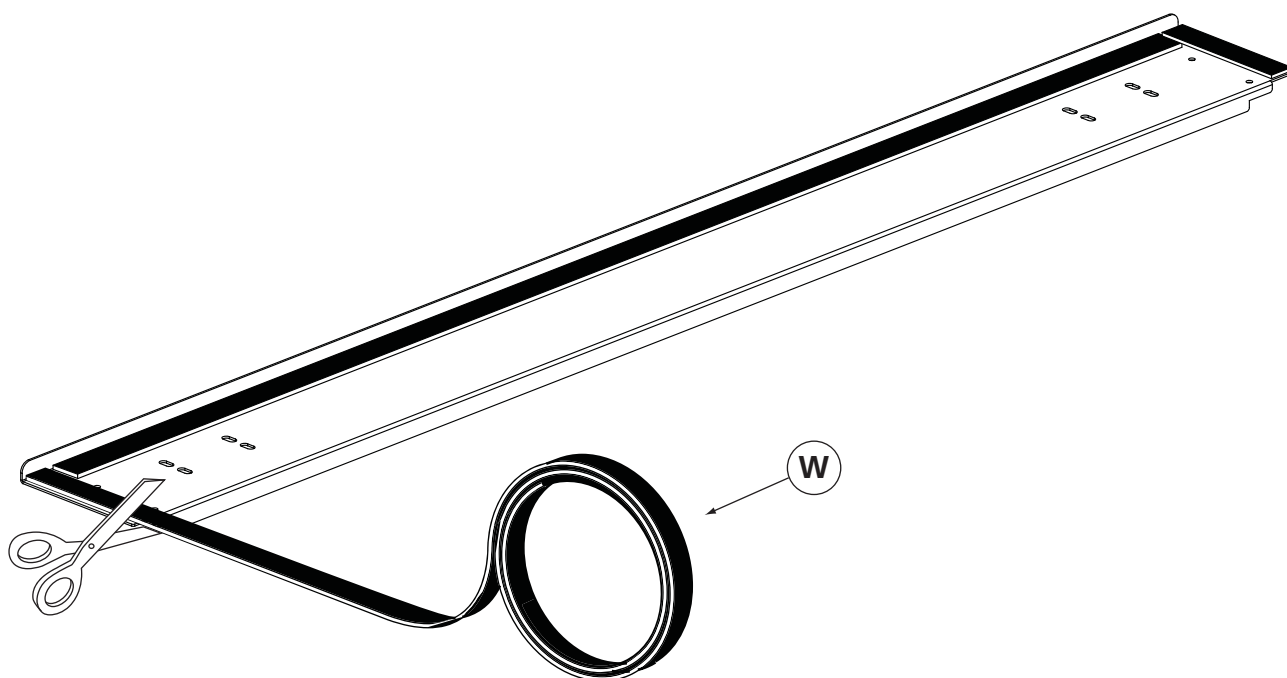


2.1

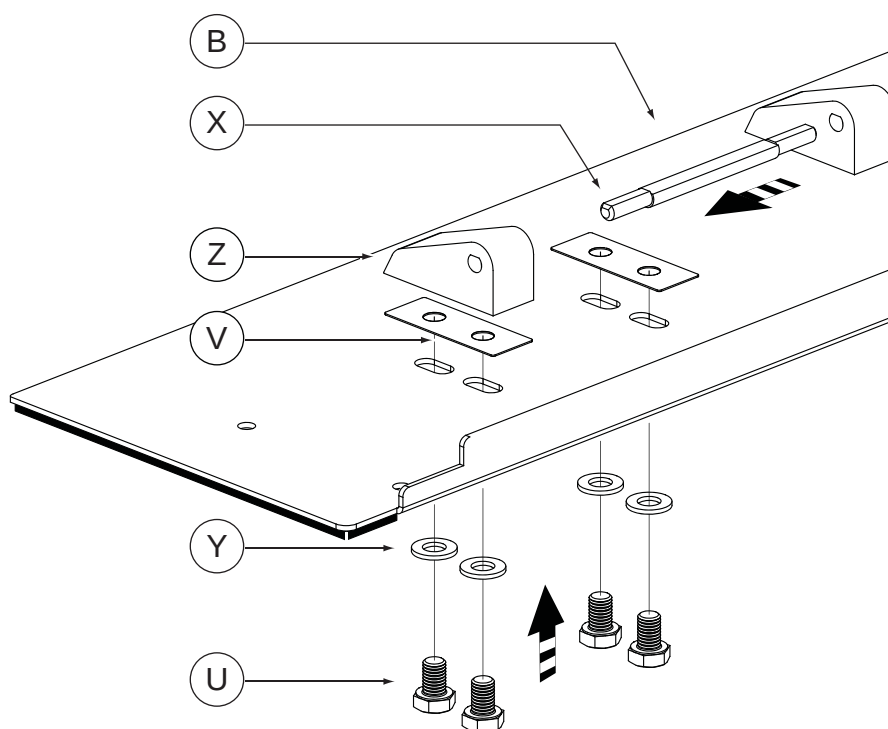


2.2

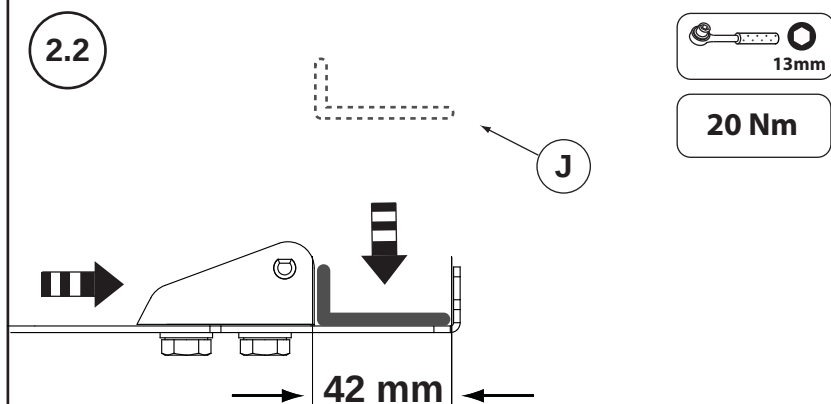

2.3

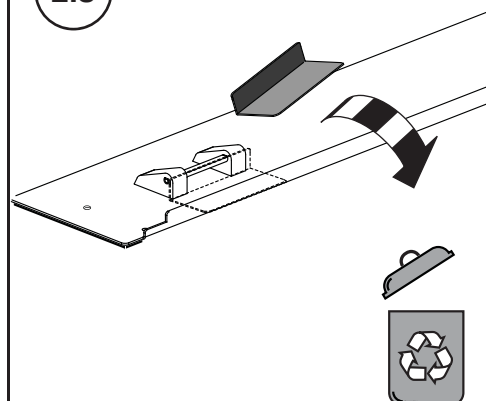


3.1

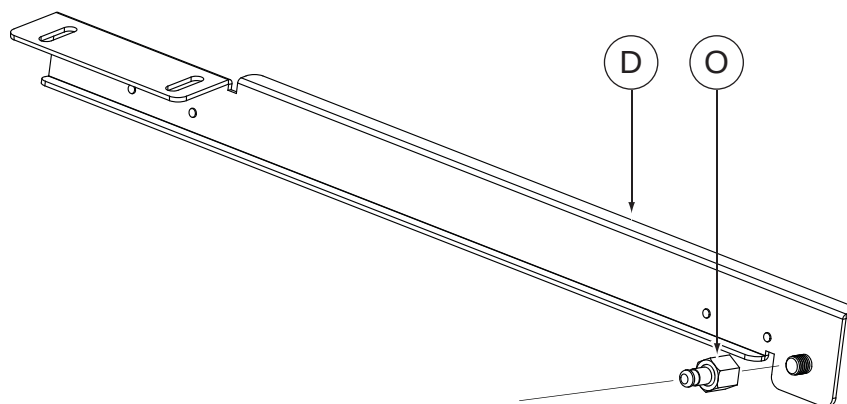


13mm


23 Nm

3.2

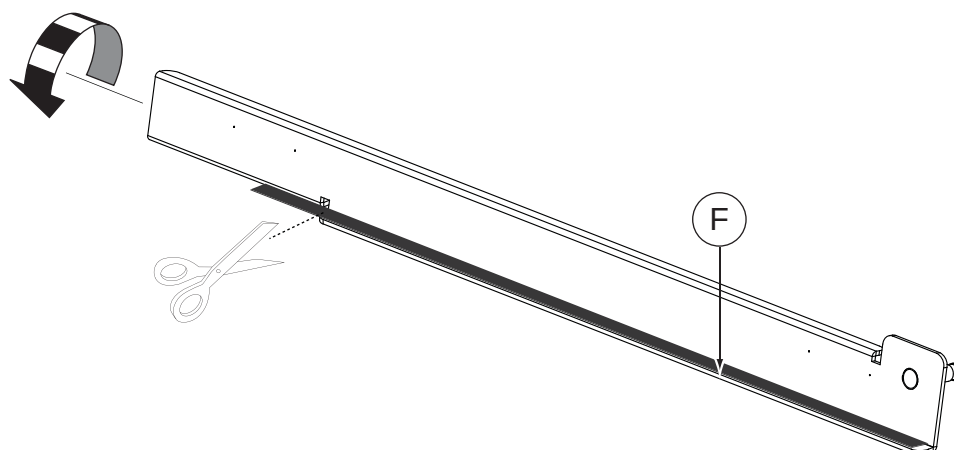


3.3

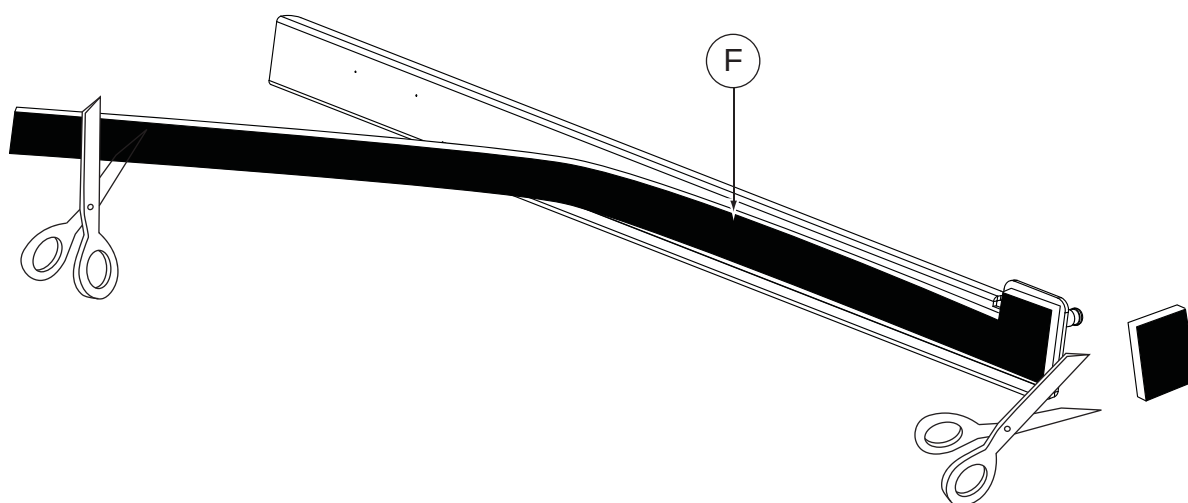

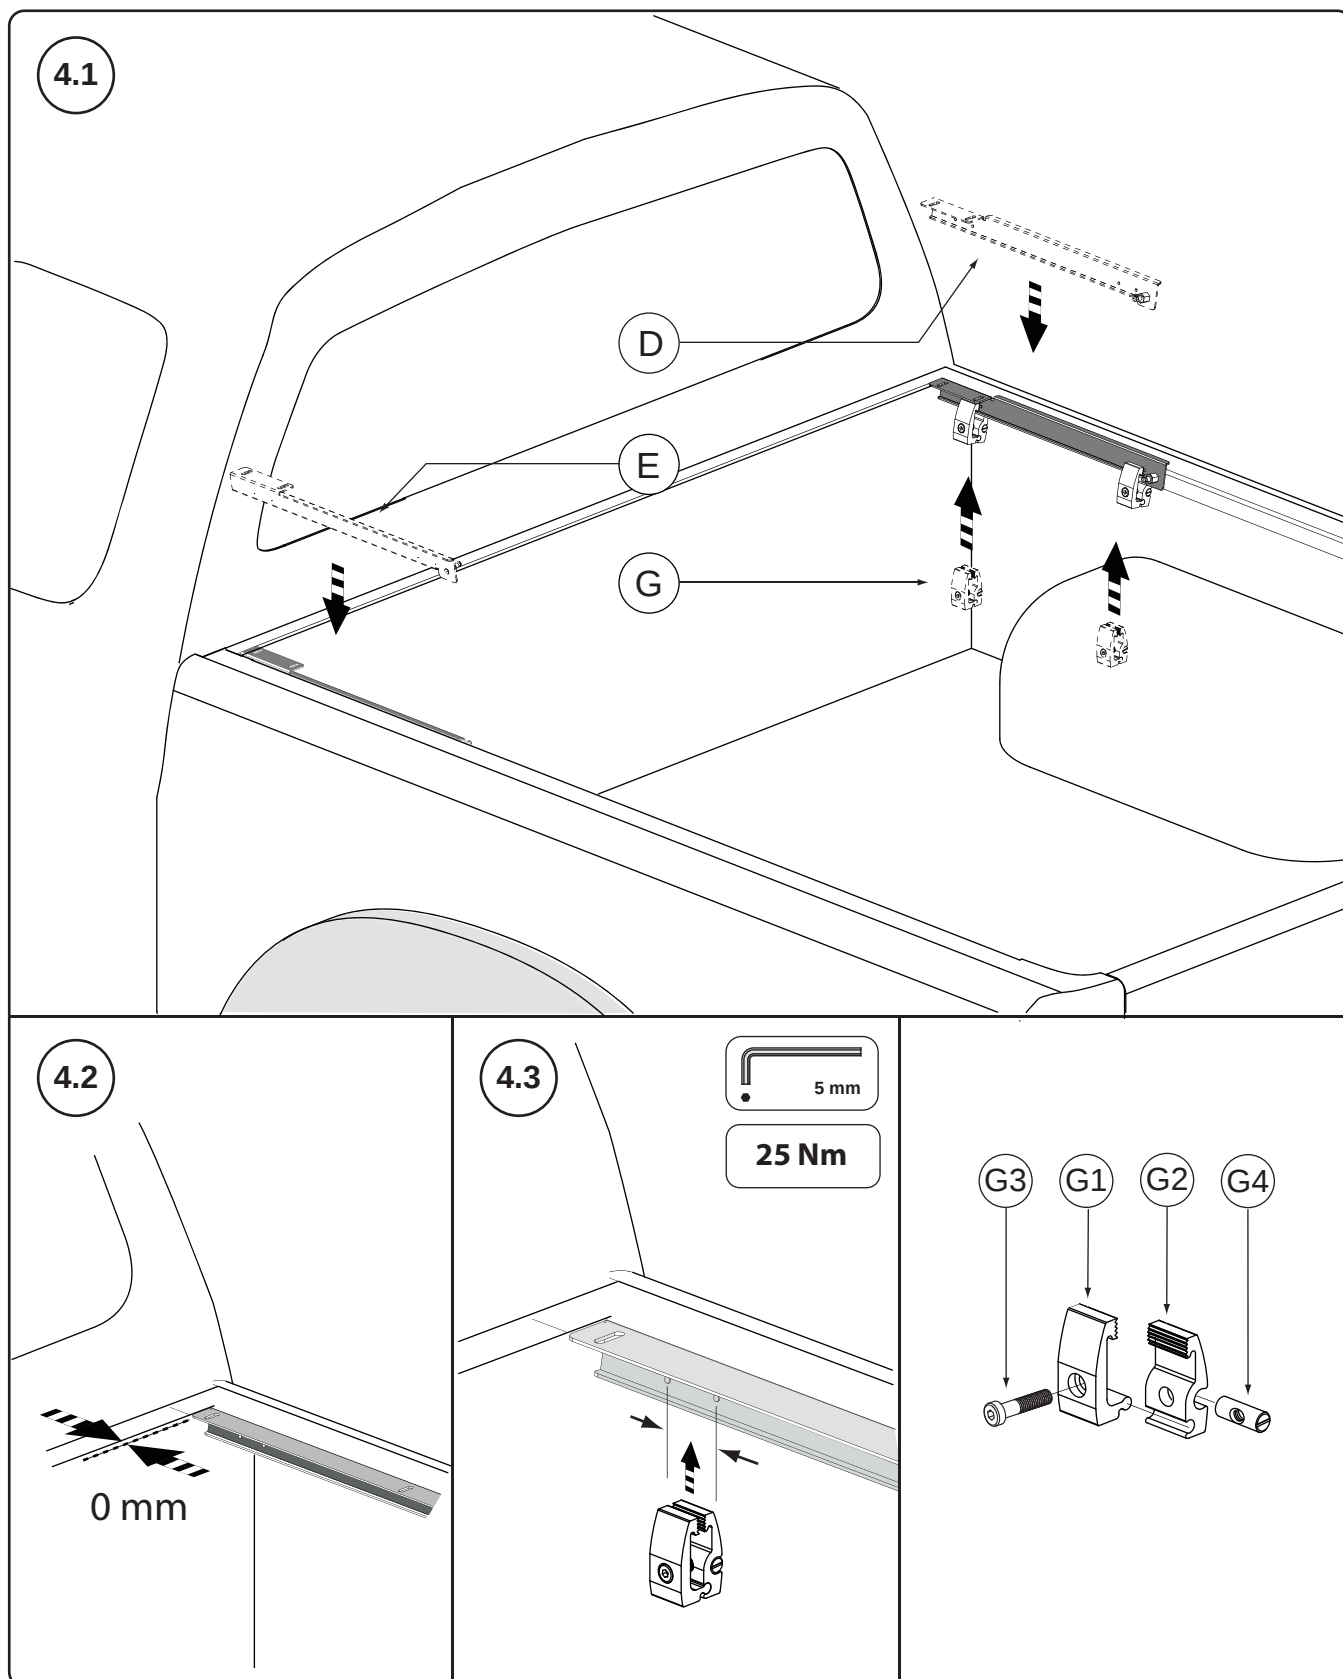


Tonneau Cover Installation Instructions

5.1

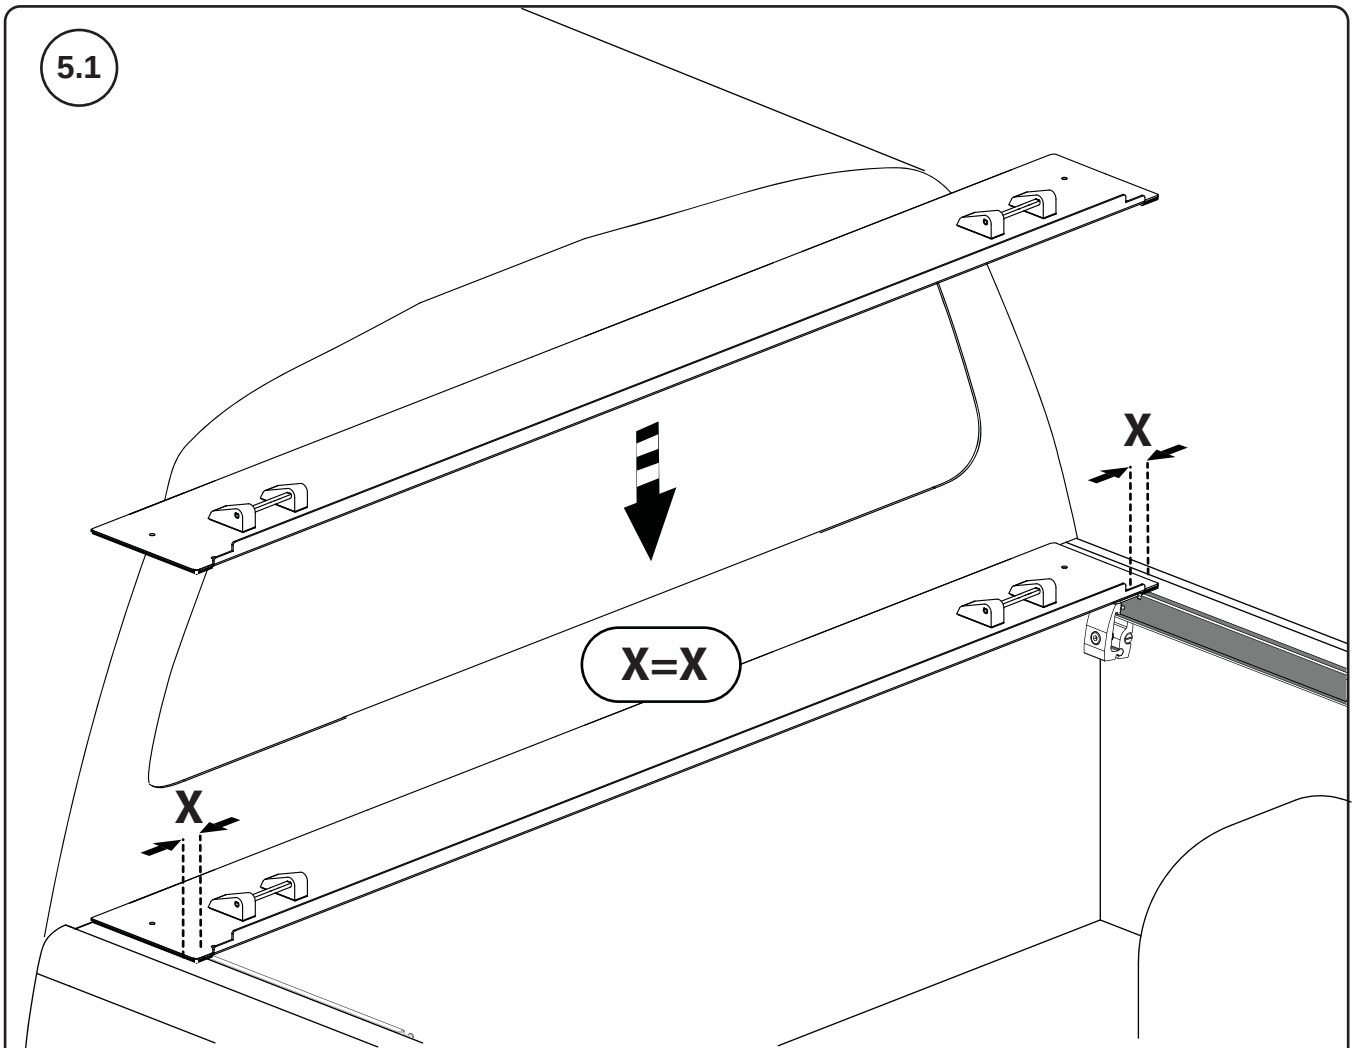

5.2

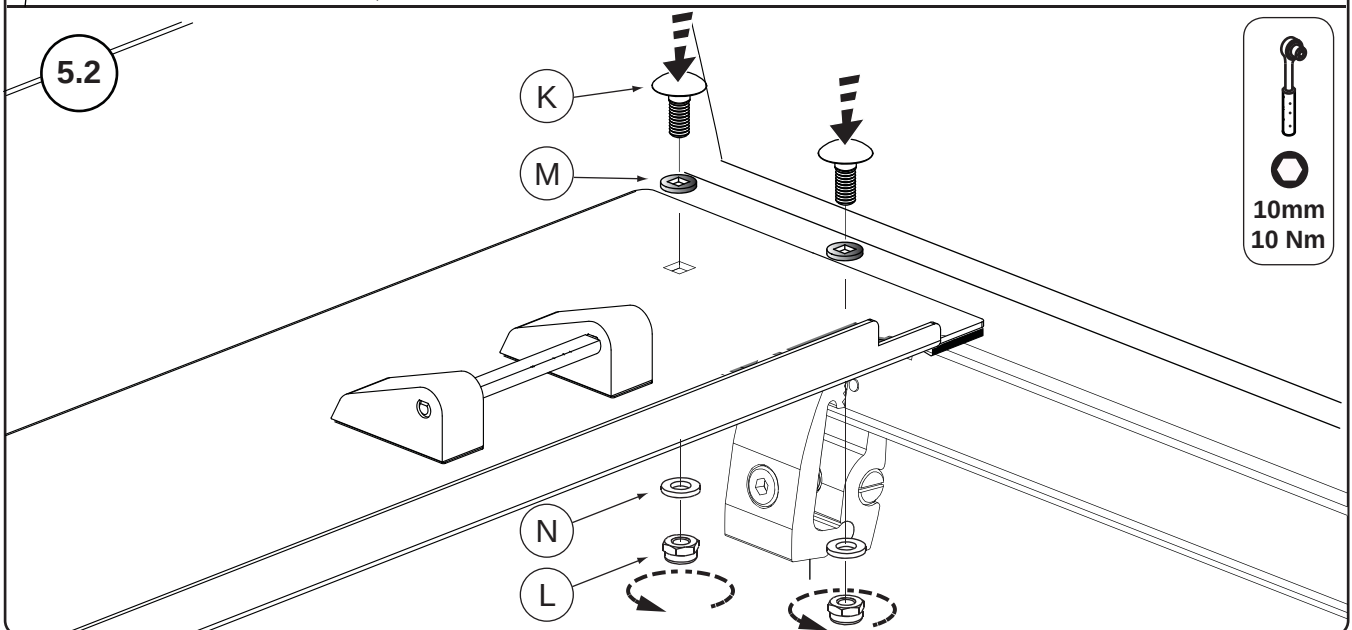

MTI-number
882 065

Issue
02

Date
16-04-2012

MT FO 90/1/2 A

Page
9/13

Pedersholmparken 10

3600 Frederikssund

Denmark

ph: +45 4810 2950





Fax +45 4810 2960

www.mountaintop.dk






Tonneau Cover Installation Instructions



6.1

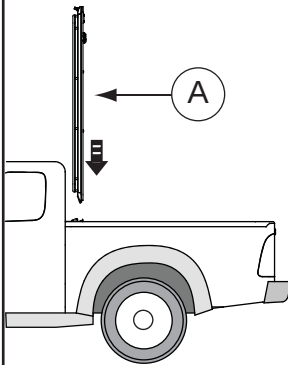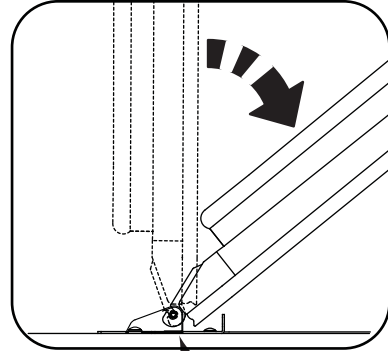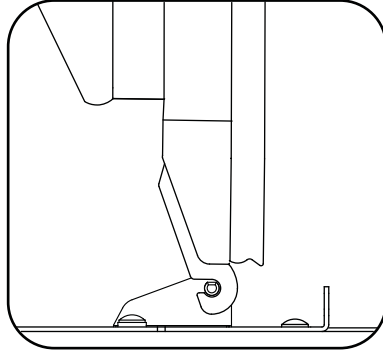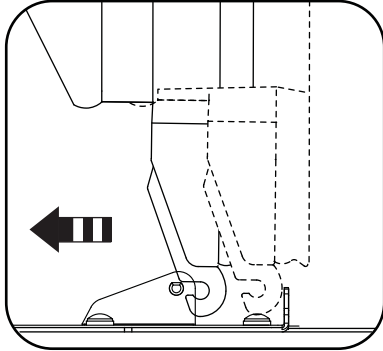


6.2

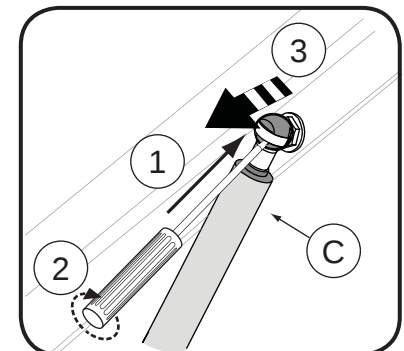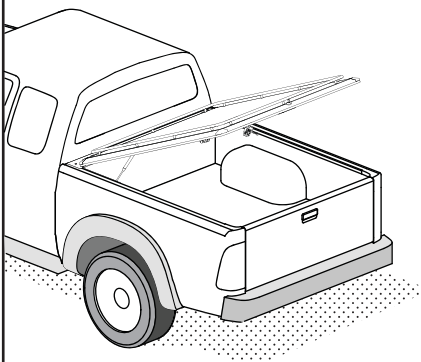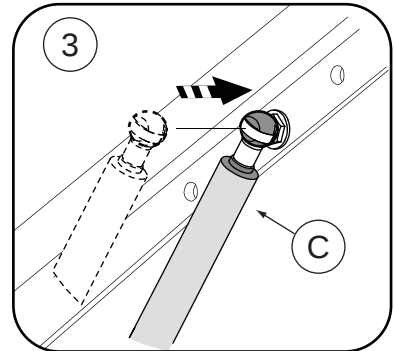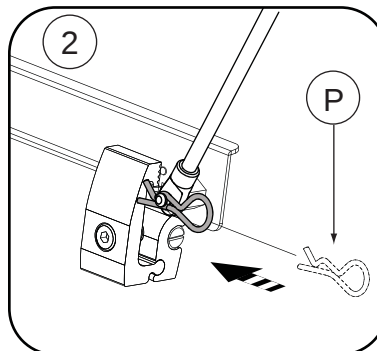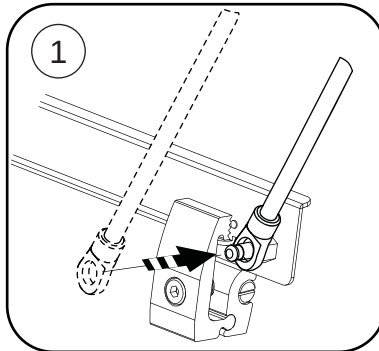


Tonneau Cover Installation Instructions


7.1

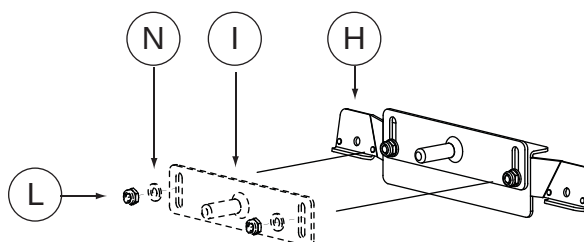


7.2

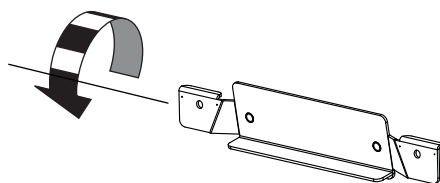


7.3

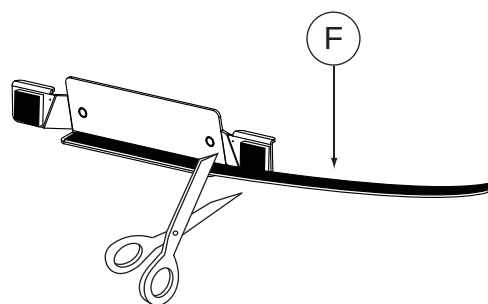

7.4

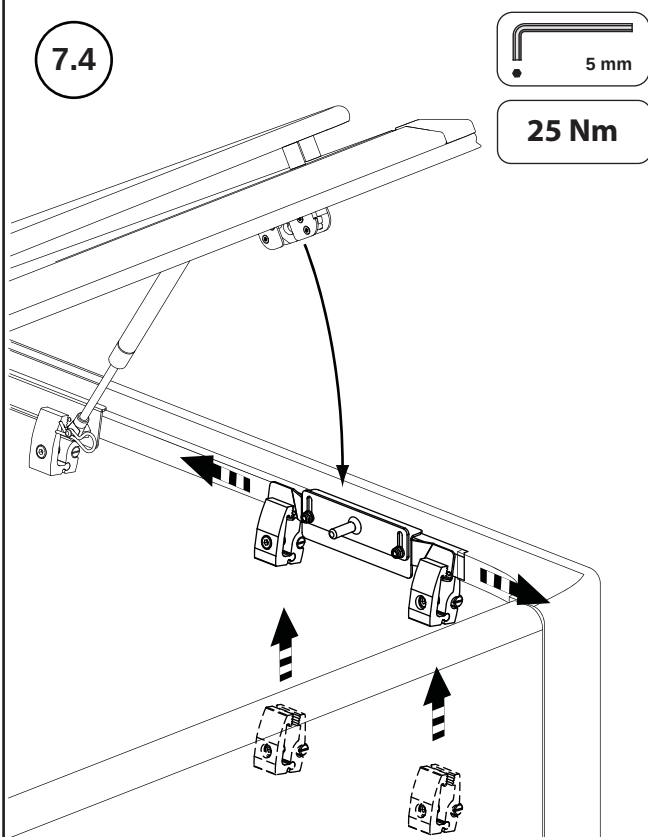

7.5

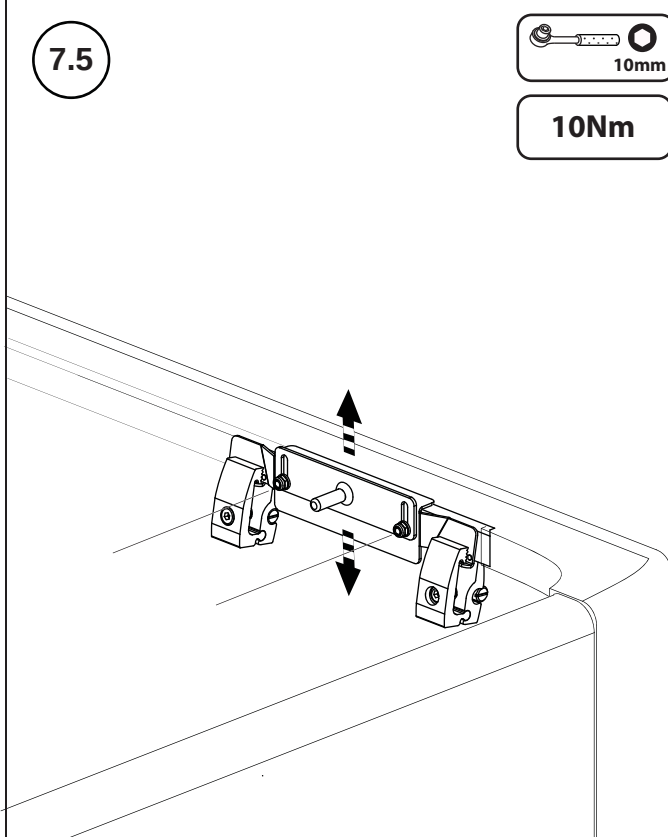

8.1

4 mm

