

## **Installation Instruction NP3D, NP3DC.**

20.04.2016/S. Ennemuist



First, read through the installation instructions and check the contents of the installation kit.

The installation kit consists of:

- 6 pcs Clamps
- 4 pcs Washer thick M6 (1)
- 4 pcs Screw M6,3x25 (2)
- 1 pcs Protective tape for truck bed
- 1 pcs Plastic extra part for the back hatch


**Before mounting hardtop, install extra plastic part on the car tailgate for sealing back hatch. Follow these instructions.**



Remove panel from the car tailgate.



Mount plastic extra part on the car tailgate as shown in the following drawing.

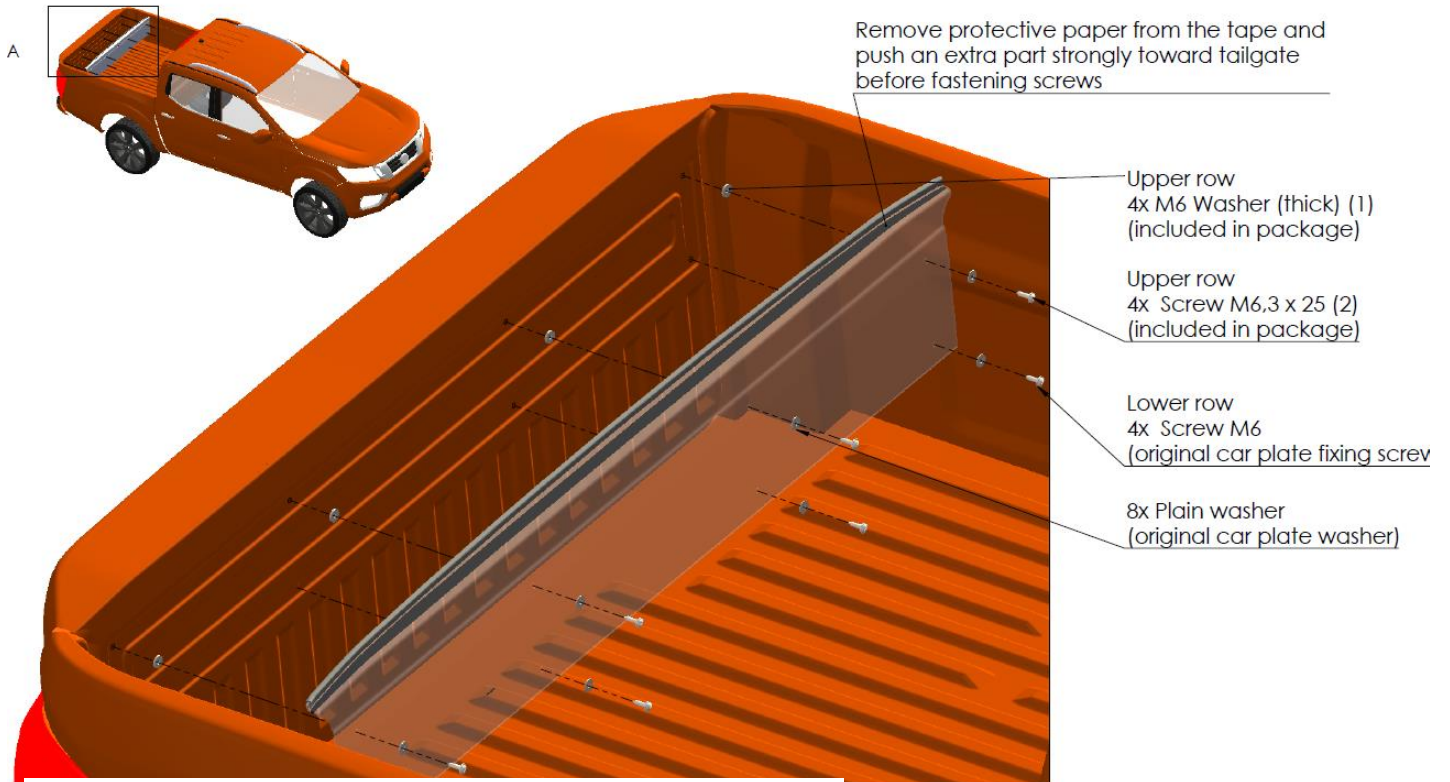

**After mounting plastic extra part on tailgate, start to mount hardtop on cargo bed!**






Mount hardtop lower-rear corner aligned with the cargo bed rear corner.



Center the cover sideways on the load bin and place the clamps acc. to the image. Pull the cover towards the edge of the bin with clamps


**Note! Max. 10 Nm tension**

**NP3DC -0055,-1155; 1133**

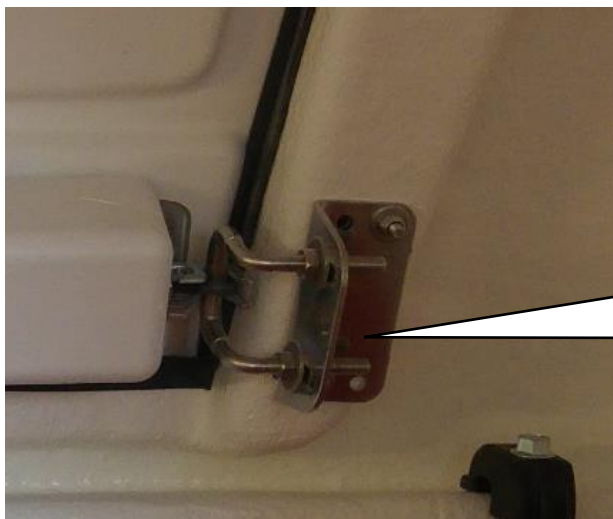

Check that the doors close easily and that the lock is correctly adjusted, if necessary adjust the lock or locking strap.



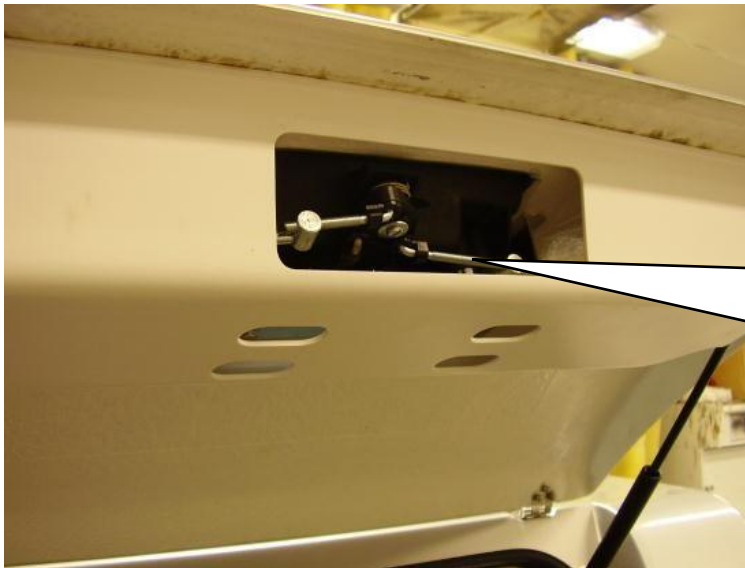

It is possible to adjust the length of the locking rods by loosening the plastic clip and turning the locking rod which is screwed into the joint against the locking hook.

NP3D -0055,-1155; -900; -1100



Check that the doors close easily and that the locks are correctly adjusted. If necessary, the height of the glide angle can be adjusted

After a while of driving, all connections should be checked and re-tightened, if necessary.