










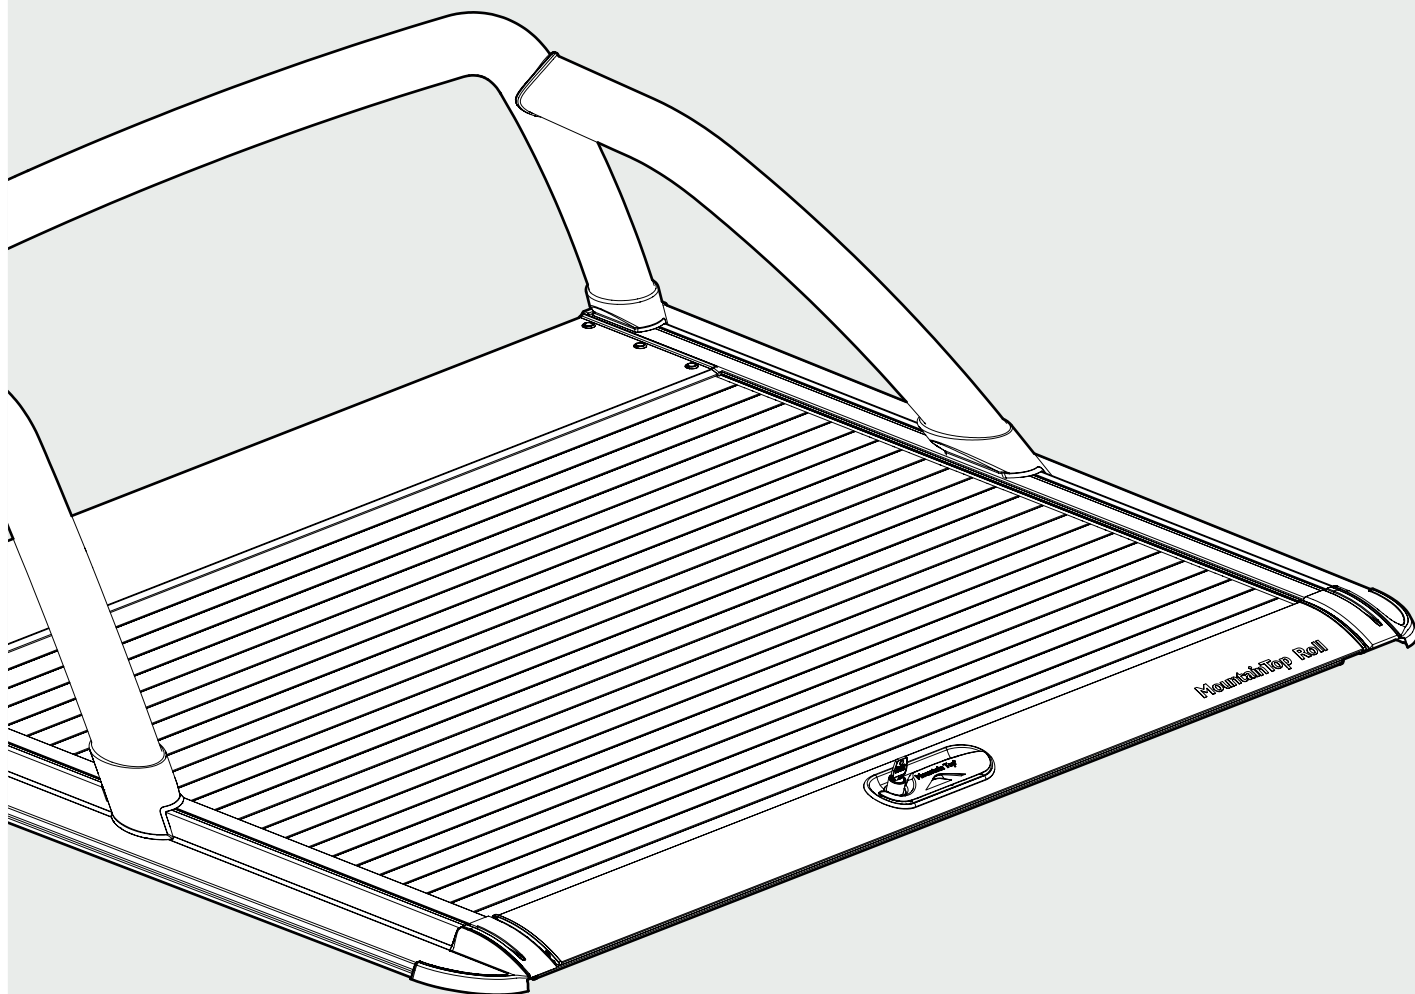







Mountain Top® Sports Bar




Installation manual




DOWNLOAD PDF

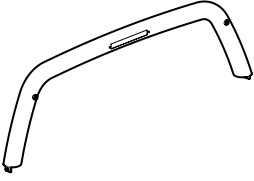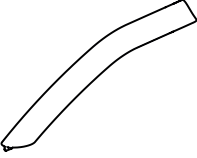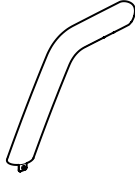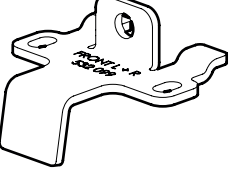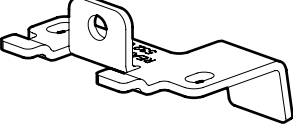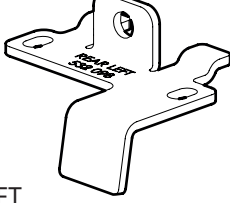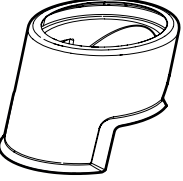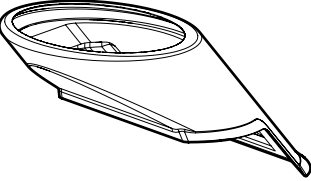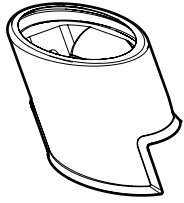 Parts		
A  x 1	B  x 1	C  x 1
D  FRONT LEFT+RIGHT x 2	E  REAR RIGHT x 1	F  REAR LEFT x 1
G  FRONT LEFT+RIGHT x 2	H  REAR RIGHT x 1	I  REAR LEFT x 1

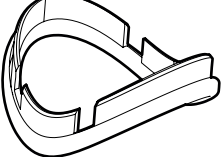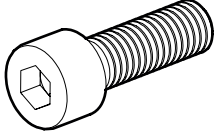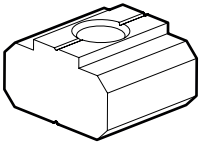 Kit			
J  x 2	K  M8x20 x 6	L  M8 x 6	M  x 2
N  M6x12 x 8	O  M6 x 8	P  x 8	Q  x 8

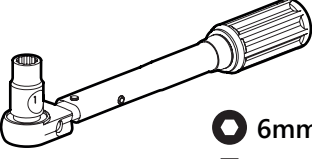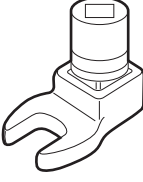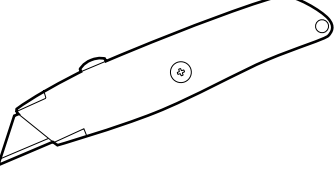 Tools and materials needed	
1 - 25 Nm  6mm 10mm +  10mm	

1

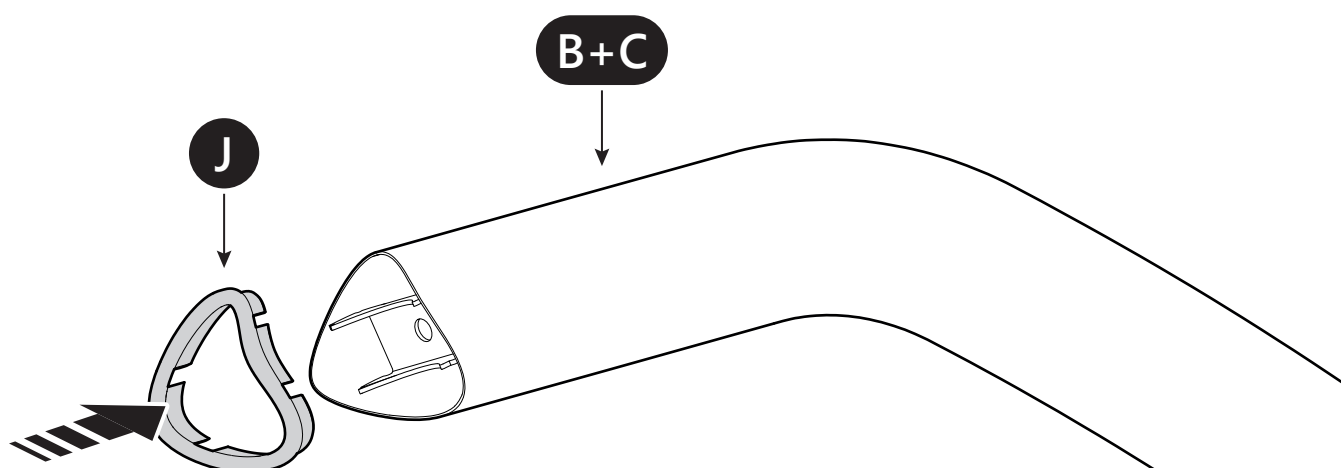


2




6mm

23Nm



K

L

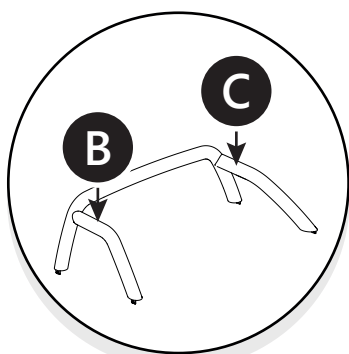

B


C




A

B+C

3

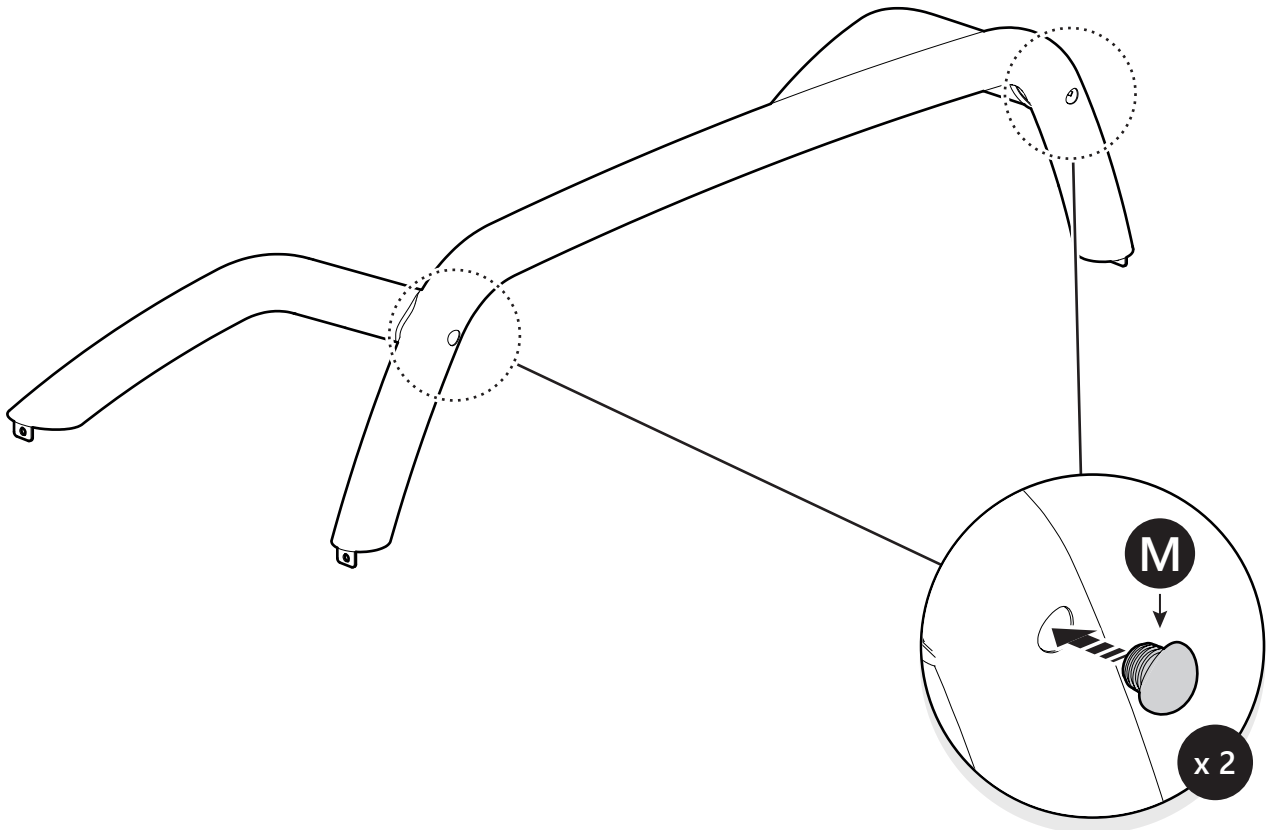

4

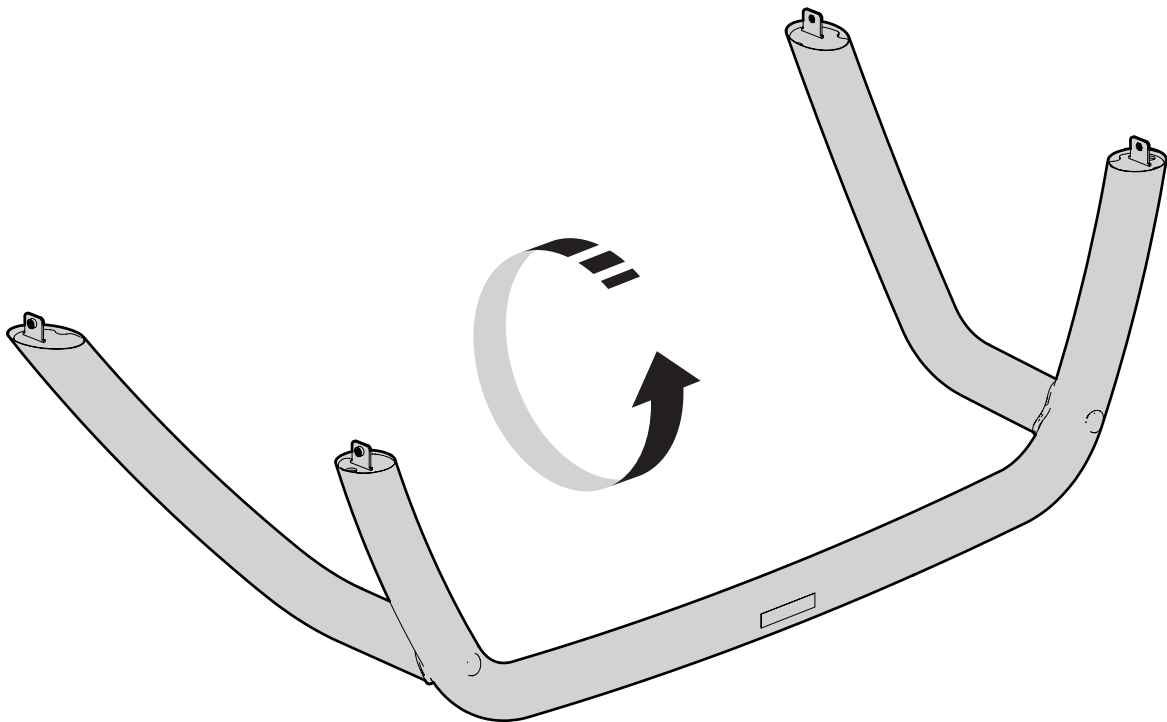




6mm

23Nm


5

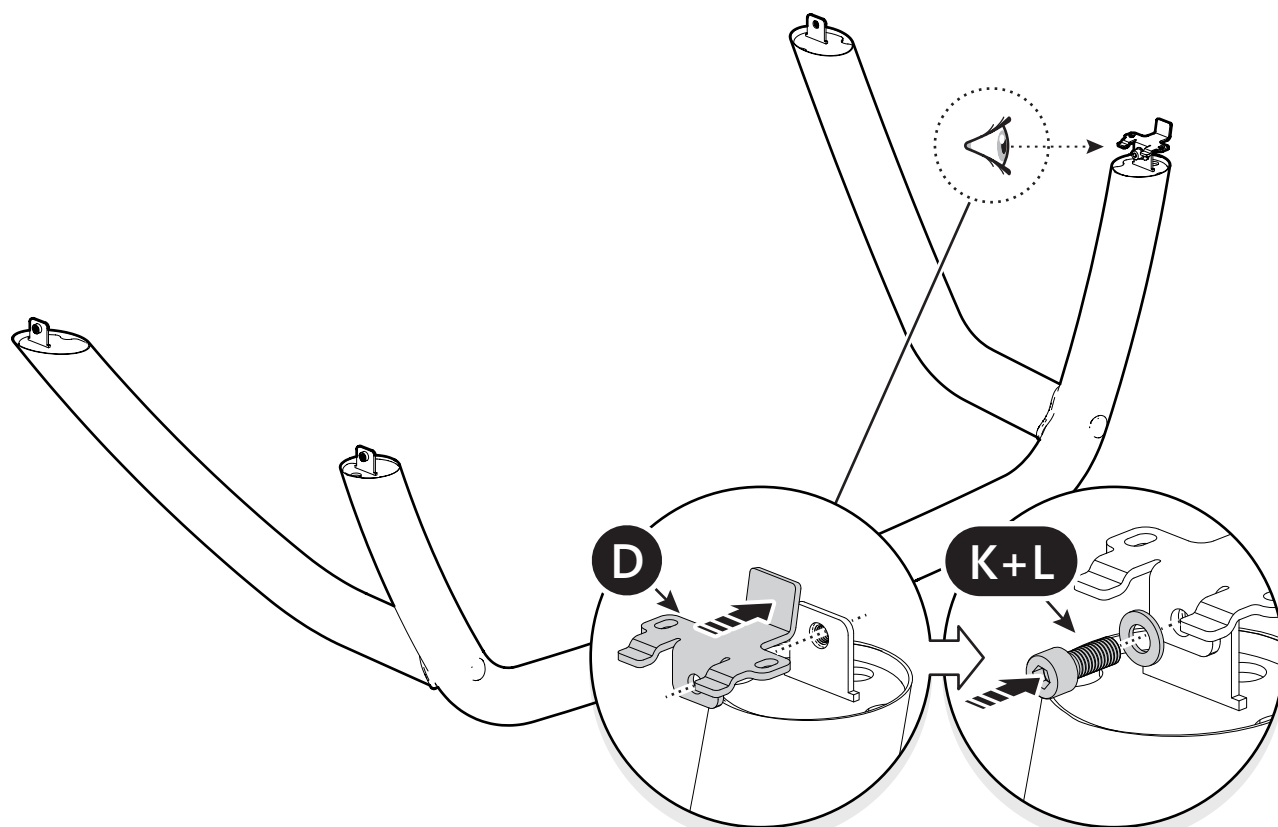

6mm

23Nm

6

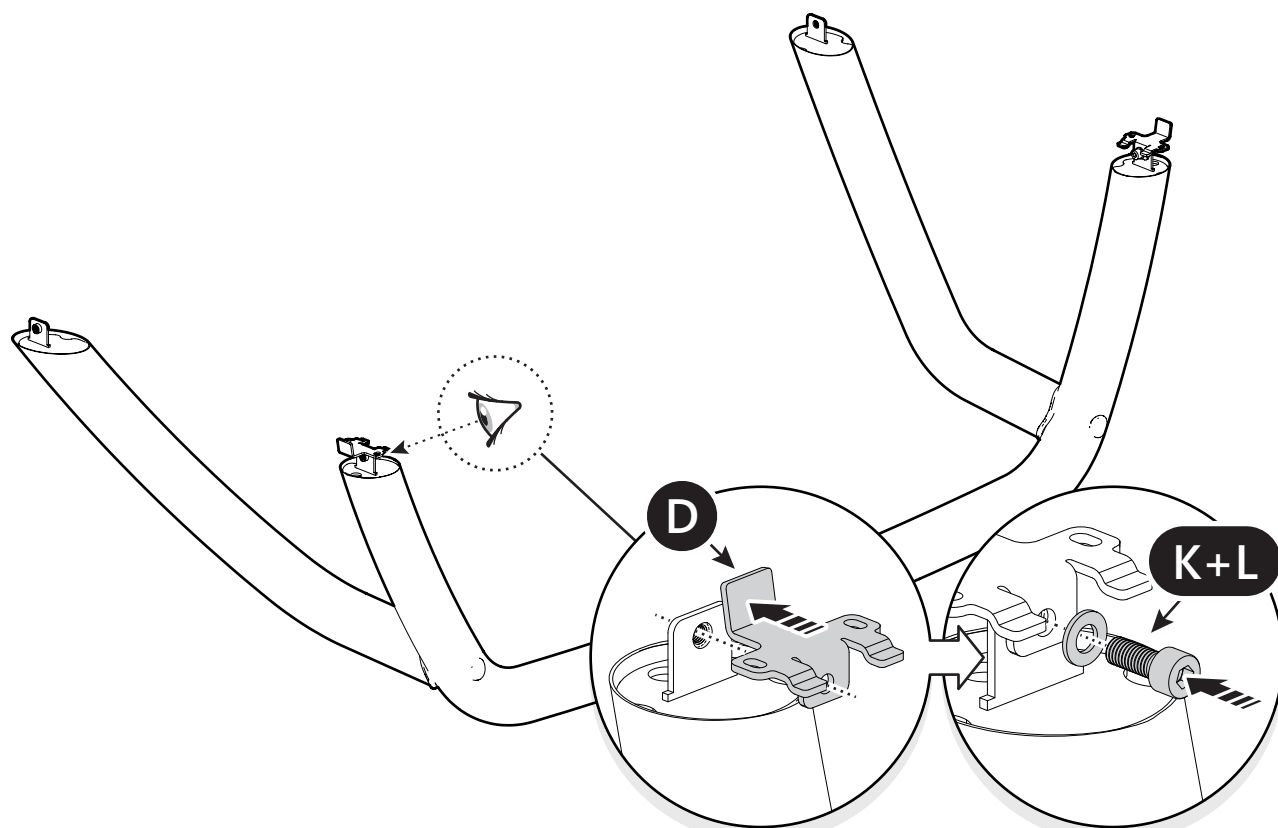




6mm

23Nm


7


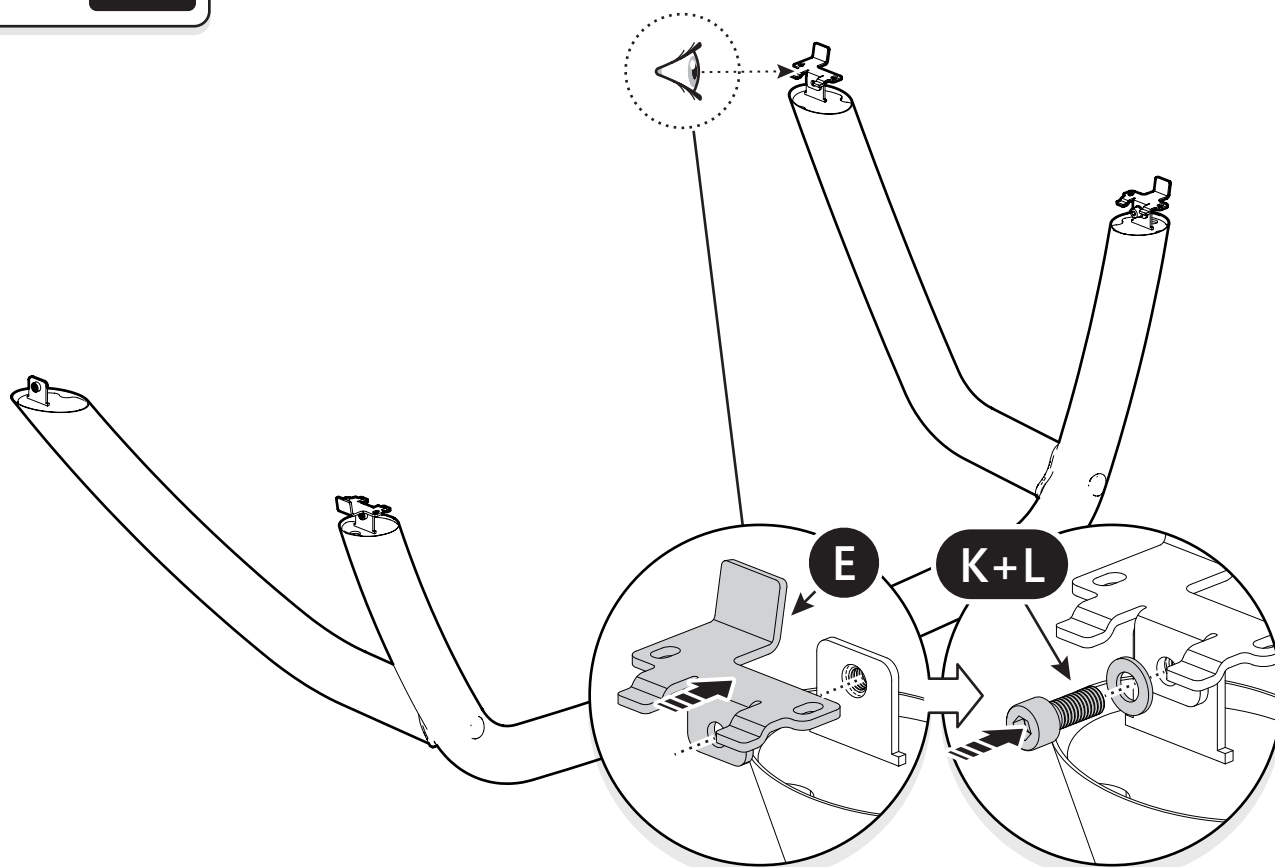


6mm


23Nm

8

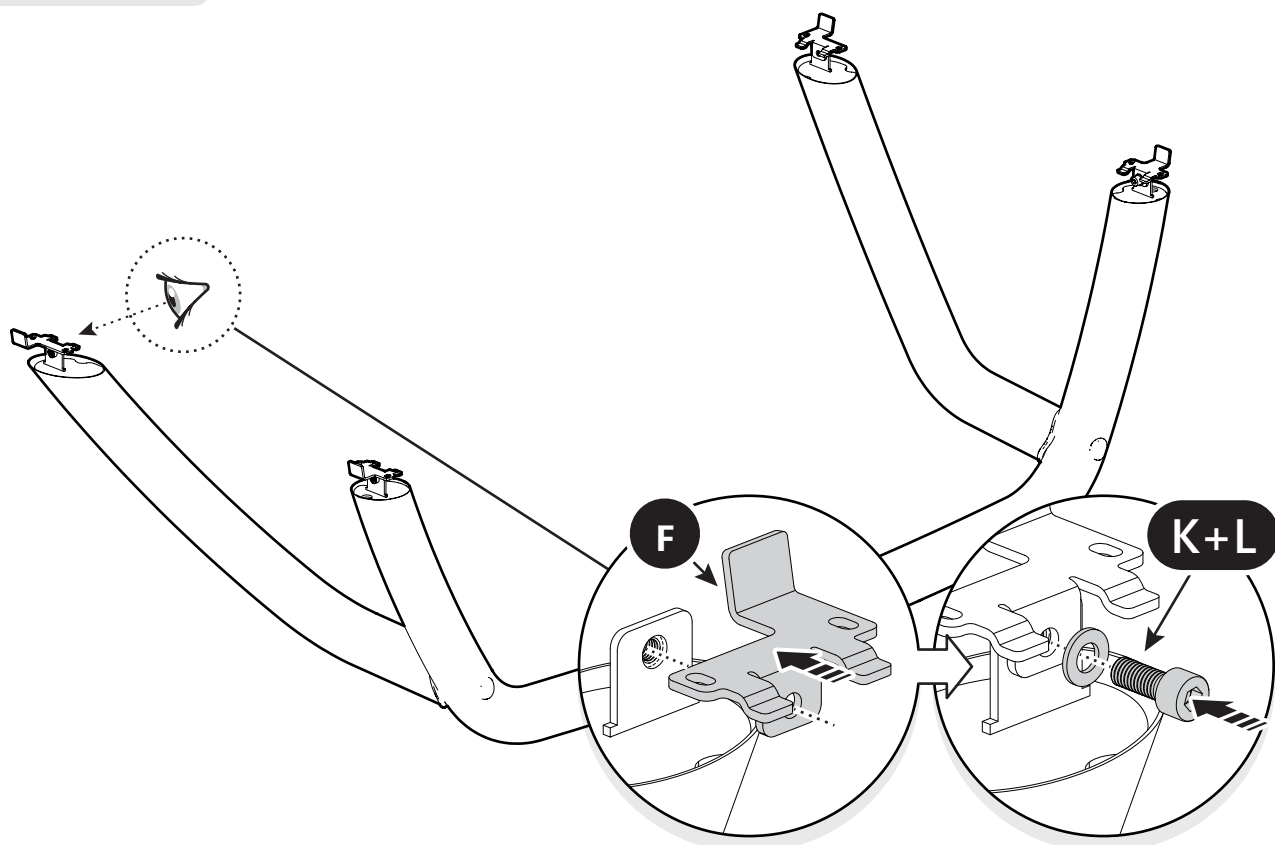


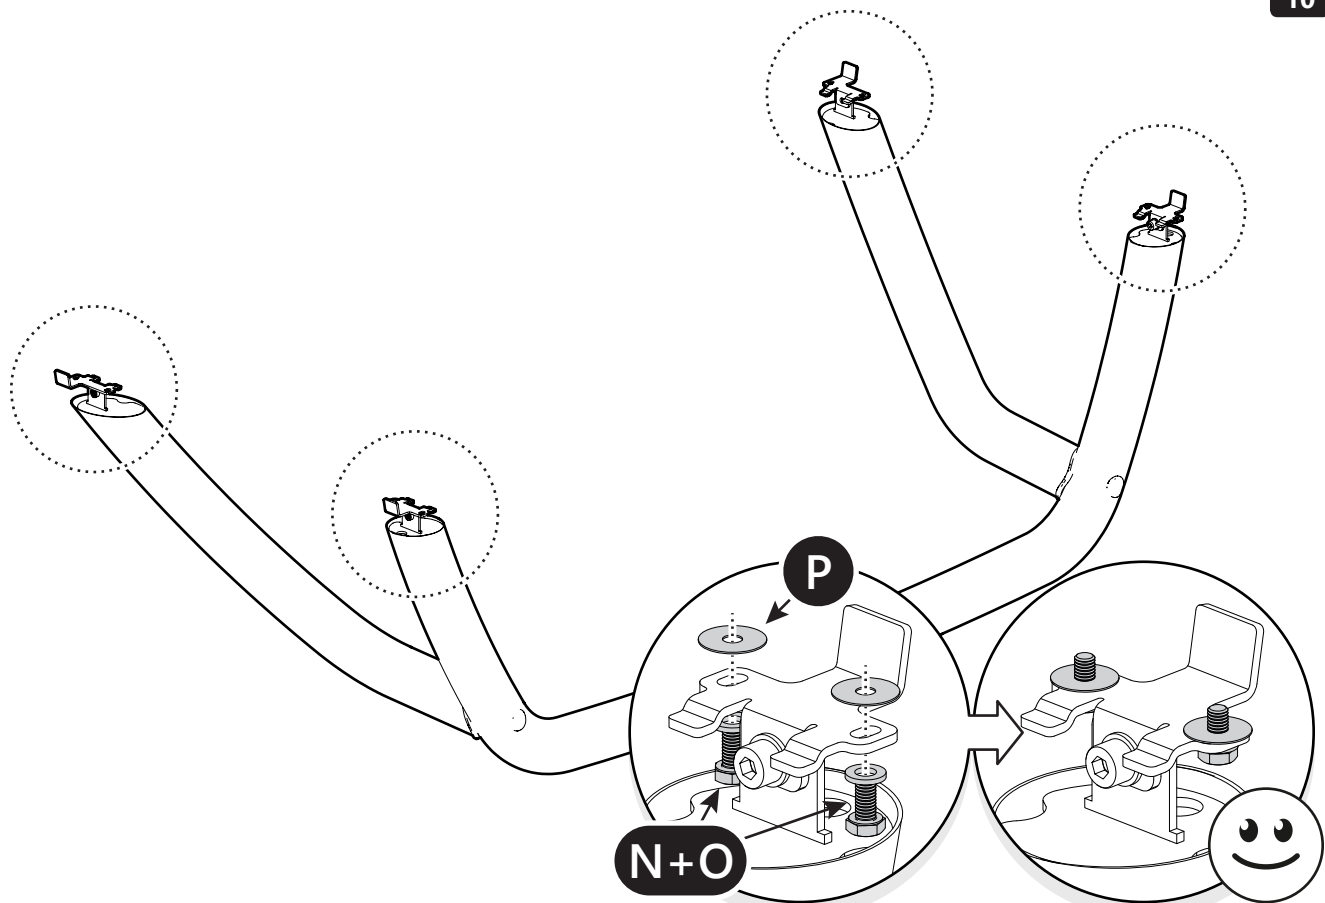
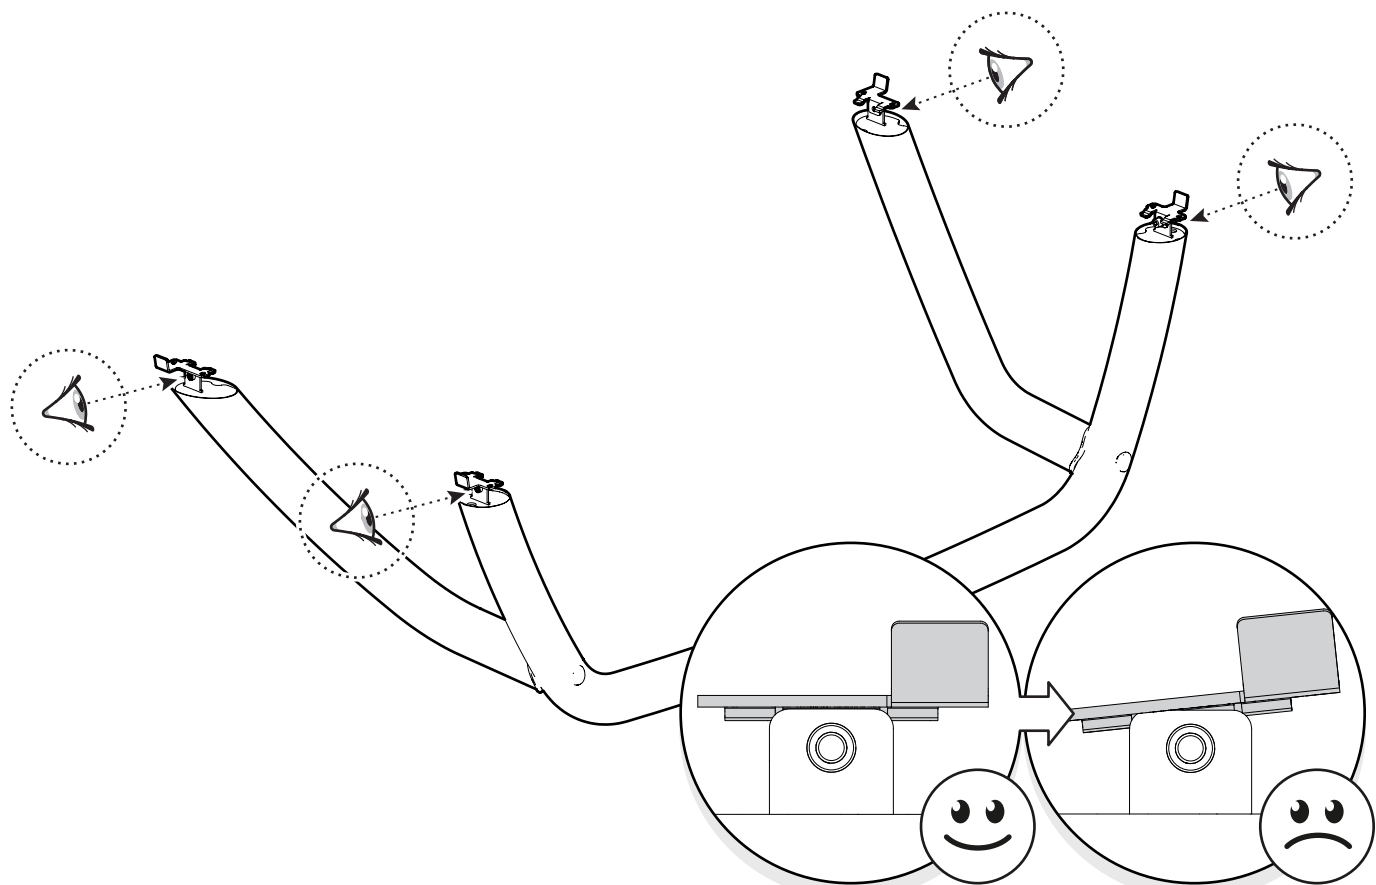


11

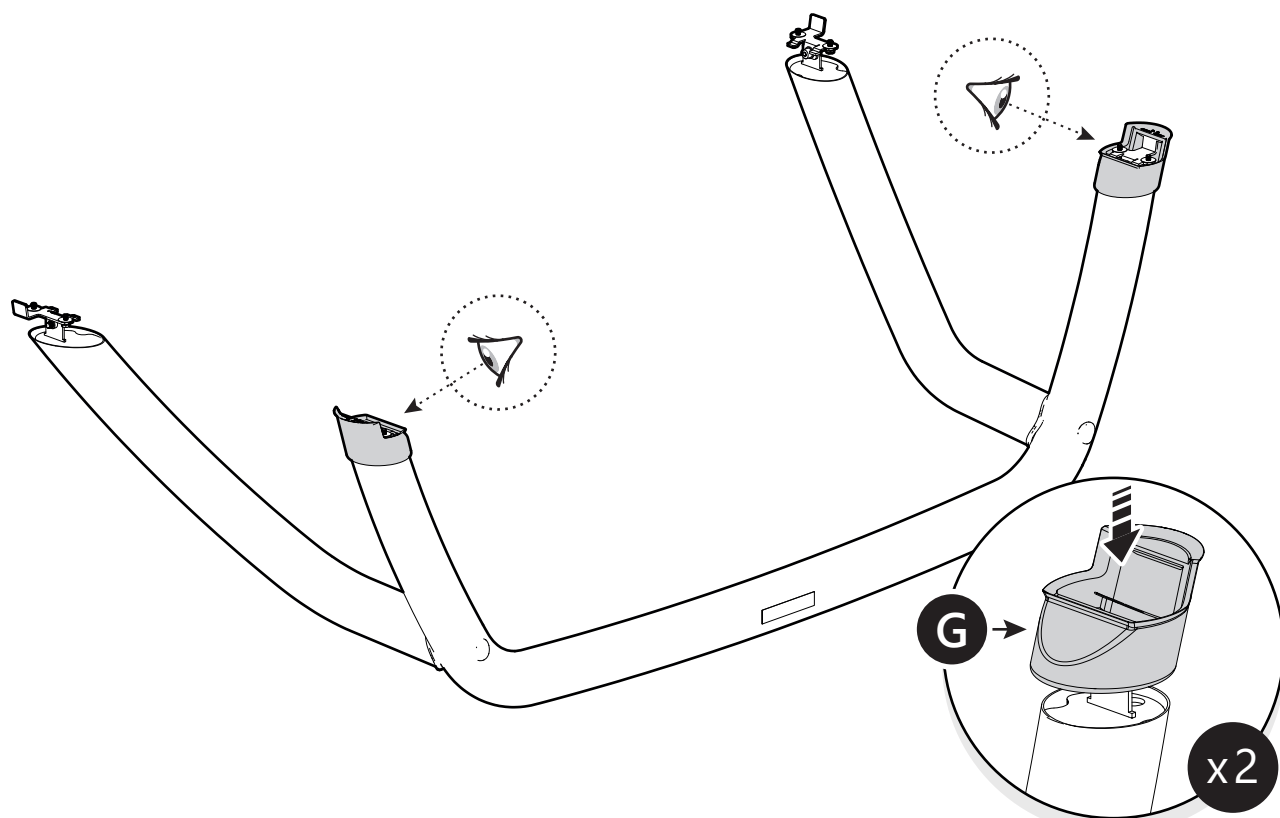


12

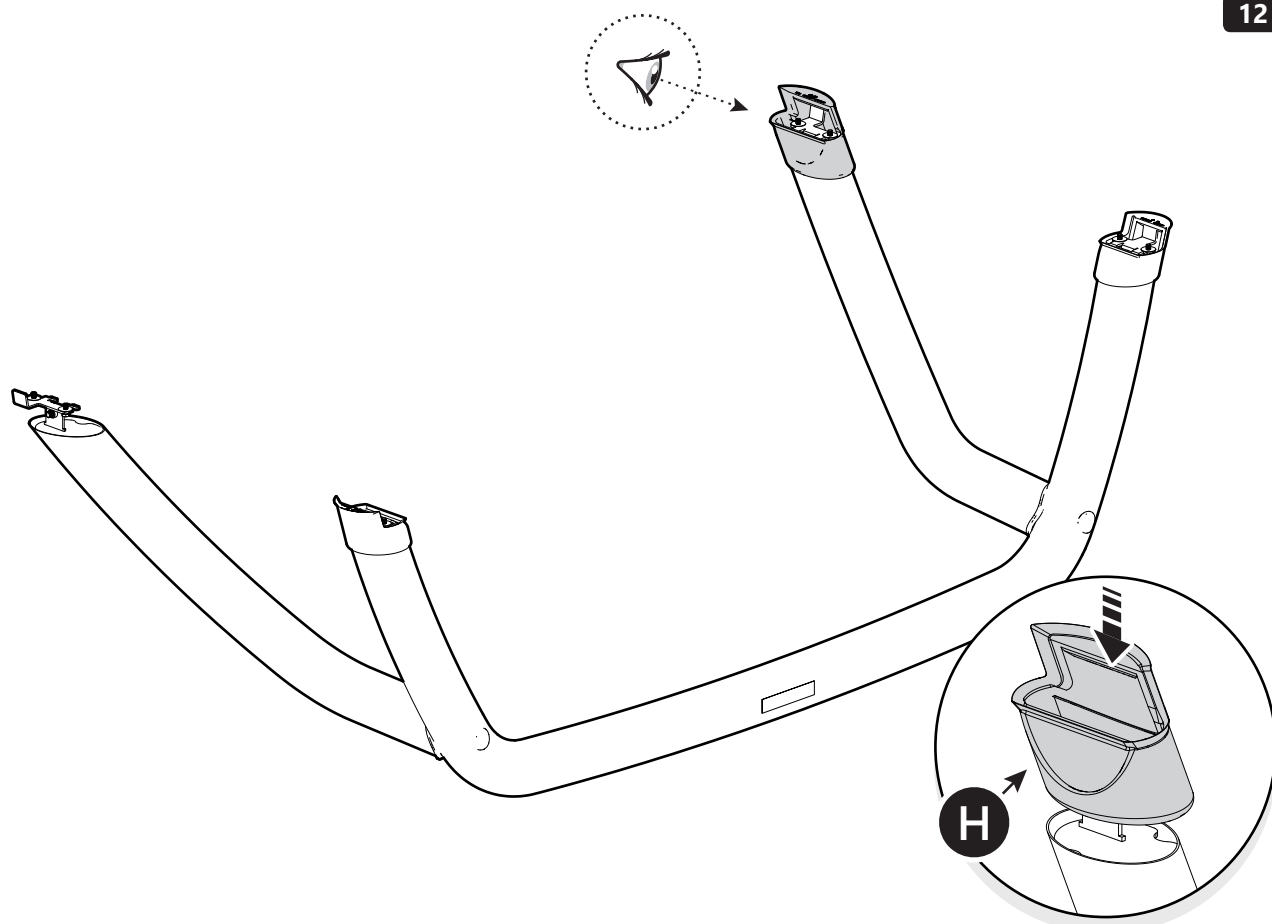


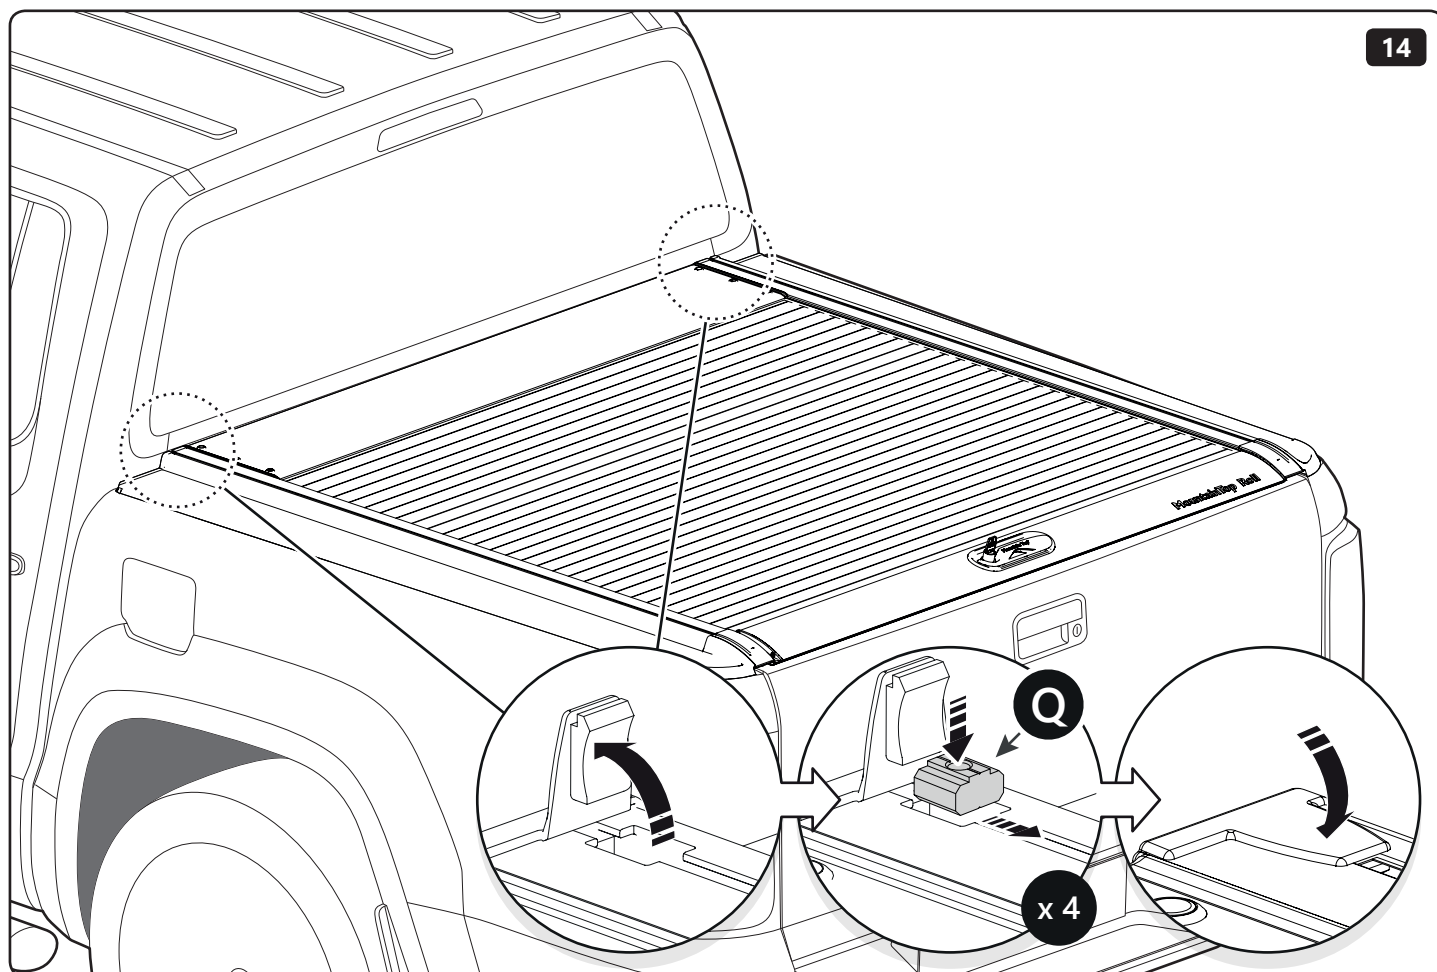
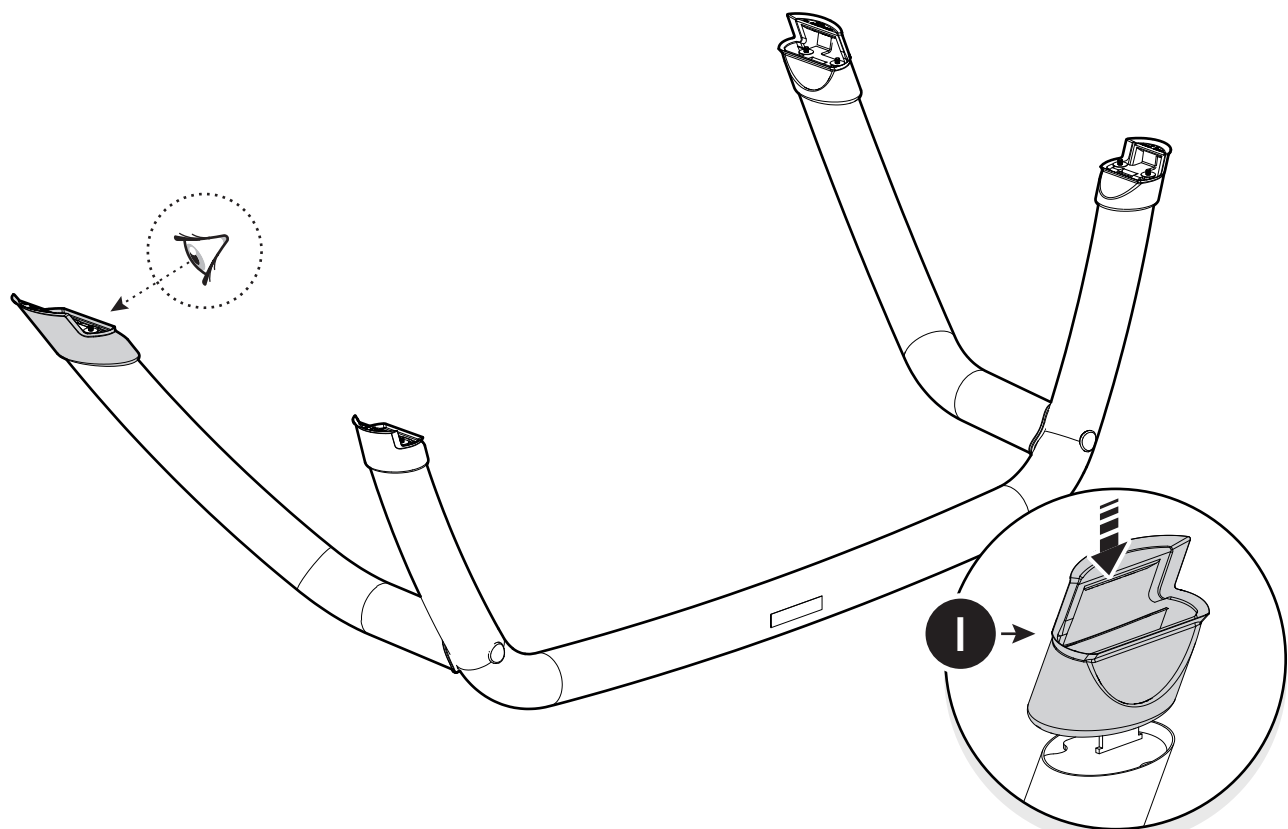


15

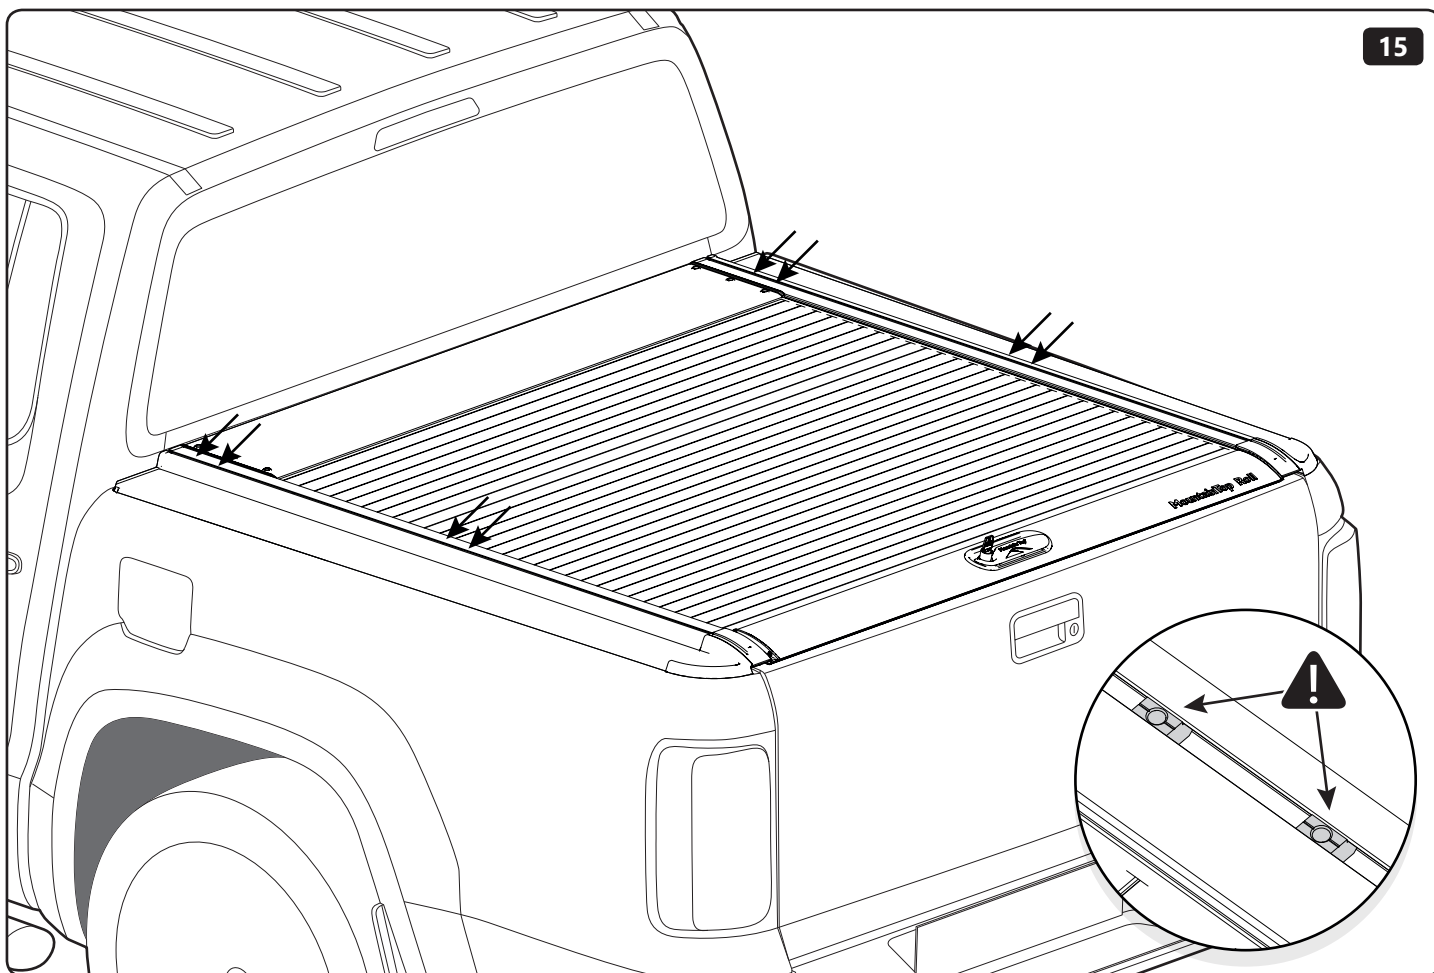

16

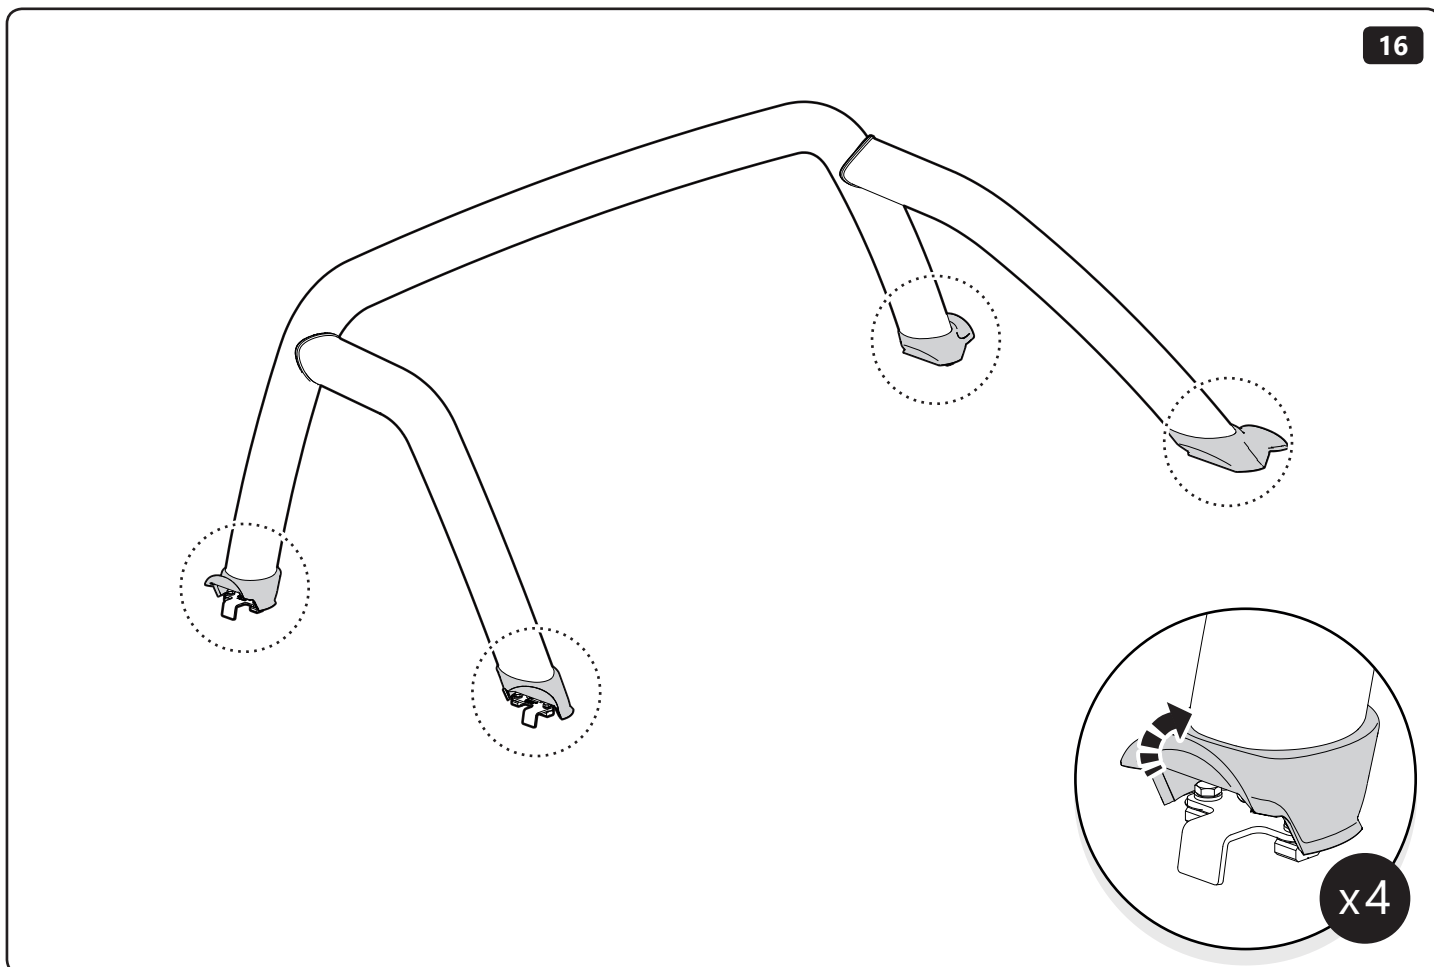

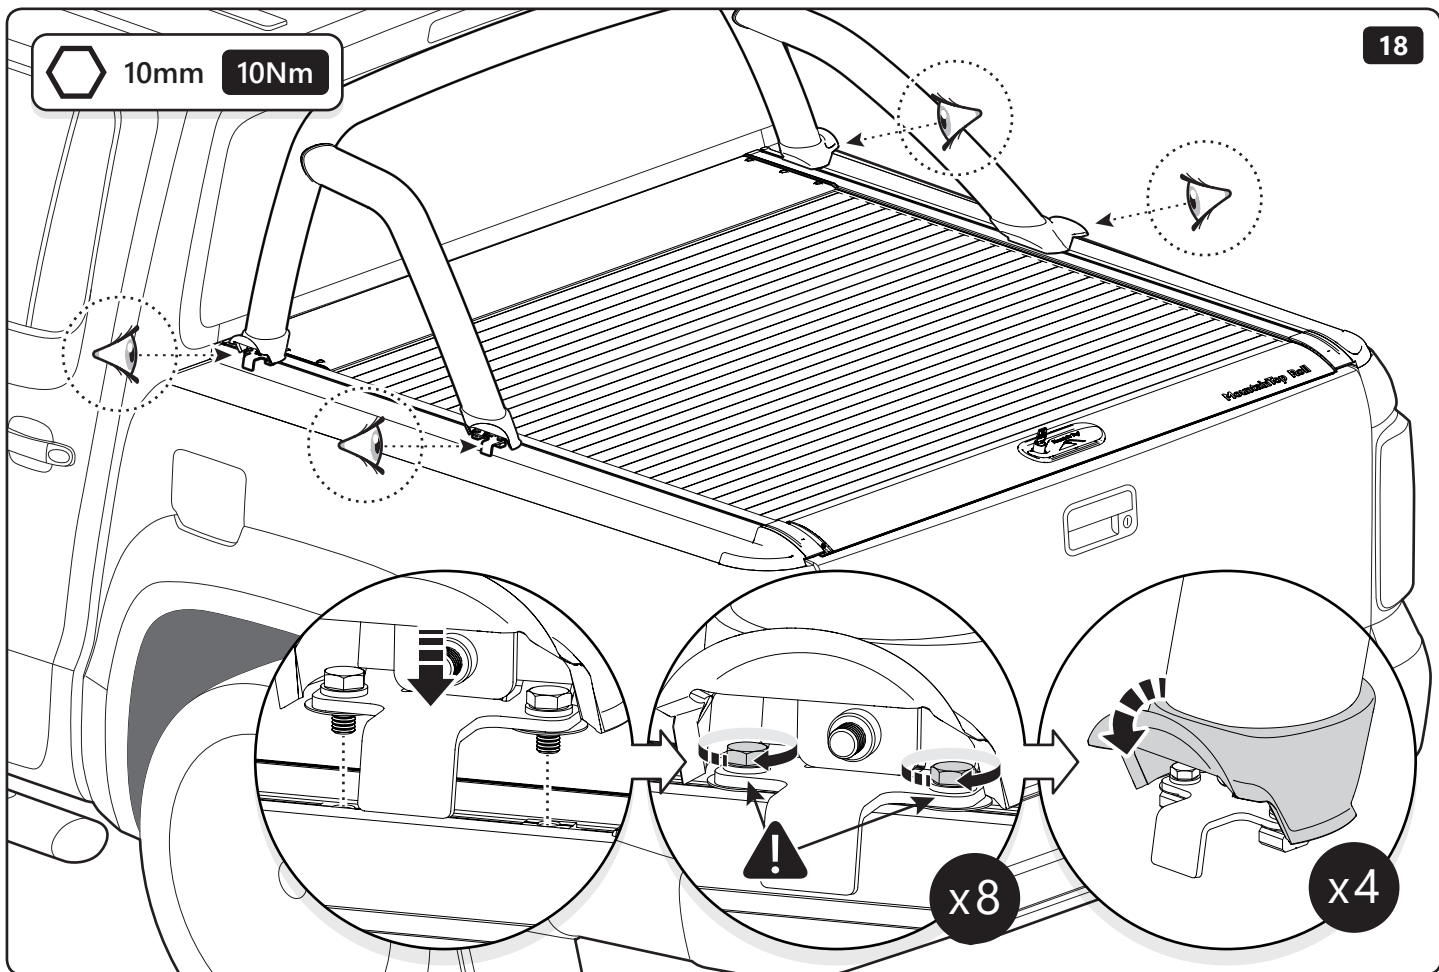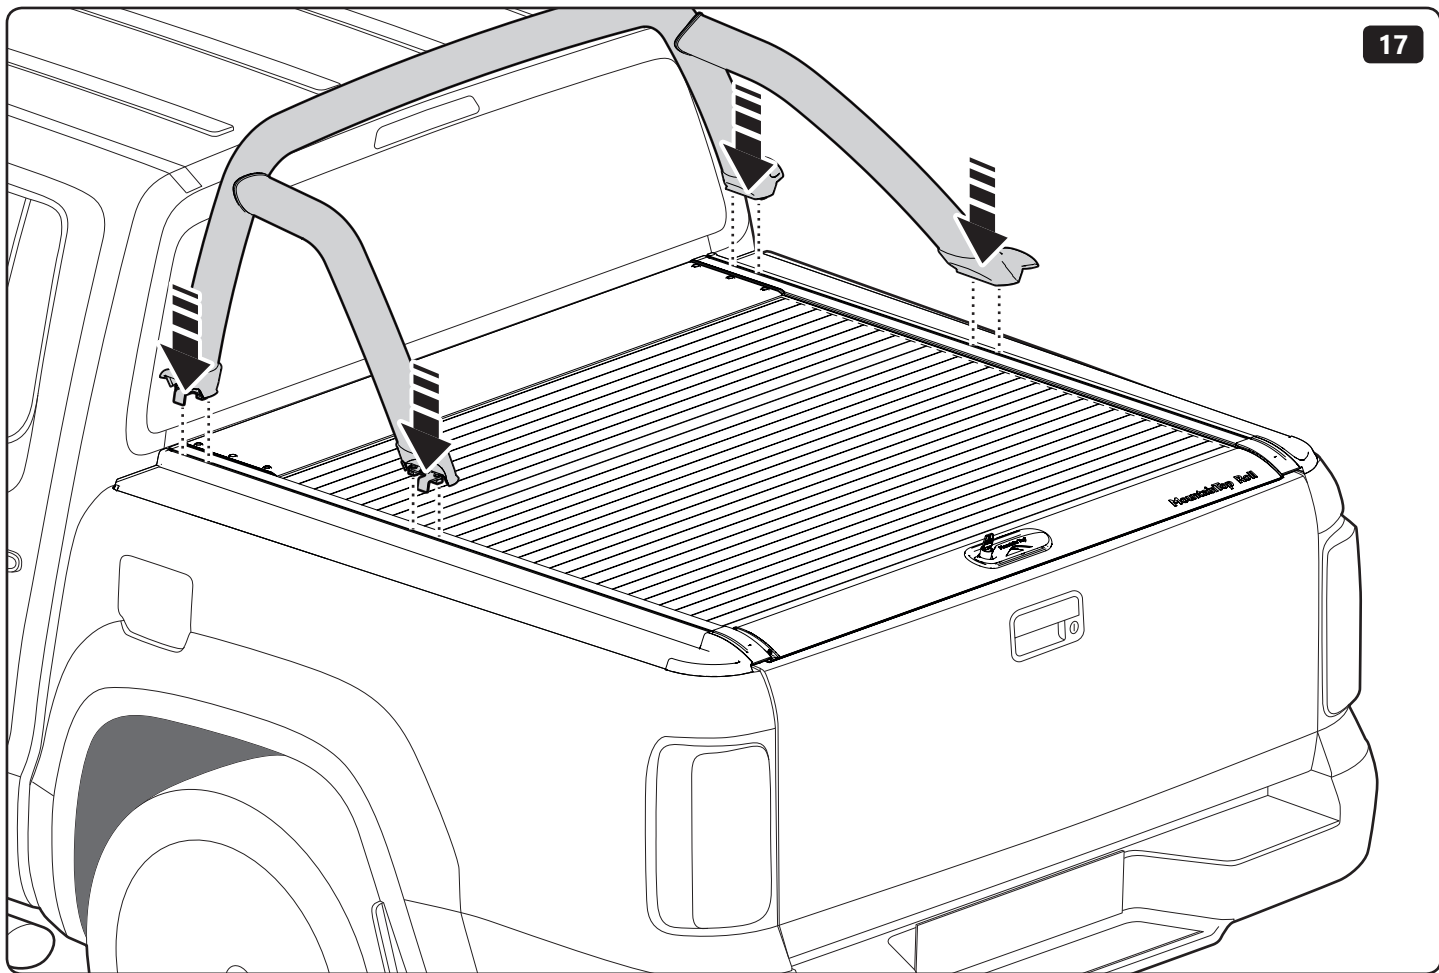



Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Fax	+45 4810 2960
Support	info@mountaintop.dk
Website	www.mountaintop.dk
Address	Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
SB SS90 P01	Ssangyong / 2018 →	Double Cab	1 hour(s)	10 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare